

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS, SC running change; iQ new model; Avensis Full Model Change

Fill operation added; Fuel Injection system maintenance added (Lexus IS250, GS300 and LS460 for Croatia only)

GASOLINE ENGINE		MAINTENANCE OPERATIONS												GS450h							
		R: Replace or change or lubricate. F: Fill																			
SERVICE INTERVALS:		ODOMETER READING												Months (): for reference		2GR-FSE (3.5 V6 D4 + Hyb) GWS191					
Odometer reading or months, whichever comes first																06/02 07/09(MC) 08/09					
MAINTENANCE ITEMS																					
Timing Belt		Replace every 150,000 km (90,000 miles)												—							
Valve Clearance (Sensory Inspection)*1														*I (Every 72 months)							
Drive belt		V-ribbed belt		Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)												Initial: 72 and then every 12 months		●			
Engine oil (API: SH, SJ) (ILSAC)		Normal		R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months			
		Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months			
Engine oil (API: SJ, SL) (ILSAC)		Normal		R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months			
		Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months			
Engine oil (API: SL, SM) (ILSAC)		Normal		R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months	●		
		Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●		
Engine oil filter		Normal		R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months	●		
		Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●		
Cooling and heater system *2														I		Every 24 months		●			
Engine coolant		LLC (red/green) *3														R		Initial: 36 months			
		S-LLC (pink) *4														I		I		●	
		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)														●					
Inverter coolant		S-LLC (pink) *4														I		I		●	
		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)														●					
Exhaust pipes and mountings														I		I		●			
Spark plugs		Platinum or Iridium Tipped type		Replace every 90,000 km (54,000 miles)												—		●			
		Others														I		R		I: Every 24 months R: Every 48 months	
Battery		No maintenance												—							
Fuel filter (Aygo only)		Replace every 180,000 km (108,000 miles)												15 years							
Fuel injection system		F F F F F F												—							
Air cleaner filter (from October 2002, applicable to all models in production)		Normal		I	I	I	R	I	I	I	I	I	I	I	I	I	I: Every 24 months R: Every 48 months	●			
		Dusty road		I	I	I	I	I	R	I	I	I	I	I	I	I	I: Every 12 months R: Every 48 months	●			
Air cleaner filter		Normal		I	I	R	I	I	I	I	I	I	I	I	R	I	I: Every 24 months R: Every 48 months				
		Dusty road		Inspect every 2,500 km(1,500 miles) and replace every 45,000 km(27,000 miles) or 48 months.												—					
Fuel tank cap, fuel lines, connections and fuel vapor control valve														I		I		●			
														I		—		●			
Charcoal canister		*5														I		I		●	
		Others														I		I		●	
		Aygo only														I		I		●	
		Normal														I		—			
		Severe														I		I		●	
Charcoal canister filter		Aygo only														R		R		●	
		Normal														R		—			
		Severe														R		R		●	

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: For Sweden, Norway and Finland only.

*6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820) or equivalent

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change

Aygo 1.0p Clutch mechanism: Inspection interval shortened; Clutch fluid Replacement added for new MMT's; Toyota Genuine CVTF maintenance added for new CVT's

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

Correction: Lexus IS Manual transmission oil changed to "API Gear oil GL-5" only

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
R: Replace or change or lubricate. L: Lubricate

CHASSIS AND BODY 1/2

SERVICE INTERVALS:		ODOMETER READING										Months	LEXUS GS450h GWS191				
Odometer reading or months, whichever comes first																	
× 1,000 km		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90			
MAINTENANCE ITEMS																	
× 1,000 miles		1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54			
Clutch pedal, return spring and damper - Mechanical type			I	I	I	I	I	I	I	I	I	I	I	I			
Brake pedal and parking brake					I	I	I	I	I	I	I	I	I	I	Every 24 months	●	
Brake linings and drums (include brake linings of parking brake)		Normal			I	I	I	I	I	I	I	I	I	I	Every 24 months	●	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●	
Brake pads and discs		Normal	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●	
Clutch fluid		SAE J1703 or FMVSS No. 116 DOT3			I	I	I	I	I	I	I	I	I	I	Every 24 months		
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4				R		R		R		R		R	Every 24 months		
		SAE J1704 or FMVSS No. 116 DOT4				I		I		I		I		I	Every 24 months		
Clutch fluid for auto clutch system					R		R		R		R		R		Every 24 months		
Sequential M/T system fluid					I		I		I		I		I		Every 24 months		
Brake fluid		SAE J1703 or FMVSS No. 116 DOT3			R		R		R		R		R		Every 24 months	●	
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4			R		R		R		R		R		Every 24 months		
		SAE J1704 or FMVSS No. 116 DOT4			R		R		R		R		R		Every 24 months		
Brake pipes and hoses					I		I		I		I		I		Every 24 months	●	
Vacuum pump for brake booster (Diesel engines only)		Ixetic (Luk-AT) or Pierburg Others	Replace every 195,000 km (121,000 miles) or 120 months Inspect every 195,000 km (121,000 miles) or 120 months														
Power steering fluid		AT fluid DEXRON® II or III TOYOTA P.S. fluid EH or equivalent			I		I		I		I		I		Every 24 months		
		Normal			I		I		I		I		I		Every 24 months	●	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●	
Steering wheel, linkage and steering gear box		Normal			I		I		I		I		I		Every 24 months		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●	
SRS airbag *1			Initial inspect at first 120 months from the vehicle registration date.														
Propeller shaft		NLGI No. 1 or No. 2	Normal	L	L	L	L	L	L	L	L	L	L	L	Every 24 months		
		Severe	L	L	L	L	L	L	L	L	L	L	L	L	Every 12 months		
Propeller shaft bolts		Normal			T		T		T		T		T		Every 24 months		
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months		
Drive shaft boots		Normal			I		I		I		I		I		Every 24 months	●	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●	
		Normal	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months		
Drive shaft bolts		Normal			T		T		T		T		T		Every 24 months		
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months		
		Normal	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months		
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	Every 6 months		
Suspension ball joints and dust covers		Normal			I		I		I		I		I		Every 24 months		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●	
		Normal	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●	
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●	
Shift lever of 6-speed manual transmission					I		I		I		I		I				
Automatic transmission fluid		Vehicles produced before July, '99		Normal			I		R		I		I		I: Every 12 months R: Every 48 months		
				Severe	I		R		I		R		I		I: Every 12 months R: Every 24 months		
		Vehicles produced after August, '99		Toyota Genuine ATF type T-IV	Normal			I		I		I		I		Every 36 months	
						Normal			I		I		I		I		Every 48 months
				Severe			I		I		R		I		I: Every 36 months R: Every 72 months		
				Normal			I		I		I		I		I	Every 36 months	
				Normal			I		I		I		I		I	Every 48 months	●
				Severe			I		I		R		I		I: Every 36 months R: Every 72 months	●	
				Normal			I		I		I		I		I	Every 48 months	
				Severe			I		I		R		I		I: Every 36 months R: Every 72 months		
		Other	Normal			I		I		R		I		I: Every 36 months R: Every 72 months			
		Severe			I		R		I		R		I: Every 18 months R: Every 36 months				
Manual transmission oil and transfer oil if so equipped (Including auto clutch system)		API Gear oil GL-5		Normal			I		I		I		I		Every 48 months		
				Severe			I		R		I		I		Every 48 months		
		API Gear oil GL-4 or GL-5		Normal			I		I		I		I		I	Every 48 months	
				Severe			I		I		I		I		I	Every 48 months	
		LV Gear oil API GL-4		Normal			I		I		I		I		I	Every 48 months	
				Severe			I		R		I		I		Every 48 months		
		Other (GL-4 or GL-5)		Normal			I		I		I		I		I	Every 48 months	
				Severe			R		R		R		R		Every 48 months		
				Normal			I		I		I		I		I	Every 48 months	
				Severe			R		R		R		R		Every 48 months		
Transfer oil		API Gear oil GL-4 or GL-5		Normal			I		I		I		I		Every 48 months		
				Severe			R		R		R		R		Every 48 months		
		API Gear oil GL-5		Normal			R		R		R		R		Every 48 months		
				Severe			R		R		R		R		Every 48 months		
		Toyota Genuine Differential Oil LX85 (APL GL-5)		Normal			I		I		I		I		I	Every 48 months	
				Severe			R		R		R		R		Every 48 months		
		Toyota Genuine ATF WS		Normal			I		I		I		I		I	Every 48 months	
				Severe			I		R		I		R		I: Every 36 months R: Every 72 months		

*1: After 120 months from the vehicle registration date, inspect every 24 months.

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH until JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model

Fr diff. oil: "Toyota Genuine CVTF TC" added for New Avensis

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary.

T: Tighten to specified t T: Tighten to specified torque.

R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS:				ODOMETER READING																LEXUS						
Odometer reading or months, whichever comes first																				GS300	GS430					
				× 1,000 km																GRS190						
MAINTENANCE ITEMS				1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	UZS191				
																				05/01	06/08					
Front Differential oil	Differential integrated with transmission	M/T model	LV Gear oil API GL-4	Normal								I									I	Every 48 months				
			Severe											R								R	Every 48 months			
		A/T model	API Gear oil GL-4 or GL-5	Normal										I								I	Every 48 months			
				Severe											R								R	Every 48 months		
			WS	Normal											I								I	Every 24 months		
				Severe												I								R	I: Every 24 months R: Every 48 months	
	T-IV	Normal											I								I	Every 24 months				
		Severe												I								R	I: Every 24 months R: Every 48 months			
	Toyota Genuine CVTF TC	Normal											I								I	Every 24 months				
		Severe												I								R	I: Every 24 months R: Every 48 months			
Differential separated from transmission (API Gear oil GL-5)	Normal					I						R								I	I: Every 12 months R: Every 48 months					
	Severe						R						R								R	R: Every 24 months				
Rear differential oil	API Gear oil GL-5	Normal										R								I	I: Every 12 months R: Every 48 months					
		Severe						R						R							R	Every 24 months				
	A/T fluid WS	Normal											I								I	I: Every 12 months R: Every 48 months	●	●		
		Severe												I								R	I: Every 24 months R: Every 48 months			
Wheel bearing grease (tapered roller type wheel bearing only)	NLGI No. 2							R					R								R	Every 12 months				
Front and rear suspension	Normal												I								I	Every 12 months	●	●		
	Severe												I								I	Every 6 months	●	●		
	Normal												I								I	Every 6 months				
	Severe												I								I	Every 3 months				
Active height control suspension fluid - Suspension fluid AHC or equivalent	Replace every 100.000 km																—									
Active height control gas chamber													I								I	I: initial 48 months; then every 12 months				
Bolts and nuts on chassis and body	Severe only			T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 6 months	●	●		
Tires and inflation pressure				I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●	●		
Lights, horn, wipers and washers				I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●	●		
Particle filter	Pollen removal type	Normal			C	C	R	C	R	C	C	R	C	C	R	C	C	R	C	C	22	●				
		Severe			C	C	R	C	C	R	C	C	R	C	C	R	C	C	R	C	C	22	●			
	Standard type	Normal											R								R					
		Severe					R						R								R					
	Semi-standard type	Normal & Severe											R								R					
		Normal											R								R					
High efficiency type	Normal					R						R								R						
	Severe						R					R								R						
Combination filter	High efficiency type	Normal & Severe			R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	23					
Air conditioner refrigerant amount													I								I	Every 12 months	●	●		

*3: Customers should inspect by themselves

22: White filter marked "P" on vehi
23: Black filter on vehicles up to J.

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH** until **JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model

Fr diff. oil: "Toyota Genuine CVTF TC" added for New Avensis

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified t T: Tighten to specified torque.
R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS:			ODOMETER READING																LEXUS GS450h				
Odometer reading or months, whichever comes first																			GWS191				
			× 1,000 km																06/02 07/09 08/09				
MAINTENANCE ITEMS			1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months			
Front Differential oil	M/T model	LV Gear oil API GL-4	Normal								I									I	Every 48 months		
			Severe								R									R	Every 48 months		
		API Gear oil GL-4 or GL-5	Normal									I									I	Every 48 months	
			Severe									R									R	Every 48 months	
	A/T model	WS	Normal									I									I	Every 24 months	
			Severe									I									R	I: Every 24 months R: Every 48 months	
		T-IV	Normal										I								I	Every 24 months	
			Severe										I								R	I: Every 24 months R: Every 48 months	
	Toyota Genuine CVTF TC		Normal									I									I	Every 24 months	
			Severe									I									R	I: Every 24 months R: Every 48 months	
Differential separated from transmission (API Gear oil GL-5)		Normal				I					R				I					R	I: Every 12 months R: Every 48 months		
		Severe				R					R				R					R	R: Every 24 months		
						I					R				I					R	I: Every 12 months R: Every 48 months		
Rear differential oil	API Gear oil GL-5		Normal				I				R				I					R	I: Every 12 months R: Every 48 months		
			Severe				R				R				R					R	Every 24 months		
	A/T fluid WS		Normal									I								I	Every 24 months	●	
			Severe										I							R	I: Every 24 months R: Every 48 months		
Wheel bearing grease (tapered roller type wheel bearing only)	NLGI No. 2						R				R				R				R	Every 12 months			
Front and rear suspension	Normal						I				I				I					I	Every 12 months	●	
			Severe			I	I		I	I		I	I		I	I		I	I		I	Every 6 months	●
	Normal						I				I				I					I	Every 6 months		
			Severe			I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 3 months	
Active height control suspension fluid - Suspension fluid AHC or equivalent	Replace every 100.000 km																		—				
Active height control gas chamber																			I: initial 48 months; then every 12 months				
Bolts and nuts on chassis and body	Severe only				T	T		T	T		T	T		T	T		T	T		T	Every 6 months	●	
Tires and inflation pressure					I	I		I	I		I	I		I	I		I	I		I	Every 6 months	●	
Lights, horn, wipers and washers					I	I		I	I		I	I		I	I		I	I		I	Every 6 months	●	
Particle filter	Pollen removal type	Normal			C	C		R	C		C	C		R	C	C		R	C	C		●	
		Severe			C	C	R	C		C	R	C	C		R	C	C	R	C	C	R	C	●
	Standard type	Normal									R									R			
		Severe					R				R				R					R			
	Semi-standard type	Normal & Severe									R									R			
		Normal									R									R			
High efficiency type	Normal							R											R				
	Severe							R							R				R				
Combination filter	High efficiency type	Normal & Severe			R	R		R	R		R	R		R	R		R	R		R	R		
Air conditioner refrigerant amount			Replace when the service indicator light illuminates																Every 12 months	●			

*3: Customers should inspect by themselves

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH until JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avenis new model.

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

A/T fluid: "Toyota Genuine CVTF TC" added for New Avenis

MAINTENANCE OPERATIONS

I: Inspect and correct I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

R: Replace or change R: Replace or change or lubricate. L: Lubricate

CHASSIS AND BODY 1/2

SERVICE INTERVALS:		ODOMETER READING										LEXUS GS450h								
Odometer reading or months, whichever comes first												GWS191								
		× 1,000 km																		
		1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	
MAINTENANCE ITEMS												06/02 07/09 08/09								
Clutch pedal		No maintenance																		
Clutch pedal return spring and damper		Aygo only																		
Brake pedal and parking brake		I I I I I I I I I I										Every 6 months ●								
Brake linings and drums (Include brake linings of parking brake)		Normal I I I I I I I I I I										Every 12 months ●								
		Severe I I I I I I I I I I										Every 6 months ●								
Brake pads and discs		Normal I I I I I I I I I I										Every 6 months ●								
		Severe I I I I I I I I I I										Every 3 months ●								
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3	I I I I R I I I I I										I: Every 6 months R: Every 24 months ●								
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4	I I I I R I I I I I										I: Every 6 months R: Every 24 months								
	SAE J1704 or FMVSS No. 116 DOT4	I I I I R I I I I I										I: Every 6 months R: Every 24 months								
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3	I I I I I I I I I I										Every 6 months								
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4	I I I I R I I I R										I: Every 6 months R: Every 24 months								
	SAE J1704 or FMVSS No. 116 DOT4	I I I I I I I I I I										Every 6 months								
Brake pipes and hoses		Normal I I I I I I I I I I										Every 12 months ●								
		Severe I I I I I I I I I I										Every 6 months ●								
Vacuum pump for brake booster (Diesel engines only)		Luk-AT or Pierburg Others										Replace every 195,000 km (121,000 miles) or 120 months Inspect every 200,000 km								
Power steering fluid		A/T fluid DEXRON® II or III										I I I I I I I I I I		Every 6 months						
Steering wheel, linkage and steering gear box		Normal I I I I I I I I I I										Every 12 months ●								
		Severe I I I I I I I I I I										Every 6 months Every 3 months ●								
Front wheel alignment (side slip)		I										Every 48 months								
SRS airbag *1		Initial inspect at first 120 months from the vehicle registration date.																		
Steering knuckle, drag link, kingpin, center arm and steering linkage grease		NLGI No. 2										R R R R R R R R R R R R R R		Every 3 months						
Propeller shaft		NLGI No. 2										Normal L L L L L L L L L L		Every 6 months						
		Severe L L L L L L L L L L										Every 6 months								
Tightening bolts for propeller shaft		Normal T T T T T T T T T T										Every 12 months								
		Severe T T T T T T T T T T										Every 6 months								
		Normal T T T T T T T T T T										Every 6 months								
		Severe T T T T T T T T T T										Every 3 months								
Drive shaft boots		Normal I I I I I I I I I I										Every 24 months ●								
		Severe I I I I I I I I I I										Every 12 months ●								
Tightening bolts for drive shaft		Normal T T T T T T T T T T										Every 24 months								
		Severe T T T T T T T T T T										Every 12 months								
		Normal T T T T T T T T T T										Every 6 months								
		Severe T T T T T T T T T T										Every 3 months								
Suspension ball joints and dust covers		Normal I I I I I I I I I I										Every 12 months ●								
		Severe I I I I I I I I I I										Every 6 months ●								
Shift lever for 6-speed manual transmission		I I I I I I I I I I										--								
Automatic transmission fluid	WS	Normal I I I I I I I I I I										Every 24 months ●								
		Severe I I I I I I I I I I										R Every 48 months ●								
	T-IV	Normal I I I I I I I I I I										Every 24 months								
		Severe I I I I I I I I I I										R Every 48 months								
	Toyota Genuine CVTF TC	I I I I I I I I I I										I Every 24 months								
		I I I I I I I I I I										R Every 48 months								
A/T fluid D-II or DEXRON III	Normal I I I I I I I I I I										R Every 48 months									
	Severe I I I I I I I I I I										R Every 12 months R: Every 24 months									
Manual transmission oil	LV Gear oil API GL-4	Normal I I I I I I I I I I										Every 48 months								
		Severe I I I I I I I I I I										R Every 48 months								
	API Gear oil GL-4 or GL-5	Normal I I I I I I I I I I										Every 48 months								
		Severe I I I I I I I I I I										R Every 48 months								
	API Gear oil GL-5	Normal I I I I I I I I I I										Every 48 months								
		Severe I I I I I I I I I I										R Every 48 months								
Transfer oil	Gear oil API GL-4 or GL-5	Normal I I I I I I I I I I										Every 48 months								
		Severe I I I I I I I I I I										R Every 48 months								
	Gear oil API GL-5	Normal I I I I I I I I I I										Every 48 months								
		Severe I I I I I I I I I I										R Every 48 months								
	Gear oil API GL-5	Normal I I I I I I I I I I										Every 48 months								
		Severe I I I I I I I I I I										R Every 24 months								
	Toyota Genuine Differential Oil LX85 (API GL-5)	Normal I I I I I I I I I I										Every 12 months R: Every 48 months								
		Severe I I I I I I I I I I										R Every 24 months								
	Toyota Genuine ATF WS	Normal I I I I I I I I I I										Every 24 months								
		Severe I I I I I I I I I I										R Every 48 months								

*1: After 120 months from the vehicle registration date, inspect every 24 months.

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH** until **JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of TMMF Yaris, LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis Full Model Change Fuel Injection Cleaner added on Avensis 1AZ and 2AZ

MAINTENANCE OPERATIONS
 I: Inspect and correct or replace as necessary
 R: Replace or change or lubricate.
 F: Fill

GASOLINE ENGINE

SERVICE INTERVALS: Odometer reading or months, whichever comes first		× 1,000 km	ODOMETER READING																Months () : for reference	LEXUS GS450h 2GR-FSE 3.5 V6 D4 + Hyb) GWS191 06/02 07/09(MC) 08/09		
			1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75			80	
MAINTENANCE ITEMS																						
Timing Belt			Replace every 150,000 km																—			
Valve Clearance	Sensory Inspection *1																	I	Every 96 months			
Drive belts					I				I									I	Every 24 months	●		
Engine oil (API: SJ, SL) (ILSAC)	Normal				R	R			R	R								R	R	Every 12 months		
	Severe				R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	
Engine oil (API: SL, SM) (ILSAC)	Normal				R	R			R	R								R	R	Every 12 months	●	
	Severe				R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●
Engine oil filter					R	R			R	R								R	R	Every 12 months	●	
					R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●
Cooling and heater system *2			First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																	●		
Engine coolant	S-LLC (pink) *4																	I	I	Every 24 months	●	
			First replace at 160,000 km; after, every 80.000 km																	●		
Inverter coolant	S-LLC (pink) *4																	I	I	Every 24 months	●	
			First replace at 160,000 km; after, every 80.000 km																	●		
Exhaust pipes and mountings					I				I									I	I	Every 12 months	●	
Spark plugs	Platinum or Iridium Tipped type		Replace every 100,000 km																—	●		
	Others										R							R	R	Every 48 months		
Battery					I	I			I	I								I	I	Every 12 months	●	
Fuel filter (including the filter in the fuel tank)																		R	R	Every 96 months	●	
	Aygo only										R							R	R	Every 48 months		
Fuel injection system *5					F	F	F	F	F	F	F	F	F	F	F	F	F	F	F	--	●	
			When the "Injector Maintenance Required" message is displayed on the multi-information display																			
Air cleaner filter (including checking pre-air cleaner if equipped)	Paper type	Normal							I									R	R	I: Every 24 months R: Every 48 months	●	
		Dusty road	Inspect every 2,500km/3months and replace every 40,000km/48months.																	●		
	Normal								I									R	R	I: Every 24 months R: Every 48 months		
	Dusty road			I	I				I	R			I	I				I	R	I: Every 24 months R: Every 48 months		
TNF (Thin Non-woven Fabrics) type	Normal	Inspect every 10,000km/12months and replace every 100,000km/120months.																				
	Dusty road	Inspect every 5,000km/6months and replace every 100,000km/120months.																				
Fuel tank cap, fuel lines, connections and fuel vapor control valve			First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																	●		
Charcoal canister																		I	I	Every 24 months	●	
	Aygo only																	R	R	I: Every 24 months R: Every 48 months		
Charcoal canister filter		Aygo only																I	R	I: Every 24 months R: Every 48 months		

*1: Check for tappet noise and engine vibration and adjust if necessary.
 *2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary
 *4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)
 *5: Toyota genuine fuel injector cleaner (P/N 08813-00820) or equivalent

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avenis new model.

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

A/T fluid: "Toyota Genuine CVTF TC" added for New Avenis

I: Inspect and correct I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

CHASSIS AND BODY 1/2

R: Replace or change R: Replace or change or lubricate. L: Lubricate

SERVICE INTERVALS:		ODOMETER READING												Lexus GS300 GS430							
Odometer reading or months, whichever comes first														GRS190 UZS191							
× 1,000 km		1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	05/01	06/08
MAINTENANCE ITEMS																					
Clutch pedal		No maintenance																			
Clutch pedal return spring and damper		Aygo only												I							
Brake pedal and parking brake		I I I I I I I I I I I I I I I I I I I I												Every 6 months	●	●					
Brake linings and drums (Include brake linings of parking brake)		Normal												I							
		Severe												I I I I I I I I I I I I I I I I I I I I	Every 6 months	●	●				
Brake pads and discs		Normal												I I I I I I I I I I I I I I I I I I I I	Every 6 months	●	●				
		Severe												I I I I I I I I I I I I I I I I I I I I	Every 3 months	●	●				
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3		I I I I R I I I I I I I I I I I I I I												I: Every 6 months R: Every 24 months	●	●				
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		I I I I R I I I I I I I I I I I I I I												I: Every 6 months R: Every 24 months						
	SAE J1704 or FMVSS No. 116 DOT4		I I I I R I I I I I I I I I I I I I I												I: Every 6 months R: Every 24 months						
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3		I I I I I I I I I I I I I I I I I I I I												Every 6 months						
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4		I I I I I R I I I I I R												I: Every 6 months R: Every 24 months						
	SAE J1704 or FMVSS No. 116 DOT4		I I I I I I I I I I I I I I I I I I I I												Every 6 months						
Brake pipes and hoses		Normal												I							
		Severe												I I I I I I I I I I I I I I I I I I I I	Every 6 months	●	●				
Vacuum pump for brake booster (Diesel engines only)		Luk-AT or Pierburg		Replace every 195,000 km (121,000 miles) or 120 months																	
		Others		Inspect every 200,000 km																	
Power steering fluid		A/T fluid DEXRON® II or III		I I I I I I I I I I I I I I I I I I I I												Every 6 months					
Steering wheel, linkage and steering gear box		Normal												I I I I I I I I I I I I I I I I I I I I	Every 6 months	●	●				
		Severe												I I I I I I I I I I I I I I I I I I I I	Every 3 months	●	●				
Front wheel alignment (side slip)		I												Every 48 months							
SRS airbag *1		Initial inspect at first 120 months from the vehicle registration date.																			
Steering knuckle, drag link, kingpin, center arm and steering linkage grease		NLGI No. 2		R R R R R R R R R R R R R R R R R R R R												Every 3 months					
Propeller shaft		NLGI No. 2		Normal												L L L L L L L L L L L L L L L L L L L L	Every 6 months				
				Severe												L L L L L L L L L L L L L L L L L L L L	Every 6 months				
Tightening bolts for propeller shaft		Normal												T T T T T T T T T T T T T T T T T T T T	Every 12 months						
		Severe												T T T T T T T T T T T T T T T T T T T T	Every 6 months						
		Normal												T T T T T T T T T T T T T T T T T T T T	Every 6 months						
		Severe												T T T T T T T T T T T T T T T T T T T T	Every 3 months						
Drive shaft boots		Normal												I							
		Severe												I I I I I I I I I I I I I I I I I I I I	Every 12 months	●	●				
Tightening bolts for drive shaft		Normal												T							
		Severe												T T T T T T T T T T T T T T T T T T T T	Every 24 months						
		Normal												T T T T T T T T T T T T T T T T T T T T	Every 12 months						
		Severe												T T T T T T T T T T T T T T T T T T T T	Every 6 months						
Suspension ball joints and dust covers		Normal												I							
		Severe												I I I I I I I I I I I I I I I I I I I I	Every 12 months	●	●				
		Severe												I I I I I I I I I I I I I I I I I I I I	Every 6 months	●	●				
Shift lever for 6-speed manual transmission		I												--							
Automatic transmission fluid	WS		Normal												I						
			Severe												I	R	●	●			
	T-IV		Normal												I						
			Severe												I	R	●	●			
	Toyota Genuine CVTF TC		I												I						
			Severe												I	R	●	●			
Manual transmission oil	LV Gear oil API GL-4		Normal												I						
			Severe												I	R	●	●			
	API Gear oil GL-4 or GL-5		Normal												I						
			Severe												I	R	●	●			
Transfer oil	API Gear oil GL-5		Normal												I						
			Severe												I	R	●	●			
	Gear oil API GL-4 or GL-5		Normal												I						
			Severe												I	R	●	●			
	Gear oil API GL-5		Normal												I						
			Severe												I	R	●	●			
	Gear oil API GL-5		Normal												I I I I I I I I I I I I I I I I I I I I	I: Every 12 months R: Every 48 months					
			Severe												R R R R R R R R R R R R R R R R R R R R	R: Every 24 months					
	Toyota Genuine Differential Oil LX85 (API GL-5)		Normal												I I I I I I I I I I I I I I I I I I I I	I: Every 12 months R: Every 48 months					
			Severe												R R R R R R R R R R R R R R R R R R R R	R: Every 24 months					
Toyota Genuine ATF WS		Normal												I I I I I I I I I I I I I I I I I I I I	I: Every 24 months						
		Severe												I I I I I I I I I I I I I I I I I I I I	R: Every 48 months						

*1: After 120 months from the vehicle registration date, inspect every 24 months.

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH until JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model

Fr diff. oil: "Toyota Genuine CVTF TC" added for New Avensis

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified t T: Tighten to specified torque.

R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS: Odometer reading or months, whichever comes first				ODOMETER READING																LEXUS GS300 GS460				
				× 1,000 km																GRS190 URS190				
MAINTENANCE ITEMS				1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months		07/09 08/09	
Front Differential oil	Differential integrated with transmission	M/T model	LV Gear oil API GL-4	Normal								I								I	Every 48 months			
				Severe																	R	Every 48 months		
			API Gear oil GL-4 or GL-5											I							I	Every 48 months		
		A/T model	WS	Normal										I							I	Every 24 months		
				Severe											I							R	I: Every 24 months R: Every 48 months	
			T-IV	Normal										I							I	Every 24 months		
	Differential separated from transmission (API Gear oil GL-5)		Normal											I							I	Every 24 months		
				Severe											I							R	I: Every 24 months R: Every 48 months	
			Severe																			R	I: Every 24 months R: Every 48 months	
																							R	I: Every 24 months R: Every 48 months
Rear differential oil	API Gear oil GL-5	Normal																		R	I: Every 12 months R: Every 48 months			
			Severe																		R	Every 24 months		
	A/T fluid WS	Normal																		R	I: Every 12 months R: Every 48 months	●		
			Severe																		R	I: Every 24 months R: Every 48 months		
Wheel bearing grease (tapered roller type wheel bearing only)	NLGI No. 2																		R	Every 12 months				
Front and rear suspension		Normal																		I	Every 12 months	●		
			Severe																		I	Every 6 months	●	
		Severe																			I	Every 6 months		
																					I	Every 3 months		
Active height control suspension fluid - Suspension fluid AHC or equivalent	Replace every 100.000 km																			—				
Active height control gas chamber																				I: initial 48 months; then every 12 months				
Bolts and nuts on chassis and body	Severe only			T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 6 months	●		
Tires and inflation pressure				I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●		
Lights, horn, wipers and washers				I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●		
Particle filter	Pollen removal type	Normal	C	C	R	C	C	R	C	C	R	C	C	R	C	C	R	C	C	R	C		●	
			Severe	C	C	R	C	C	R	C	C	R	C	C	R	C	C	R	C	C	R	C		●
	Standard type	Normal																			R			
			Severe																			R		
	Semi-standard type	Normal & Severe	Normal																			R		
				Severe																			R	
High efficiency type	Normal	Severe																			R			
																						R		
Combination filter	High efficiency type	Normal & Severe																		R				
																					R			
Air conditioner refrigerant amount	Replace when the service indicator light illuminates																			I		Every 12 months	●	

*3: Customers should inspect by themselves

MAINTENANCE SCHEDULE - GENERAL 10,000 kmIncludes updates from **MARCH** until **JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of TMMF Yaris, LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis Full Model Change

Fuel Injection Cleaner added on Avensis 1AZ and 2AZ

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary

R: Replace or change or lubricate.

F: Fill

GASOLINE ENGINE

SERVICE INTERVALS: Odometer reading or months, whichever comes first		× 1,000 km	ODOMETER READING																Months () : for reference	LEXUS GS300		
			1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75		80	GRS190	06/08 07/09(MC) 08/09
MAINTENANCE ITEMS																				05/01		
Timing Belt			Replace every 150,000 km																—			
Valve Clearance	Sensory Inspection *1																		I	Every 96 months		
Drive belts					I			I			I			I					I	Every 24 months	●	●
Engine oil (API: SJ, SL) (ILSAC)	Normal				R	R		R	R		R	R		R	R				R	Every 12 months	●	
	Severe				R	R	R	R		R	R	R	R		R	R	R	R	R	Every 6 months	●	
Engine oil (API: SL, SM) (ILSAC)	Normal				R	R		R	R		R	R		R	R				R	Every 12 months		●
	Severe				R	R	R	R		R	R	R	R		R	R	R	R	R	Every 6 months		●
Engine oil filter	Normal				R	R		R	R		R	R		R	R				R	Every 12 months	●	●
	Severe				R	R	R	R		R	R	R	R		R	R	R	R	R	Every 6 months	●	●
Cooling and heater system *2			First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																	●	●	
Engine coolant	S-LLC (pink) *4																		I	Every 24 months	●	●
			First replace at 160,000 km; after, every 80,000 km																	●	●	
Inverter coolant	S-LLC (pink) *4																		I	Every 24 months		
			First replace at 160,000 km; after, every 80,000 km																			
Exhaust pipes and mountings					I			I			I			I					I	Every 12 months	●	●
Spark plugs	Platinum or Iridium Tipped type		Replace every 100,000 km																—	●	●	
	Others										R								R	Every 48 months		
Battery					I	I		I	I		I	I		I	I				I	Every 12 months	●	●
Fuel filter (including the filter in the fuel tank)	Aygo only																		R	Every 96 months	●	●
			R																R	Every 48 months		
Fuel injection system *5					F	F		F	F		F	F		F	F				--		●	●
			When the "Injector Maintenance Required" message is displayed on the multi-information display																			
Air cleaner filter (including checking pre-air cleaner if equipped)	Paper type	Normal			I			R			I			R					I	Every 24 months R: Every 48 months	●	●
		Dusty road	Inspect every 2,500km/3months and replace every 40,000km/48months.																	●	●	
	Normal				I			R			I			R					I	Every 24 months R: Every 48 months		
	Dusty road				I	I		I	R		I	I		I	R				I	Every 24 months R: Every 48 months		
TNF (Thin Non-woven Fabrics) type	Normal		Inspect every 10,000km/12months and replace every 100,000km/120months.																			
	Dusty road		Inspect every 5,000km/6months and replace every 100,000km/120months.																			
Fuel tank cap, fuel lines, connections and fuel vapor control valve			First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																	●	●	
Charcoal canister	Aygo only																		I	Every 24 months	●	●
																			R	Every 24 months R: Every 48 months		
Charcoal canister filter	Aygo only				I			R			I			R					R	Every 24 months R: Every 48 months		

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: Toyota genuine fuel injector cleaner (P/N 08813-00820) or equivalent

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH until JUNE '08**

New information: Manual transmission oil *API Gear oil GL-5* added; Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avenis new model.

Transfer oil *Toyota Genuine ATF WS* added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

A/T fluid: *Toyota Genuine CVTF TC* added for New Avenis

I: Inspect and correct I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

CHASSIS AND BODY 1/2

R: Replace or change R: Replace or change or lubricate. L: Lubricate

SERVICE INTERVALS:		ODOMETER READING										Months		LEXUS GS300 GS460						
Odometer reading or months, whichever comes first														GRS190 URS190						
		× 1,000 km												07/09 08/09						
MAINTENANCE ITEMS		1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80		
Clutch pedal		No maintenance																		
Clutch pedal return spring and damper		Aygo only																		
Brake pedal and parking brake		I I I I I I I I I I										Every 6 months		●						
Brake linings and drums (Include brake linings of parking brake)		Normal I I I I I I I I I I										Every 12 months		●						
		Severe I I I I I I I I I I										Every 6 months		●						
Brake pads and discs		Normal I I I I I I I I I I										Every 6 months		●						
		Severe I I I I I I I I I I										Every 3 months		●						
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3	I I I I R I I I I I										I: Every 6 months R: Every 24 months		●						
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4	I I I I R I I I I I										I: Every 6 months R: Every 24 months								
	SAE J1704 or FMVSS No. 116 DOT4	I I I I R I I I I I										I: Every 6 months R: Every 24 months								
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3	I I I I I I I I I I										Every 6 months								
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4	I I I I I R I I I R										I: Every 6 months R: Every 24 months								
		SAE J1704 or FMVSS No. 116 DOT4										Every 6 months								
Brake pipes and hoses		Normal I I I I I I I I I I										Every 12 months		●						
		Severe I I I I I I I I I I										Every 6 months		●						
Vacuum pump for brake booster (Diesel engines only)		Luk-AT or Pierburg Others										Replace every 195.000 km (121.000 miles) or 120 months Inspect every 200.000 km								
Power steering fluid		A/T fluid DEXRON® II or III										Every 6 months								
Steering wheel, linkage and steering gear box		Normal I I I I I I I I I I										Every 12 months		●						
		Severe I I I I I I I I I I										Every 6 months Every 3 months		●						
Front wheel alignment (side slip)		I I I I I I I I I I										Every 48 months								
SRS airbag *1		Initial inspect at first 120 months from the vehicle registration date.																		
Steering knuckle, drag link, kingpin, center arm and steering linkage grease		NLGI No. 2										R R R R R R R R R R R R R R R R		Every 3 months						
Propeller shaft		NLGI No. 2										Normal L L L L L L L L L L		Every 6 months						
		Severe L L L L L L L L L L										Every 6 months								
Tightening bolts for propeller shaft		Normal T T T T T T T T T T										Every 12 months								
		Severe T T T T T T T T T T										Every 6 months								
		Normal T T T T T T T T T T										Every 6 months								
		Severe T T T T T T T T T T										Every 3 months								
Drive shaft boots		Normal I I I I I I I I I I										Every 24 months		●						
		Severe I I I I I I I I I I										Every 12 months		●						
Tightening bolts for drive shaft		Normal T T T T T T T T T T										Every 24 months								
		Severe T T T T T T T T T T										Every 12 months								
		Normal T T T T T T T T T T										Every 6 months								
		Severe T T T T T T T T T T										Every 3 months								
Suspension ball joints and dust covers		Normal I I I I I I I I I I										Every 12 months		●						
		Severe I I I I I I I I I I										Every 6 months		●						
Shift lever for 6-speed manual transmission		I I I I I I I I I I										--								
Automatic transmission fluid	WS	Normal I I I I I I I I I I										Every 24 months		●						
		Severe I I I I I I I I I I										R I: Every 24 months R: Every 48 months		●						
	T-IV	Normal I I I I I I I I I I										Every 24 months								
		Severe I I I I I I I I I I										R I: Every 24 months R: Every 48 months								
	Toyota Genuine CVTF TC		I I I I I I I I I I										Every 24 months							
			I I I I I I I I I I										I: Every 24 months R: Every 48 months							
Manual transmission oil	LV Gear oil API GL-4	Normal I I I I I I I I I I										Every 48 months								
		Severe I I I I I I I I I I										R Every 48 months								
	API Gear oil GL-4 or GL-5	Normal I I I I I I I I I I										Every 48 months								
		Severe I I I I I I I I I I										R Every 48 months								
API Gear oil GL-5		Normal I I I I I I I I I I										Every 48 months								
		Severe I I I I I I I I I I										R Every 48 months								
Transfer oil	Gear oil API GL-4 or GL-5	Normal I I I I I I I I I I										Every 48 months								
		Severe I I I I I I I I I I										R Every 48 months								
	Gear oil API GL-5	Normal I I I I I I I I I I										Every 48 months								
		Severe I I I I I I I I I I										R Every 48 months								
	Gear oil API GL-5	Normal I I I I I I I I I I										Every 12 months R: Every 48 months								
		Severe I I I I I I I I I I										R: Every 24 months								
	Toyota Genuine Differential Oil LX85 (API GL-5)	Normal I I I I I I I I I I										Every 12 months R: Every 48 months								
		Severe I I I I I I I I I I										R: Every 24 months								
	Toyota Genuine ATF WS		Normal I I I I I I I I I I										Every 24 months							
			Severe I I I I I I I I I I										R: Every 48 months							

*1: After 120 months from the vehicle registration date, inspect every 24 months.

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH** until **JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change
 Toyota Genuine CVTF maintenance added for new CVT's

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
 R: Replace or change or lubricate. C: Clean

CHASSIS AND BODY 2/2

SERVICE INTERVALS:		ODOMETER READING												LEXUS				
Odometer reading or months, whichever comes first														GS300				
														GS460				
		Months																
× 1,000 km		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90				
MAINTENANCE ITEMS		× 1,000 miles												07/09				
		1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54	08/09			
Front Differential oil	M/T model	API Gear oil GL-4 or GL-5	Normal							I					Every 48 months			
			Severe							R					Every 48 months			
		LV Gear oil API GL-4	Normal								I					Every 48 months		
			Severe								R					Every 48 months		
	Differential integrated with transmission	A/T model	Toyota Genuine ATF type T IV	Normal							I					Every 36 months		
				Normal							I					Every 48 months		
				Severe								I					R: Every 36 months R: Every 72 months	
				Normal								I					Every 36 months	
			Toyota Genuine ATF WS	Normal							I					Every 48 months		
			Normal								I					R: Every 36 months R: Every 72 months		
			Severe								I					R: Every 36 months R: Every 72 months		
			Toyota Genuine CVTF TC	Normal							I					Every 48 months		
	Severe								I					R: Every 36 months R: Every 72 months				
Differential separated from transmission (API Gear oil GL-5)															R	Every 48 months		
Rear differential oil	API Gear oil GL-5		Normal							I					R	Every 48 months	●	
	A/T fluid WS		Normal							I					R	Every 36 months		
		Severe								I					R	I: Every 36 months R: Every 72 months		
Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease	NLGI No. 2	Normal								R					R	Every 24 months		
		Severe								R					R	Every 12 months		
Front and rear suspension	Normal									I					R	Every 24 months	●	
	Severe									I					R	Every 12 months	●	
Active height control suspension fluid - Suspension fluid AHC or equivalent															R	—		
Active height control gas chamber										I					R	I: initial 48 months; then every 12 months		
Bolts and nuts on chassis and body		Severe only								T					T	Every 12 months	●	
Tires and inflation pressure	Normal									I					R	Every 24 months	●	
	Severe									I					R	Every 12 months	●	
Air conditioning filter	Normal									I					R	Every 24 months		
	Dusty road									I					R	Every 12 months		
	Normal									R					R	Every 24 months		
	Dusty road									R					R	Every 12 months		
	Normal & Dusty road									R					R	Every 24 months		
Particle filter	Foldable type									I					R	"Clean" replaced by "Inspect"		
	Pollen removal type									I					R	Refer to TME letter of October 2007		
	Standard type & high efficiency type									I					R	on "Potential Health Risk From	●	
	Combination filter (high efficiency type)									I					R	Cleaning of Cabin Air Filter Elements	●	
Combination filter	Normal									R					R			
	Dusty road									R					R			
Replace when the service indicator light illuminates																		
Corrosion Inspection										I					R	Every 24 months	●	

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change

Aygo 1.0p Clutch mechanism: Inspection interval shortened; Clutch fluid Replacement added for new MMT's; Toyota Genuine CVTF maintenance added for new CVT's

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

Correction: Lexus IS Manual transmission oil changed to "API Gear oil GL-5" only

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
R: Replace or change or lubricate. L: Lubricate

CHASSIS AND BODY 1/2

SERVICE INTERVALS:		ODOMETER READING											Months	LEXUS GS300 GS460 GRS190 URS190					
Odometer reading or months, whichever comes first																			
MAINTENANCE ITEMS																			
		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90				
		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54		07/09 08/09		
Clutch pedal, return spring and damper - Mechanical type			I	I	I	I	I	I	I	I	I	I	I	I	I				
Brake pedal and parking brake						I	I	I	I	I	I	I	I	I	I	Every 24 months	●		
Brake linings and drums (include brake linings of parking brake)		Normal				I	I	I	I	I	I	I	I	I	I	Every 24 months	●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●		
Brake pads and discs		Normal	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●		
Clutch fluid		SAE J1703 or FMVSS No. 116 DOT3				I	I	I	I	I	I	I	I	I	I	Every 24 months			
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4				R	R	R	R	R	R	R	R	R	R	Every 24 months			
		SAE J1704 or FMVSS No. 116 DOT4				I	I	I	I	I	I	I	I	I	I	Every 24 months			
Clutch fluid for auto clutch system						R	R	R	R	R	R	R	R	R	R	Every 24 months			
Sequential M/T system fluid						I	I	I	I	I	I	I	I	I	I	Every 24 months			
Brake fluid		SAE J1703 or FMVSS No. 116 DOT3				R	R	R	R	R	R	R	R	R	R	Every 24 months	●		
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4				R	R	R	R	R	R	R	R	R	R	Every 24 months			
		SAE J1704 or FMVSS No. 116 DOT4				R	R	R	R	R	R	R	R	R	R	Every 24 months			
Brake pipes and hoses						I	I	I	I	I	I	I	I	I	I	Every 24 months	●		
Vacuum pump for brake booster (Diesel engines only)		Ixetic (Luk-AT) or Pierburg Others	Replace every 195,000 km (121,000 miles) or 120 months Inspect every 195,000 km (121,000 miles) or 120 months																
Power steering fluid		AT fluid DEXRON® II or III TOYOTA P.S. fluid EH or equivalent				I	I	I	I	I	I	I	I	I	I	Every 24 months			
						I	I	I	I	I	I	I	I	I	I	Every 24 months			
Steering wheel, linkage and steering gear box		Normal				I	I	I	I	I	I	I	I	I	I	Every 24 months	●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●		
SRS airbag *1			Initial inspect at first 120 months from the vehicle registration date.																
Propeller shaft		NLGI No. 1 or No. 2	Normal	L	L	L	L	L	L	L	L	L	L	L	L	Every 24 months			
			Severe	L	L	L	L	L	L	L	L	L	L	L	L	Every 12 months			
Propeller shaft bolts			Normal			T	T	T	T	T	T	T	T	T	T	Every 24 months			
			Severe	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months			
Drive shaft boots			Normal			I	I	I	I	I	I	I	I	I	I	Every 24 months	●		
			Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●		
			Normal	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months			
			Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months			
Drive shaft bolts			Normal			T	T	T	T	T	T	T	T	T	T	Every 24 months			
			Severe	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months			
			Normal	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months			
			Severe	T	T	T	T	T	T	T	T	T	T	T	T	Every 6 months			
Suspension ball joints and dust covers			Normal			I	I	I	I	I	I	I	I	I	I	Every 24 months			
			Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●		
			Normal	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	●		
			Severe	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	●		
Shift lever of 6-speed manual transmission						I	I	I	I	I	I	I	I	I	I	--			
Automatic transmission fluid		Vehicles produced before July, '99	Normal			I	R			I					I: Every 12 months R: Every 48 months				
			Severe	I	R	I	R	I	R						I: Every 12 months R: Every 24 months				
		Vehicles produced after August, '99	Toyota Genuine ATF type T-IV	Normal				I								Every 36 months			
				Severe				I						R		I: Every 36 months R: Every 72 months			
			Toyota Genuine ATF WS	Normal				I								Every 36 months			
				Severe				I						R		I: Every 36 months R: Every 72 months	●		
			Toyota Genuine CVTF TC	Normal				I								Every 48 months			
				Severe				I						R		I: Every 36 months R: Every 72 months	●		
			Other	Normal				I						R		I: Every 36 months R: Every 72 months			
				Severe		I	R	I	R					R		I: Every 18 months R: Every 36 months			
			Manual transmission oil and transfer oil if so equipped (Including auto clutch system)		API Gear oil GL-5	Normal				I								Every 48 months	
						Severe				R								Every 48 months	
API Gear oil GL-4 or GL-5	Normal						I								Every 48 months				
	Severe						I								Every 48 months				
LV Gear oil API GL-4	Normal						I								Every 48 months				
	Severe						R								Every 48 months				
Other (GL-4 or GL-5)	Normal						I						R		Every 48 months				
	Severe						R						R		Every 48 months				
Transfer oil		API Gear oil GL-4 or GL-5			Normal				I								Every 48 months		
					Severe				R						R		Every 48 months		
		API Gear oil GL-5			Normal				R								Every 48 months		
					Severe				R								Every 48 months		
		Toyota Genuine Differential Oil LX85 (APL GL-5)	Normal				I								Every 48 months				
			Severe				R						R		Every 48 months				
		Toyota Genuine ATF WS	Normal				I								Every 48 months				
			Severe				I						R		I: Every 36 months R: Every 72 months				

*1: After 120 months from the vehicle registration date, inspect every 24 months.

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS, SC running change; iQ new model; Avensis Full Model Change

Fill operation added; Fuel Injection system maintenance added (Lexus IS250, GS300 and LS460 for Croatia only)

GASOLINE ENGINE		MAINTENANCE OPERATIONS										GS460					
		R: Replace or change or lubricate. F: Fill															
SERVICE INTERVALS:		ODOMETER READING										Months					
Odometer reading or months, whichever comes first		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	() : for reference	1UR-FSE (4.6 V8 D4)
MAINTENANCE ITEMS		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54		URS190
																	07/09(MC) 08/09
Timing Belt		Replace every 150,000 km (90,000 miles)										—					
Valve Clearance (Sensory Inspection)*1												*1 (Every 72 months)					
Drive belt	V-ribbed belt	Inspect 105,000 km (63,000 miles), after 105,000 km inspect every 15,000 km (9,000 miles)										Initial: 72 and then every 12 months		●			
Engine oil (API: SH, SJ) (ILSAC)	Normal		R		R		R		R		R		R		R	Every 12 months	
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	
Engine oil (API: SJ, SL) (ILSAC)	Normal		R		R		R		R		R		R		R	Every 12 months	
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	
Engine oil (API: SL, SM) (ILSAC)	Normal		R		R		R		R		R		R		R	Every 12 months	●
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●
Engine oil filter	Normal		R		R		R		R		R		R		R	Every 12 months	●
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●
Cooling and heater system *2				I			I			I			I			Every 24 months	●
Engine coolant	LLC (red/green) *3									R				R		Initial: 36 months	
	S-LLC (pink) *4			I			I			I			I			First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)	●
Inverter coolant	S-LLC (pink) *4			I			I			I			I			First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)	●
Exhaust pipes and mountings				I			I			I			I			Every 24 months	●
Spark plugs	Platinum or Iridium Tipped type	Replace every 90,000 km (54,000 miles)										—		●			
	Others			I			R			I				I		I: Every 24 months R: Every 48 months	
Battery		No maintenance										—					
Fuel filter (Aygo only)		Replace every 180,000 km (108,000 miles)										15 years					
Fuel injection system			F		F		F		F		F		F		F	—	
Air cleaner filter (from October 2002, applicable to all models in production)	Normal		I		I		I		R		I		I		I	I: Every 24 months R: Every 48 months	●
	Dusty road		I	I	I	I	I	I	R		I	I	I	I	I	I: Every 12 months R: Every 48 months	●
Air cleaner filter	Normal		I		I		R		I		I		R			I: Every 24 months R: Every 48 months	
	Dusty road	Inspect every 2,500 km (1,500 miles) and replace every 45,000 km (27,000 miles) or 48 months.										—					
Fuel tank cap, fuel lines, connections and fuel vapor control valve				I			I			I			I			Every 24 months	●
Charcoal canister	*5												I			—	●
	Others						I						I			Every 24 months	●
	Aygo only	Normal											I			—	
	Severe						I						I			Every 24 months	
Charcoal canister filter	Aygo only	Normal											R			—	
	Severe						R						R			Every 24 months	

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: For Sweden, Norway and Finland only.

*6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820) or equivalent

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH** until **JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change
 Toyota Genuine CVTF maintenance added for new CVT's

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
 R: Replace or change or lubricate. C: Clean

CHASSIS AND BODY 2/2

SERVICE INTERVALS:		ODOMETER READING												LEXUS						
Odometer reading or months, whichever comes first														GS300						
														GS430						
														GRS190						
														UZS191						
														05/01	06/08					
MAINTENANCE ITEMS		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	Months				
		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54					
Front Differential oil	Differential integrated with transmission	M/T model	API Gear oil GL-4 or GL-5	Normal								I				Every 48 months				
			Severe										R			Every 48 months				
		A/T model	LV Gear oil API GL-4	Normal										I			Every 48 months			
			Severe											R			Every 48 months			
		Differential separated from transmission (API Gear oil GL-5)			Toyota Genuine ATF type T IV	Normal								I			I	Every 36 months		
					Normal												I	Every 48 months		
	Severe																R	I: Every 36 months R: Every 72 months		
	Toyota Genuine ATF WS				Normal										I			I	Every 36 months	
	Normal																	I	Every 48 months	
	Severe																	R	I: Every 36 months R: Every 72 months	
	Toyota Genuine CVTF TC	Normal										I				Every 48 months				
	Severe														R	I: Every 36 months R: Every 72 months				
Rear differential oil	API Gear oil GL-5	Normal													R	Every 48 months	●			
A/T fluid WS	Normal														I	Every 36 months	●			
Severe															R	I: Every 36 months R: Every 72 months				
Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease	NLGI No. 2	Normal													R	Every 24 months				
Severe															R	Every 12 months				
Front and rear suspension	Normal														I	Every 24 months	●			
Severe															I	Every 12 months	●			
Active height control suspension fluid - Suspension fluid AHC or equivalent															R	—				
Active height control gas chamber															I	I: initial 48 months; then every 12 months				
Bolts and nuts on chassis and body	Severe only														T	Every 12 months	●			
Tires and inflation pressure	Normal														I	Every 24 months	●			
Severe															I	Every 12 months	●			
Air conditioning filter	Normal														I	Every 24 months				
Dusty road															I	Every 12 months				
Normal															R	Every 24 months				
Dusty road															R	Every 12 months				
Normal & Dusty road															R	Every 24 months				
Particle filter	Foldable type														I	"Clean" replaced by "Inspect"				
Pollen removal type															I	Refer to TME letter of October 2007 on "Potential Health Risk From Cleaning of Cabin Air Filter Elements"	22			
Standard type & high efficiency type	Normal														R		●			
Dusty road															R					
Combination filter (high efficiency type)	Normal														R		23			
Dusty road															R		23			
Corrosion Inspection															I	Every 24 months	●			

22: White filter marked "P" on vehicles from July '05 production
 23: Black filter on vehicles up to June '05 production

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change

Aygo 1.0p Clutch mechanism: Inspection interval shortened; Clutch fluid Replacement added for new MMT's; Toyota Genuine CVTF maintenance added for new CVT's

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

Correction: Lexus IS Manual transmission oil changed to "API Gear oil GL-5" only
 I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
 R: Replace or change or lubricate. L: Lubricate

CHASSIS AND BODY 1/2

SERVICE INTERVALS:		ODOMETER READING										Months	LEXUS						
Odometer reading or months, whichever comes first													GS300	GS430					
		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90					
MAINTENANCE ITEMS		× 1,000 km	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54				
		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54	05/01	06/08		
Clutch pedal, return spring and damper - Mechanical type			I	I	I	I	I	I	I	I	I	I	I	I	I				
Brake pedal and parking brake						I			I					I		Every 24 months	● ●		
Brake linings and drums (include brake linings of parking brake)		Normal				I			I					I		Every 24 months	● ●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	● ●		
Brake pads and discs		Normal				I			I					I		Every 12 months	● ●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	● ●		
Clutch fluid		SAE J1703 or FMVSS No. 116 DOT3				I			I					I		Every 24 months			
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4				R			R					R		Every 24 months			
		SAE J1704 or FMVSS No. 116 DOT4				I			I					I		Every 24 months			
Clutch fluid for auto clutch system						R			R					R		Every 24 months			
Sequential M/T system fluid						I			I					I		Every 24 months			
Brake fluid		SAE J1703 or FMVSS No. 116 DOT3				R			R					R		Every 24 months	● ●		
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4				R			R					R		Every 24 months			
		SAE J1704 or FMVSS No. 116 DOT4				R			R					R		Every 24 months			
Brake pipes and hoses						I			I					I		Every 24 months	● ●		
Vacuum pump for brake booster (Diesel engines only)		Ixetic (Luk-AT) or Pierburg	Replace every 195,000 km (121,000 miles) or 120 months																
		Others	Inspect every 195,000 km (121,000 miles) or 120 months																
Power steering fluid		AT fluid DEXRON® II or III				I			I					I		Every 24 months			
		TOYOTA P.S. fluid EH or equivalent				I			I					I		Every 24 months			
Steering wheel, linkage and steering gear box		Normal				I			I					I		Every 24 months	● ●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	● ●		
SRS airbag *1			Initial inspect at first 120 months from the vehicle registration date.																
Propeller shaft		NLGI No. 1 or No. 2	Normal	L	L	L	L	L	L	L	L	L	L	L	L	Every 24 months			
			Severe	L	L	L	L	L	L	L	L	L	L	L	L	Every 12 months			
Propeller shaft bolts		Normal				T			T					T		Every 24 months			
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months			
Drive shaft boots		Normal				I			I					I		Every 24 months	● ●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	● ●		
		Normal				I			I					I		Every 12 months			
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months			
Drive shaft bolts		Normal				T			T					T		Every 24 months			
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months			
		Normal				T			T					T		Every 12 months			
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 6 months			
Suspension ball joints and dust covers		Normal				I			I					I		Every 24 months			
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months			
		Normal				I			I					I		Every 12 months	● ●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	● ●		
Shift lever of 6-speed manual transmission						I			I					I		-			
Automatic transmission fluid		Vehicles produced before July, '99	Normal						I					R		I	I: Every 12 months R: Every 48 months		
			Severe	I					R					I		R	I: Every 12 months R: Every 24 months		
		Vehicles produced after August, '99	Toyota Genuine ATF type T-IV	Normal							I					I		Every 36 months	
				Severe							I					R		I: Every 36 months R: Every 72 months	
			Toyota Genuine ATF WS	Normal								I				I		Every 36 months	● ●
				Severe								I				R		I: Every 36 months R: Every 72 months	● ●
			Toyota Genuine CVTF TC	Normal								I				I		Every 48 months	
				Severe								I				R		I: Every 36 months R: Every 72 months	
			Other	Normal								I				R		I: Every 36 months R: Every 72 months	
				Severe								I				R		I: Every 18 months R: Every 36 months	
Manual transmission oil and transfer oil if so equipped (Including auto clutch system)		API Gear oil GL-5	Normal						I					I		Every 48 months			
			Severe							R					R		Every 48 months		
		API Gear oil GL-4 or GL-5	Normal								I				I		Every 48 months		
			Severe								R				R		Every 48 months		
		LV Gear oil API GL-4	Normal								I				I		Every 48 months		
			Severe								R				R		Every 48 months		
		Other (GL-4 or GL-5)	Normal								I				I		Every 48 months		
			Severe								R				R		Every 48 months		
Transfer oil		API Gear oil GL-4 or GL-5	Normal						I					I		Every 48 months			
			Severe							R					R		Every 48 months		
		API Gear oil GL-5	Normal								I				I		Every 48 months		
			Severe								R				R		Every 48 months		
		Toyota Genuine Differential Oil LX85 (API GL-5)	Normal								I				I		Every 48 months		
			Severe								R				R		Every 48 months		
		Toyota Genuine ATF WS	Normal								I				I		Every 48 months		
			Severe								I				R		I: Every 36 months R: Every 72 months		

*1: After 120 months from the vehicle registration date, inspect every 24 months.

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change
 Toyota Genuine CVTF maintenance added for new CVT's

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.
 R: Replace or change or lubricate. C: Clean

CHASSIS AND BODY 2/2

SERVICE INTERVALS:		ODOMETER READING												LEXUS				
Odometer reading or months, whichever comes first														GS450h				
														GWS191				
		Months																
× 1,000 km		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90				
MAINTENANCE ITEMS		× 1,000 miles												06/02 07/09 08/09				
		1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54				
Front Differential oil	M/T model	API Gear oil GL-4 or GL-5	Normal							I					Every 48 months			
			Severe							R					Every 48 months			
		LV Gear oil API GL-4	Normal								I					Every 48 months		
			Severe								R					Every 48 months		
	Differential integrated with transmission	A/T model	Toyota Genuine ATF type T IV	Normal							I				I	Every 36 months		
				Normal							I					Every 48 months		
				Severe								I				R	I: Every 36 months R: Every 72 months	
				Normal								I				I	Every 36 months	
			Toyota Genuine ATF WS	Normal							I					Every 48 months		
				Normal							I					I: Every 36 months R: Every 72 months		
				Severe							I				R	I: Every 36 months R: Every 72 months		
			Toyota Genuine CVTF TC	Normal							I					Every 48 months		
		Severe							I				R	I: Every 36 months R: Every 72 months				
Differential separated from transmission (API Gear oil GL-5)						R				R				R	Every 48 months			
Rear differential oil	API Gear oil GL-5		Normal							I				R	Every 36 months			
	A/T fluid WS		Severe							I				R	I: Every 36 months R: Every 72 months			
Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease	NLGI No. 2	Normal				R				R				R	Every 24 months			
		Severe			R		R		R	R			R	R	Every 12 months			
Front and rear suspension	Normal					I				I				I	Every 24 months	●		
	Severe				I		I		I	I				I	Every 12 months	●		
Active height control suspension fluid - Suspension fluid AHC or equivalent														R	—			
Active height control gas chamber										I		I		I	I: initial 48 months; then every 12 months			
Bolts and nuts on chassis and body		Severe only			T		T		T	T			T	T	Every 12 months	●		
Tires and inflation pressure	Normal					I				I				I	Every 24 months	●		
	Severe				I		I		I	I			I	I	Every 12 months	●		
Air conditioning filter	Normal									I				I	Every 24 months			
	Dusty road				I		I		I	I			I	I	Every 12 months			
	Normal									R				R	Every 24 months			
	Dusty road				R		R		R	R			R	R	Every 12 months			
	Normal & Dusty road						R		R	R				R	Every 24 months			
Particle filter	Foldable type					I		R		I		R		I	"Clean" replaced by "Inspect"			
	Pollen removal type					I		I		R		I		R	Refer to TME letter of October 2007			
	Standard type & high efficiency type		Normal						R		R			R	on "Potential Health Risk From	●		
	Dusty road				R		R		R	R			R	R	Cleaning of Cabin Air Filter Elements	●		
Combination filter	Combination filter (high efficiency type)		Normal			R		R		R			R	R				
	Dusty road				R		R		R	R			R	R	R			
Corrosion Inspection		Replace when the service indicator light illuminates																
										I				I	Every 24 months	●		

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 milesIncludes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS, SC running change; iQ new model; Avensis Full Model Change

Fill operation added; Fuel Injection system maintenance added (Lexus IS250, GS300 and LS460 for Croatia only)

GASOLINE ENGINE		MAINTENANCE OPERATIONS R: Replace or change or lubricate. F: Fill											GS430					
SERVICE INTERVALS: Odometer reading or months, whichever comes first		ODOMETER READING											3UZ-FE (4.3 V8)					
		Months											UZS190					
MAINTENANCE ITEMS		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	() : for reference	05/01	06/08
		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54			
Timing Belt		Replace every 150,000 km (90,000 miles)											—	●	●			
Valve Clearance (Sensory Inspection)*1													*I (Every 72 months)	●	●			
Drive belt	V-ribbed belt	Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)											Initial: 72 and then every 12 months	●	●			
Engine oil (API: SH, SJ) (ILSAC)	Normal		R		R		R		R		R		R		R	Every 12 months		
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months		
Engine oil (API: SJ, SL) (ILSAC)	Normal		R		R		R		R		R		R		R	Every 12 months	●	
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●	
Engine oil (API: SL, SM) (ILSAC)	Normal		R		R		R		R		R		R		R	Every 12 months		●
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months		●
Engine oil filter	Normal		R		R		R		R		R		R		R	Every 12 months	●	●
	Severe		R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	●	●
Cooling and heater system *2					I				I					I	Every 24 months	●	●	
Engine coolant	LLC (red/green) *3										R			R	Initial: 36 months			
	S-LLC (pink) *4				I				I					I	First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)	●	●	
Inverter coolant	S-LLC (pink) *4				I				I					I	First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)			
Exhaust pipes and mountings					I				I					I	Every 24 months	●	●	
Spark plugs	Platinum or Iridium Tipped type	Replace every 90,000 km (54,000 miles)											—	●	●			
	Others				I				R					I	I: Every 24 months R: Every 48 months			
Battery		No maintenance											—					
Fuel filter (Aygo only)		Replace every 180,000 km (108,000 miles)											15 years					
Fuel injection system			F		F		F		F		F		F		F	—		
Air cleaner filter (from October 2002, applicable to all models in production)	Normal		I		I		I		R		I		I		I	I: Every 24 months R: Every 48 months	●	●
	Dusty road		I	I	I	I	I	I	R	I	I	I	I	I	I	I: Every 12 months R: Every 48 months	●	●
Air cleaner filter	Normal		I		I		R		I		I		R		I	I: Every 24 months R: Every 48 months		
	Dusty road	Inspect every 2,500 km(1,500 miles) and replace every 45,000 km(27,000 miles) or 48 months.											—					
Fuel tank cap, fuel lines, connections and fuel vapor control valve					I				I					I	Every 24 months	●	●	
Charcoal canister	*5													I	—	●	●	
	Others								I					I	Every 24 months	●	●	
	Aygo only	Normal												I	—			
Charcoal canister filter	Aygo only	Severe							I					I	Every 24 months			
	Normal													R	—			
Severe								R					R	Every 24 months				

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: For Sweden, Norway and Finland only.

*6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820) or equivalent

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 milesIncludes updates from **MARCH** until **JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS, SC running change; iQ new model; Avensis Full Model Change

Fill operation added; Fuel Injection system maintenance added (Lexus IS250, GS300 and LS460 for Croatia only)

GASOLINE ENGINE		MAINTENANCE OPERATIONS												GS300			
SERVICE INTERVALS:		R: Replace or change or lubricate. F: Fill												3GR-FSE			
Odometer reading or months, whichever comes first		ODOMETER READING												(3.0 V6 D4)			
× 1,000 km		1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	GRS190		
× 1,000 miles		1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54	05/01	06/08 07/09(MC) 08/09	
MAINTENANCE ITEMS		() : for reference															
Timing Belt		Replace every 150,000 km (90,000 miles)												—			
Valve Clearance (Sensory Inspection)*1														*I (Every 72 months)			
Drive belt		Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)												Initial: 72 and then every 12 months			
V-ribbed belt														● ●			
Engine oil (API: SH, SJ) (ILSAC)		Normal		R		R		R		R		R		R		Every 12 months	
		Severe		R		R		R		R		R		R		Every 6 months	
Engine oil (API: SJ, SL) (ILSAC)		Normal		R		R		R		R		R		R		Every 12 months	
		Severe		R		R		R		R		R		R		Every 6 months	
Engine oil (API: SL, SM) (ILSAC)		Normal		R		R		R		R		R		R		Every 12 months	
		Severe		R		R		R		R		R		R		Every 6 months	
Engine oil filter		Normal		R		R		R		R		R		R		Every 12 months	
		Severe		R		R		R		R		R		R		Every 6 months	
Cooling and heater system *2														I I I			
Engine coolant		LLC (red/green) *3												R R			
		S-LLC (pink) *4												I I I			
		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)												● ●			
Inverter coolant		S-LLC (pink) *4												I I I			
		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)												● ●			
Exhaust pipes and mountings														I I I			
Spark plugs		Platinum or Iridium Tipped type												Replace every 90,000 km (54,000 miles)			
		Others												I R I			
														I: Every 24 months R: Every 48 months			
Battery		No maintenance												—			
Fuel filter (Aygo only)		Replace every 180,000 km (108,000 miles)												15 years			
Fuel injection system		F F F F F F												— ●*			
Air cleaner filter (from October 2002, applicable to all models in production)		Normal		I		I		I		R		I		I		I: Every 24 months R: Every 48 months	
		Dusty road		I		I		I		I		R		I		I: Every 12 months R: Every 48 months	
Air cleaner filter		Normal		I		I		R		I		I		R		I: Every 24 months R: Every 48 months	
		Dusty road		Inspect every 2,500 km(1,500 miles) and replace every 45,000 km(27,000 miles) or 48 months.												—	
Fuel tank cap, fuel lines, connections and fuel vapor control valve														I I I			
		*5												I			
Charcoal canister		Others												I I I			
		Aygo only												I			
		Normal												I			
		Severe												I			
Charcoal canister filter		Aygo only												R			
		Normal												—			
		Severe												R			
														Every 24 months			

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: For Sweden, Norway and Finland only.

*6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820) or equivalent

*: Croatia only