



TRANSFER ASSY COMPONENTS

3103V-02

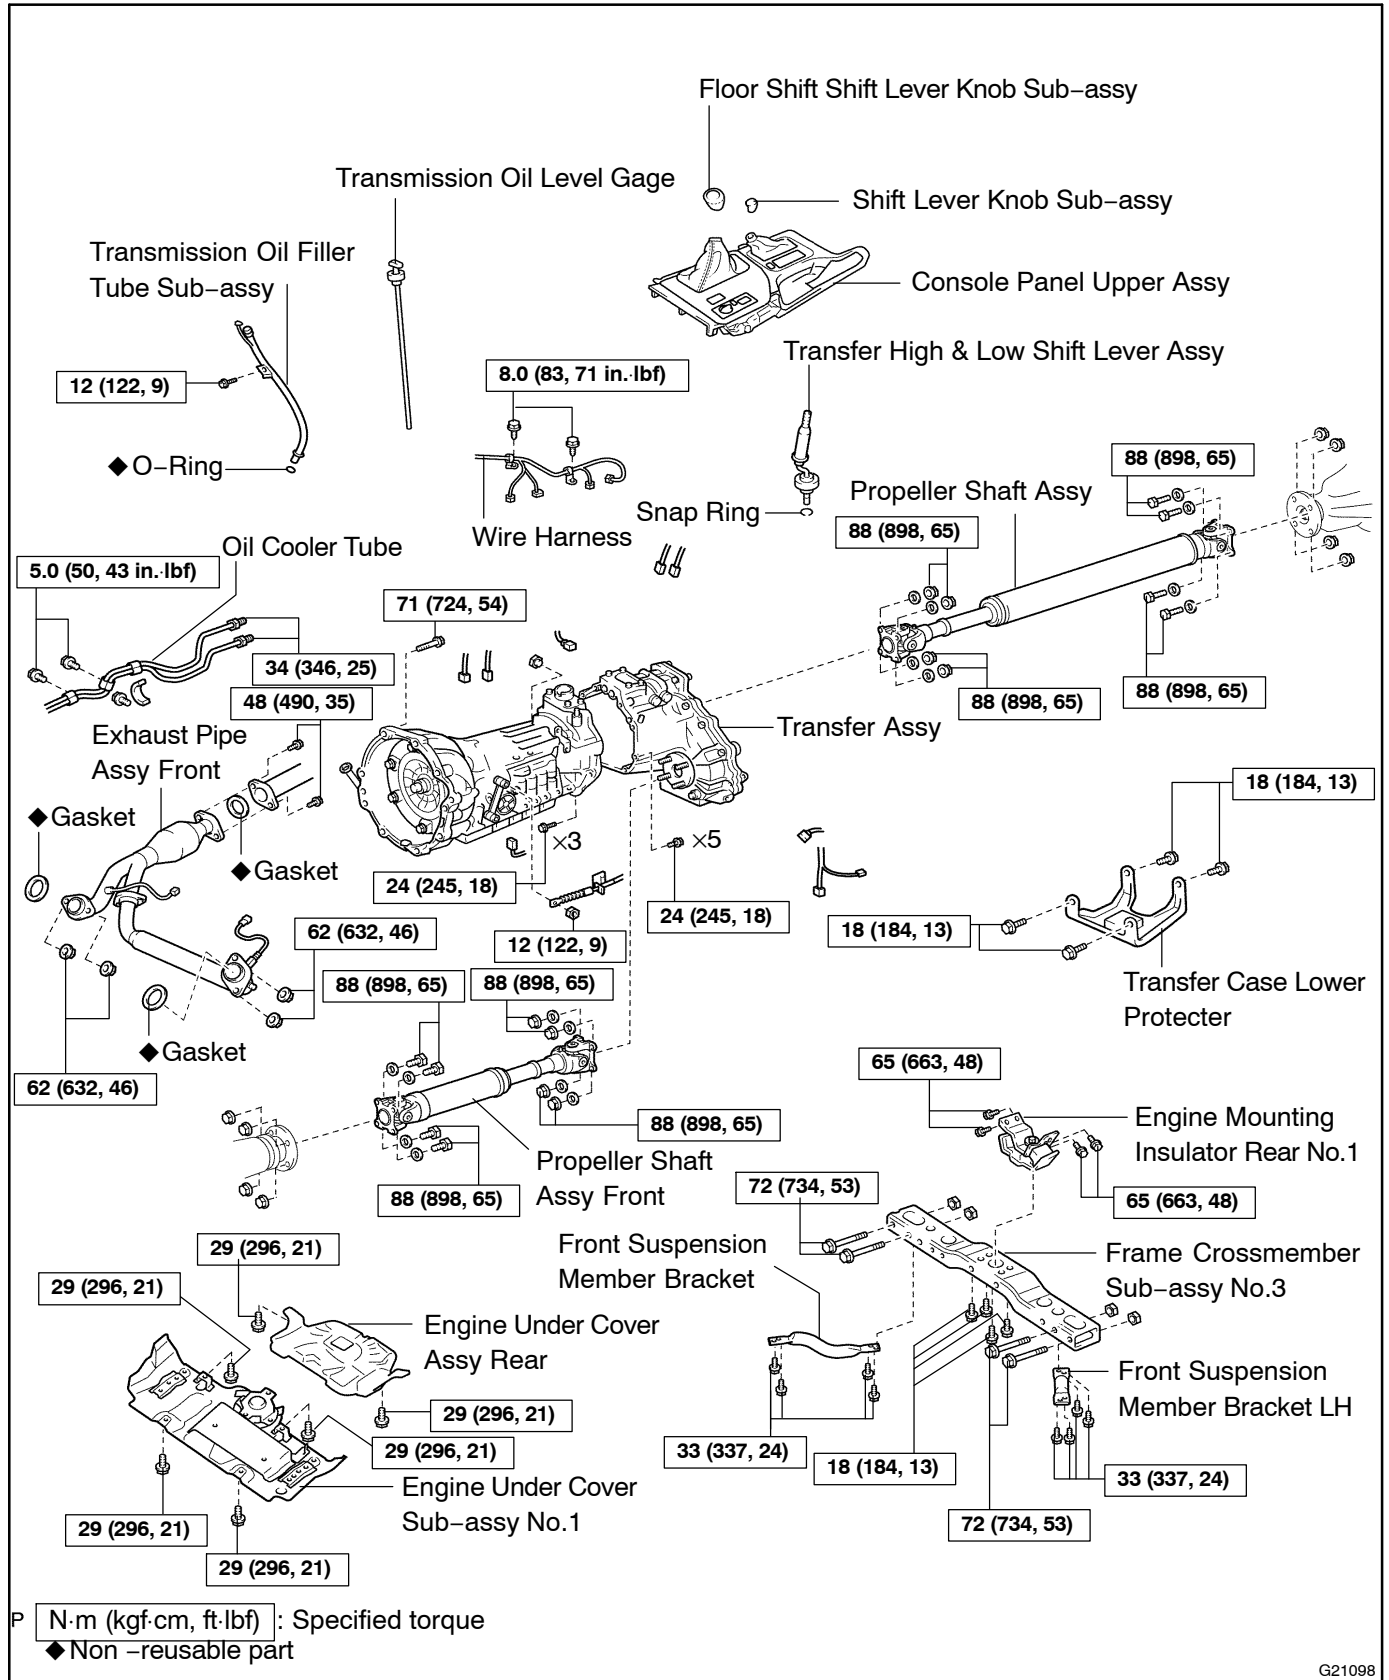


G21098

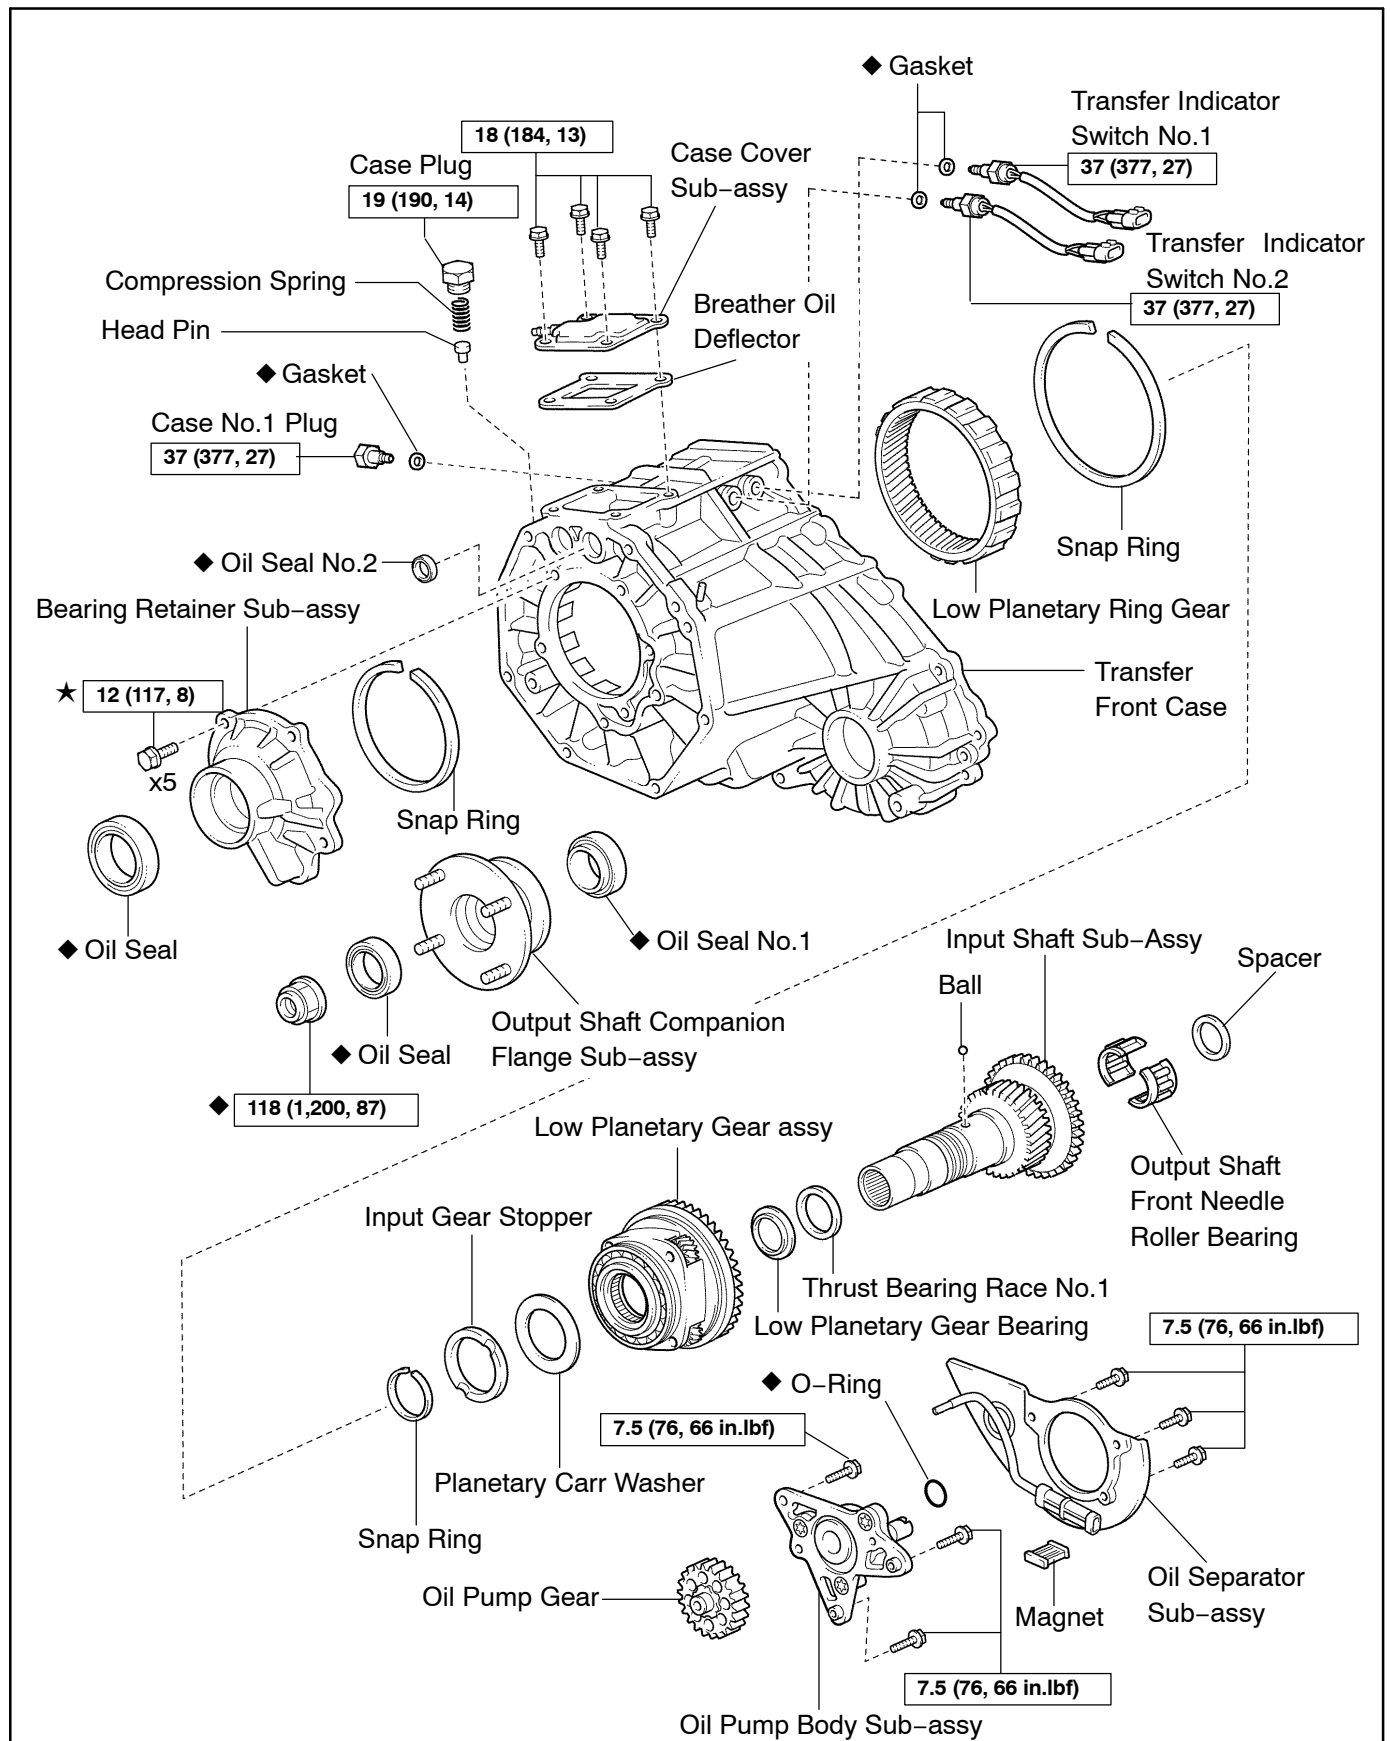


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

★ Precoated part

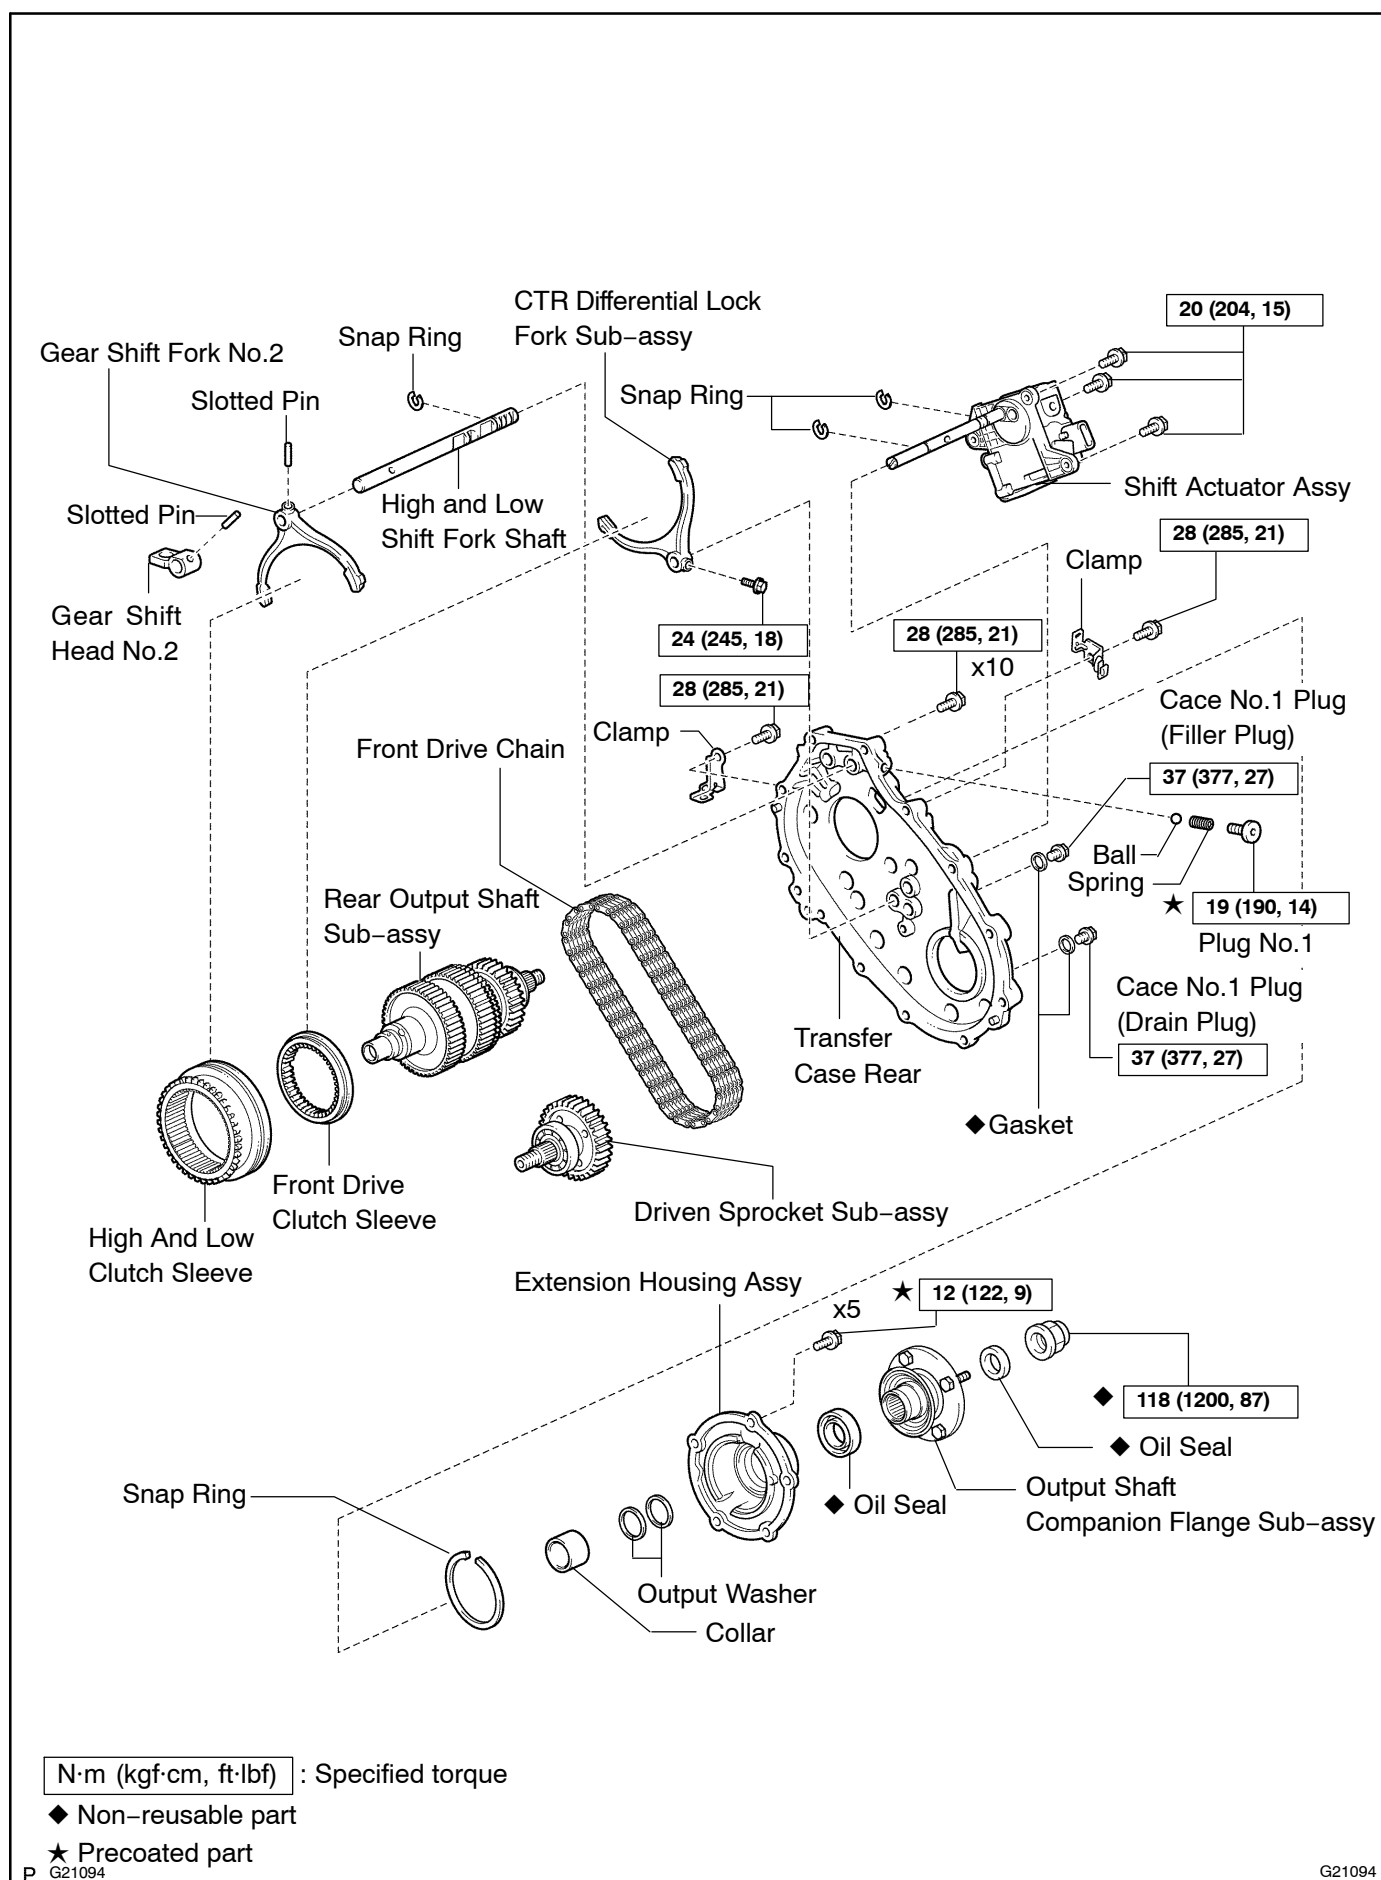

G21094


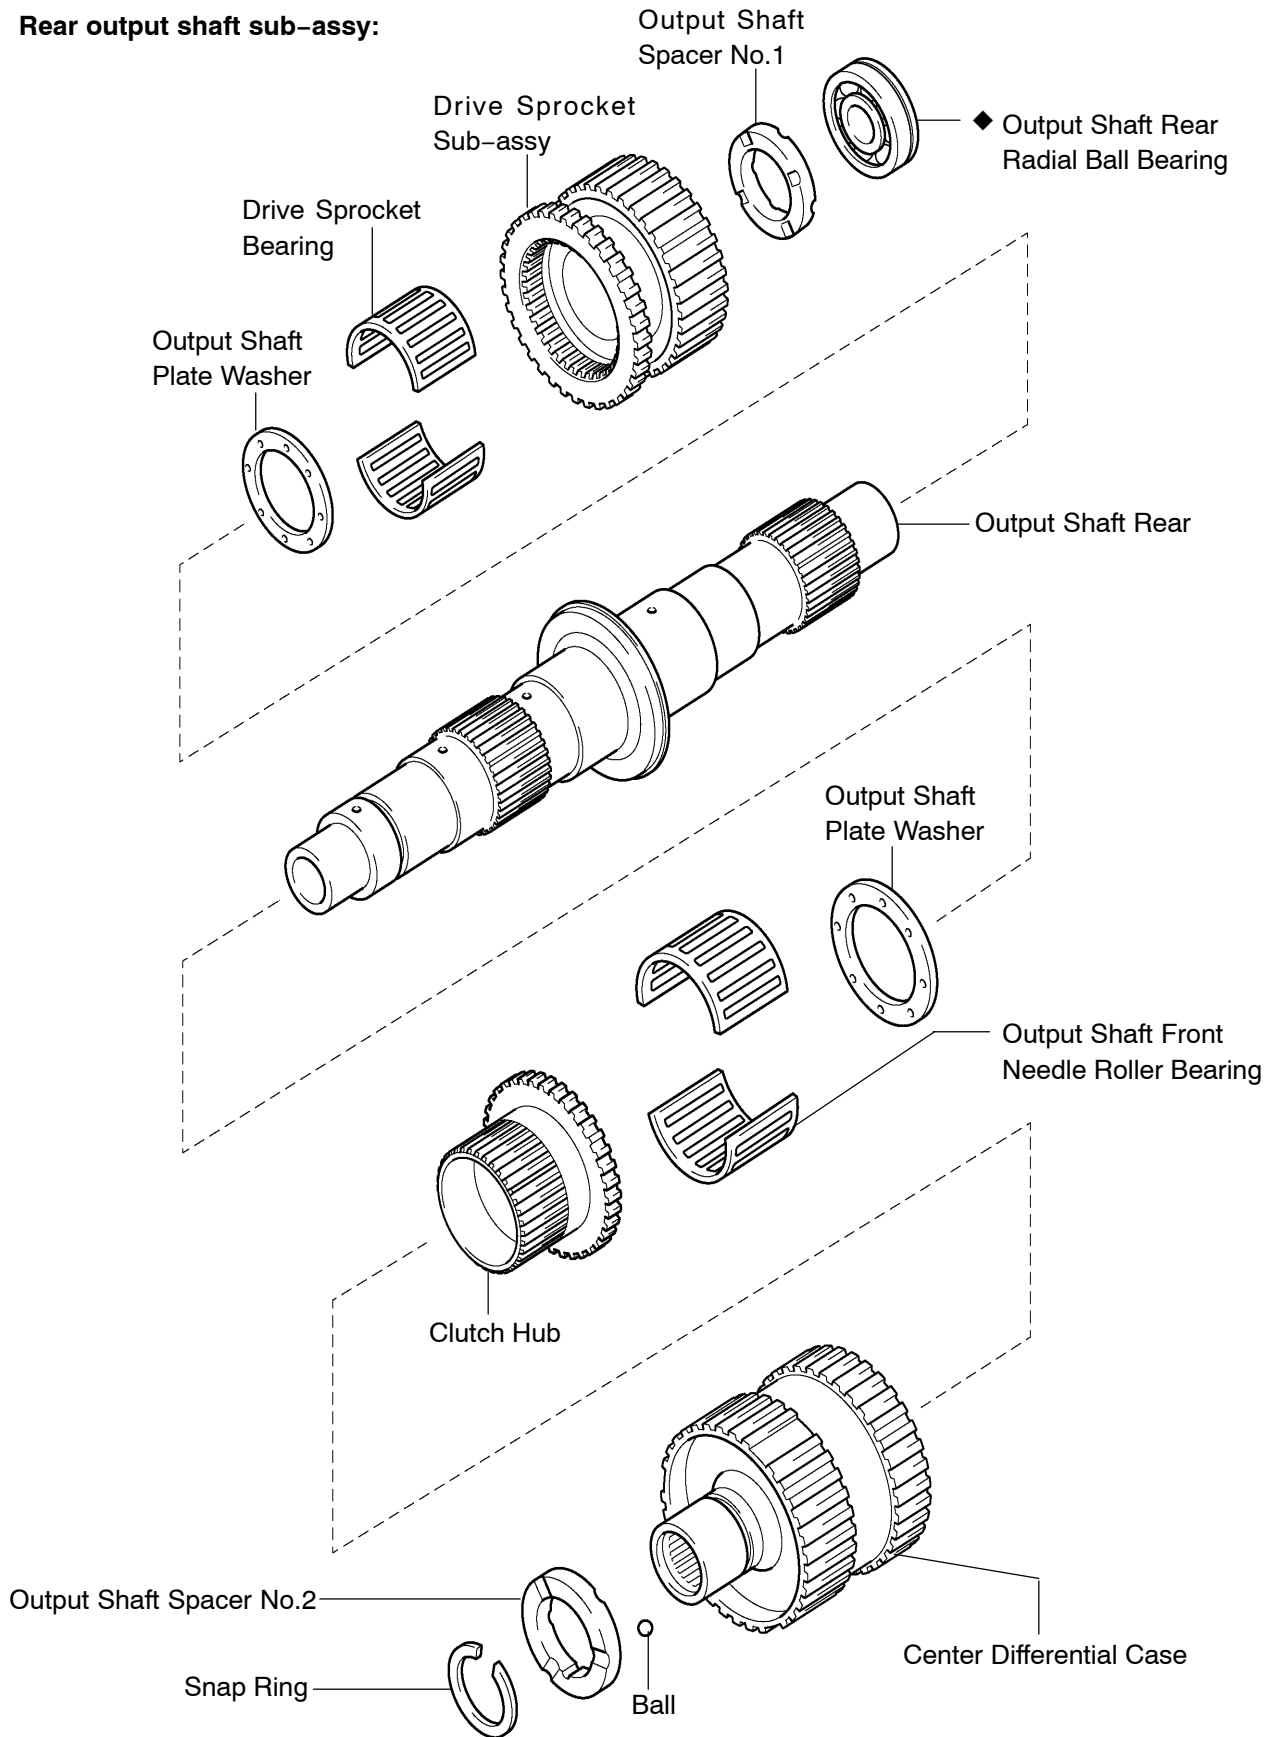
Rear output shaft sub-assy:

◆ Non-reusable part

G21093

Input shaft sub-assy:

◆ Seal Ring No.1

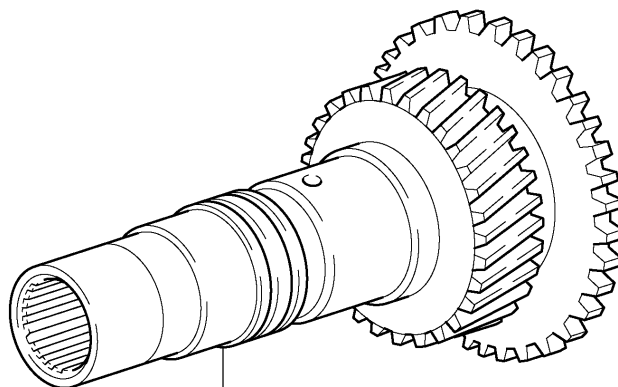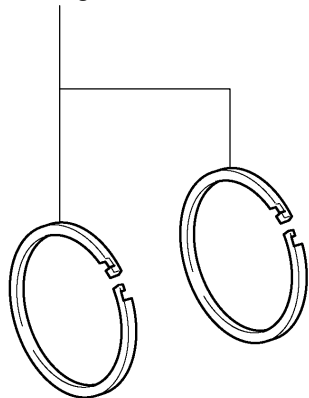

Input Shaft


◆ Non-reusable part

N



F43496

Driven sprocket sub-assy:

◆ Input Gear Radial Ball Bearing

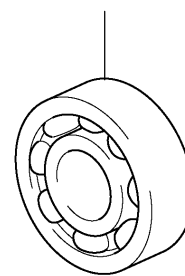

◆ Driven Sprocket Bearing

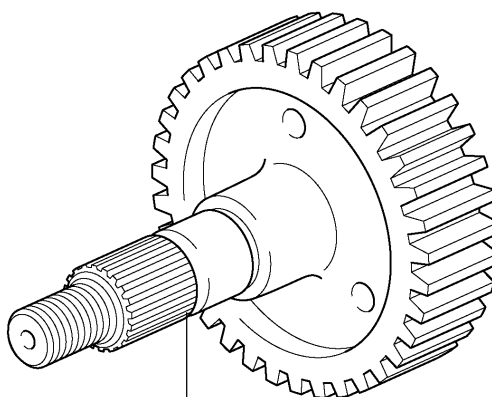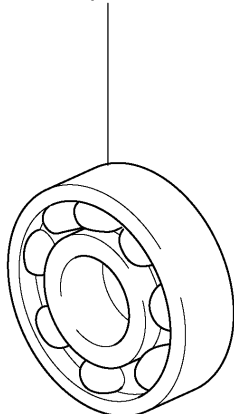


Driven Sprocket

◆ Non-reusable part

N

F43494

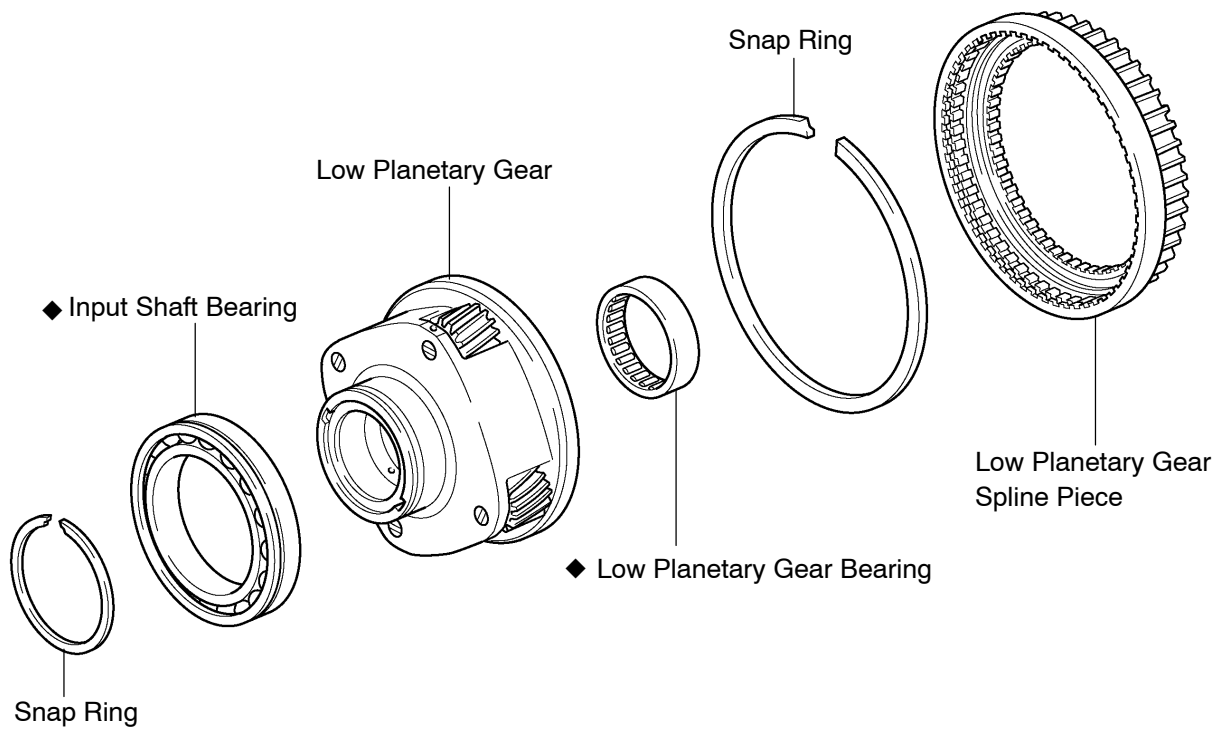Low planetary gear assy:

N ◆ Non-reusable part

F43495