

Service

Category Engine/Hybrid System

Section Engine Mechanical Market USA



Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2000 – 2003	ES300, RX300	
2004 – 2006	ES330, RX330	
2007 – 2009	ES350, GS350, GS450H, LS460, RX350	
2000 – 2006	GS300	
2000	GS400, LS400, SC300, SC400	
2001 – 2007	GS430	
2008 – 2009	GS460, IS F, LS600H, LX570	
2003 – 2009	GX470	
2006 – 2009	IS250, IS350	
2001 – 2005	IS300	
2001 – 2006	LS430	
2000 – 2007	LX470	
2006 – 2008	RX400H	
2002 – 2009	SC430	

(L) L-SB-0085-08 August 28, 2008 Page 2 of 9

Engine Serial Number Location

Introduction

The purpose of this TSIB is to assist in the identification and location of engine serial numbers on 2000 – 2009 model year Lexus vehicles.

NOTE

When writing a Field Technical and/or Product Report the serial number of the engine MUST be provided.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	-	_	-	-



Identification Procedure

ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER
	ES 330	2004 – 2006	3MZ- 1 #####
3MZ-FE	RX 330	2004 – 2006	1: Plant Code (1 – 9) ######: 6-Digit Serial Number (0 – 9)
	RX 400h	2006 – 2008	Location: On Left Side, Rear of Engine Block (as shown below)

ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER
	GS 300	2000 – 2005	2JZ- 1 #####
2JZ-GE	IS 300	2001 – 2005	1: Plant Code (1 – 9) #####: 6-Digit Serial Number (0 – 9)
	SC 300	2000	Location: On Left Side, Front of Engine Block (as shown below)



ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER			
2GR-FE	ES 350	2007 – 2009	2GR- 1 ###### 1: Plant Code (1 – 9) ######: 6-Digit Serial Number (0 – 9) Location: On Left Side, Rear of Engine Block (as shown below)			
	RX 350					

ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER
	GS 350	2007 – 2009	2GR- 1 ######
2GR-FSE	GS 450h	2007 – 2009	1: Plant Code (1 – 9) ######: 6-Digit Serial Number (0 – 9)
	IS 350	2006 – 2009	Location: On Right Side, Front of Engine Block (as shown below)



ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER
	GS 460	2008 – 2009	1UR- 1 #####
1UR-FSE	LS 460	2007 – 2009	1: Plant Code (1 – 9) ######: 6-Digit Serial Number (0 – 9) Location: On Left Side, Rear of Engine Block (as shown below)

ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER		
3GR-FSE	GS 300	2006	3GR- 1 ###### 1: Plant Code (1 - 9) ######: 6-Digit Serial Number (0 - 9) Location: On Right Side, Front of Engine Block (as shown below)		
	shown below)				



ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER
	GX 470	2003 – 2009	2UZ- 1 #####
2UZ-FE	LX 470	2000 – 2007	1: Plant Code (1 – 9) ######: 6-Digit Serial Number (0 – 9) Location: On Front of Engine Block, Under Intake Manifold (as shown below)

ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER		
2UR-GSE	IS F	2008 – 2009	2UR- 1 ##### 1: Plant Code (1 - 9) ######: 6-Digit Serial Number (0 - 9) Location: On Left Side, Rear of Engine Block (as shown below)		
	snown below)				



ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER
4GR-FSE	IS 250	2006 – 2009	4GR- 1 ###### 1: Plant Code (1 - 9) ######: 6-Digit Serial Number (0 - 9) Location: On Right Side, Front of Engine Block (as shown below)

ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER		
2UR-FSE	LS 600h	2008 – 2009	2UR- 1 ###### 1: Plant Code (1 - 9) ######: 6-Digit Serial Number (0 - 9) Location: On Left Side, Front of Engine Block (as shown below)		
	snown below)				



ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER
3UR-FE	LX 570	2008 – 2009	3UR- 1 ##### 1: Plant Code (1 - 9) ######: 6-Digit Serial Number (0 - 9) Location: On Right Side, Front of Engine Block (as shown below)

ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER			
3UZ-FE	GS 430	2001 – 2007	3UZ- 1 ##### 1: Plant Code (1 - 9) #####: 6-Digit Serial Number (0 - 9) Location: On Front of Engine Block, under Intake Manifold (as shown below)			
	LS 430	2001 – 2006				
	SC 430	2002 – 2009				



ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER	
1UZ-FE	GS 400	2000	1UZ- 1 ######	
	LS 400		1: Plant Code (1 – 9) ######: 6-Digit Serial Number (0 – 9) Location: On Front of Engine Block, under Intake Manifold (as shown below)	
	SC 400			

ENGINE MODEL	MODEL	MODEL YEAR	SERIAL NUMBER		
	ES 300		1MZ- 1 #####		
1MZ-FE	RX 300	2000 – 2003	1: Plant Code (1 – 9) ######: 6-Digit Serial Number (0 – 9) Location: On Left Side, Rear of Engine Block (as shown below)		