

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 milesIncludes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS, SC running change; iQ new model; Avensis Full Model Change

Fill operation added; Fuel Injection system maintenance added (Lexus IS250, GS300 and LS460 for Croatia only)

GASOLINE ENGINE			MAINTENANCE OPERATIONS												LC120					
SERVICE INTERVALS:			R: Replace or change or lubricate. F: Fill												1GR-FE (4.0 V6)					
Odometer reading or months, whichever comes first			ODOMETER READING												Months					
			× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	GRJ120/GRJ125			
MAINTENANCE ITEMS			× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54	() : for reference	02/08	03/11 04/08	05/08 06/08 07/07 08/08
Timing Belt			Replace every 150,000 km (90,000 miles)												—					
Valve Clearance (Sensory Inspection)*1															*I (Every 72 months)					
Drive belt		V-ribbed belt	Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)												Initial: 72 and then every 12 months					
Engine oil (API: SH, SJ) (ILSAC)		Normal	R			R			R			R			Every 12 months					
		Severe	R	R		R	R	R	R	R	R	R	R	R	Every 6 months					
Engine oil (API: SJ, SL) (ILSAC)		Normal	R			R			R			R			Every 12 months					
		Severe	R	R		R	R	R	R	R	R	R	R	R	Every 6 months					
Engine oil (API: SL, SM) (ILSAC)		Normal	R			R			R			R			Every 12 months					
		Severe	R	R		R	R	R	R	R	R	R	R	R	Every 6 months					
Engine oil filter		Normal	R			R			R			R			Every 12 months					
		Severe	R	R		R	R	R	R	R	R	R	R	R	Every 6 months					
Cooling and heater system *2															I Every 24 months					
Engine coolant		LLC (red/green) *3													R Initial: 36 months					
		S-LLC (pink) *4													I					
		First replace at 150,000 km (90,000 miles); after, every 90.000 km (54.000 miles)																		
Inverter coolant		S-LLC (pink) *4													I					
		First replace at 150,000 km (90,000 miles); after, every 90.000 km (54.000 miles)																		
Exhaust pipes and mountings															I Every 24 months					
Spark plugs		Platinum or Iridium Tipped type	Replace every 90,000 km (54,000 miles)												—					
		Others	I			R			I			I: Every 24 months R: Every 48 months								
Battery			No maintenance												—					
Fuel filter (Aygo only)			Replace every 180.000 km (108.000 miles)												15 years					
Fuel injection system			F F F F F F F												—					
Air cleaner filter (from October 2002, applicable to all models in production)		Normal	I			I			I			I			I: Every 24 months R: Every 48 months					
		Dusty road	I	I		I	I	I	I	I	R	I	I	I	I	I: Every 12 months R: Every 48 months				
Air cleaner filter		Normal	I			I			R			I			I: Every 24 months R: Every 48 months					
		Dusty road	Inspect every 2,500 km(1,500 miles) and replace every 45,000 km(27,000 miles) or 48 months.												—					
Fuel tank cap, fuel lines, connections and fuel vapor control valve															I Every 24 months					
Charcoal canister		*5													I —					
		Others													I Every 24 months					
		Aygo only													I —					
Charcoal canister filter		Normal													R —					
		Severe													I Every 24 months					
Charcoal canister filter															R Every 24 months					

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: For Sweden, Norway and Finland only.

*6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820) or equivalent

MAINTENANCE SCHEDULE - GENERAL 10,000 km

2008-6-23

Includes updates from MARCH until JUNE '08

New information: Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model

Fr diff. oil: "Toyota Genuine CVTF TC" added for New Avensis

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified t T: Tighten to specified torque.
R: Replace or change or lubricate.

CHASSIS AND BODY 2/2

SERVICE INTERVALS: Odometer reading or months, whichever comes first					ODOMETER READING																	LC 120										
				× 1,000 km	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75	80	Months	GRJ12#									
MAINTENANCE ITEMS																					05/08		06/08 07/07 08/08									
Front Differential oil	Differential integrated with transmission	M/T model	LV Gear oil API GL-4	Normal						I										I					Every 48 months							
				Severe						R										R					Every 48 months							
			API Gear oil GL-4 or GL-5							I										I					Every 48 months							
										R										R					Every 48 months							
		A/T model	WS	Normal						I										I					Every 24 months							
				Severe						I										R					I: Every 24 months R: Every 48 months							
			T-IV	Normal						I										I					Every 24 months							
				Severe						I										R					I: Every 24 months R: Every 48 months							
			Toyota Genuine CVTF TC	Normal						I										I					Every 24 months							
				Severe						I										R					I: Every 24 months R: Every 48 months							
	Differential separated from transmission (API Gear oil GL-5)			Normal	I					R					I					R					I: Every 12 months R: Every 48 months	●	●					
				Severe	R					R					R					R					R: Every 24 months	●	●					
					I					R					I					R					I: Every 12 months R: Every 48 months							
	Rear differential oil			API Gear oil GL-5	Normal	I					R					I					R					I: Every 12 months R: Every 48 months	●	●				
Severe					R					R					R					R					Every 24 months	●	●					
A/T fluid WS					I					R					I					R					I: Every 12 months R: Every 48 months							
				Normal						I										I					Every 24 months							
			Severe						I										R					I: Every 24 months R: Every 48 months								
Wheel bearing grease (tapered roller type wheel bearing only)			NLGI No. 2		R					R					R					R					Every 12 months	8	8					
Front and rear suspension				Normal	I					I					I					I					Every 12 months							
				Severe	I					I					I					I					Every 6 months							
				Normal	I					I					I					I					Every 6 months	●	●					
				Severe	I					I					I					I					Every 3 months	●	●					
Active height control suspension fluid - Suspension fluid AHC or equivalent				Replace every 100.000 km																—												
Active height control gas chamber									I					I					I					I					I: initial 48 months; then every 12 months			
Bolts and nuts on chassis and body				Severe only	T					T					T					T					T					Every 6 months	●	●
Tires and inflation pressure					I					I					I					I					I					Every 6 months	●	●
Lights, horn, wipers and washers					I					I					I					I					I					Every 6 months	●	●
Particle filter		Pollen removal type		Normal	C					C					R					C					R							
				Severe	C					C					R					C					R							
		Standard type		Normal						R										R						●						
				Severe	R					R					R					R						●						
		Semi-standard type		Normal & Severe						R										R												
					R					R					R					R												
Combination filter		High efficiency type	Normal & Severe		R					R					R					R							●					
					R					R					R					R							●					
				Replace when the service indicator light illuminates																												
Air conditioner refrigerant amount				I					I					I					I					Every 12 months	●	●						

8: Only thrus 8: Only thrust bush grease on vehicles equipped with free-wheel hubs

*3: Customers should inspect by themselves

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from MARCH until JUNE '08

New information: Manual transmission oil *API Gear oil GL-5* added; Yaris and Lexus IS Minor Change 08/08; Addition of LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis new model.

Transfer oil *Toyota Genuine ATF WS* added for LS460(L) 4WD.

A/T fluid: *Toyota Genuine CVTF TC* added for New Avensis

MAINTENANCE OPE

I: Inspect and correct I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

R: Replace or changeR: Replace or change or lubricate. L: Lubricate

CHASSIS AND BODY 1/2				R: Replace or change R: Replace or change or lubricate.												L: Lubricate						
SERVICE INTERVALS:			ODOMETER READING																LC 120			
Odometer reading or months, whichever comes first																			GRJ12#			
			× 1,000 km																Months			
MAINTENANCE ITEMS																			05/08 06/08 08/08			
Clutch pedal			No maintenance																			
Clutch pedal return spring and damper			Aygo only																			
Brake pedal and parking brake																			Every 6 months ● ●			
Brake linings and drums			Normal																Every 12 months ● ●			
(Include brake linings of parking brake)			Severe																Every 6 months ● ●			
Brake pads and discs			Normal																Every 6 months ● ●			
			Severe																Every 3 months ● ●			
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3																		I: Every 6 months R: Every 24 months ● ●			
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4																		I: Every 6 months R: Every 24 months			
	SAE J1704 or FMVSS No. 116 DOT4																		I: Every 6 months R: Every 24 months			
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3																		Every 6 months ● ●			
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4																		I: Every 6 months R: Every 24 months			
	SAE J1704 or FMVSS No. 116 DOT4																		Every 6 months			
Brake pipes and hoses			Normal																Every 12 months ● ●			
			Severe																Every 6 months ● ●			
Vacuum pump for brake booster (Diesel engines only)			Luk-AT or Pierburg Others		Replace every 195.000 km (121.000 miles) or 120 months																	
Power steering fluid			A/T fluid DEXRON® II or III																		Every 6 months ● ●	
Steering wheel, linkage and steering gear box			Normal																		Every 12 months	
			Severe																		Every 6 months ● ●	
Front wheel alignment (side slip)																			Every 3 months ● ●			
SRS airbag *1			Initial inspect at first 120 months from the vehicle registration date.																			
Steering knuckle, drag link, kingpin, center arm and steering linkage grease			NLGI No. 2		R R R R R R R R R R R R R R R R R R R R																Every 3 months	
Propeller shaft	NLGI No. 2		Normal		L L L L L L L L L L L L L L L L L L L L																Every 6 months 7 7	
			Severe		L L L L L L L L L L L L L L L L L L L L																Every 6 months 7 7	
			Normal		T T T T T T T T T T T T T T T T T T T T																Every 12 months	
			Severe		T T T T T T T T T T T T T T T T T T T T																Every 6 months	
Tightening bolts for propeller shaft			Normal		T T T T T T T T T T T T T T T T T T T T																Every 6 months ● ●	
			Severe		T T T T T T T T T T T T T T T T T T T T																Every 3 months ● ●	
Drive shaft boots			Normal		I I I I I I I I I I I I I I I I I I I I																Every 24 months ● ●	
			Severe		I I I I I I I I I I I I I I I I I I I I																Every 12 months ● ●	
Tightening bolts for drive shaft			Normal		T T T T T T T T T T T T T T T T T T T T																Every 24 months	
			Severe		T T T T T T T T T T T T T T T T T T T T																Every 12 months	
			Normal		T T T T T T T T T T T T T T T T T T T T																Every 6 months	
			Severe		T T T T T T T T T T T T T T T T T T T T																Every 3 months	
Suspension ball joints and dust covers			Normal		I I I I I I I I I I I I I I I I I I I I																Every 12 months	
			Severe		I I I I I I I I I I I I I I I I I I I I																Every 6 months	
Shift lever for 6-speed manual transmission					I I I I I I I I I I I I I I I I I I I I																Every 6 months ● ●	
Automatic transmission fluid	WS	Normal		I I I I I I I I I I I I I I I I I I I I																Every 24 months		
		Severe		I I I I I I I I I I I I I I I I I I I I																I: Every 24 months R: Every 48 months		
	T-IV	Normal		I I I I I I I I I I I I I I I I I I I I																Every 24 months ● ●		
		Severe		I I I I I I I I I I I I I I I I I I I I																I: Every 24 months R: Every 48 months ● ●		
	Toyota Genuine CVTF TC				I I I I I I I I I I I I I I I I I I I I																Every 24 months	
					I I I I I I I I I I I I I I I I I I I I																I: Every 24 months R: Every 48 months	
	A/T fluid D-II or DEXRON III	Normal		I I I I I I I I I I I I I I I I I I I I																I: Every 24 months R: Every 48 months		
		Severe		I I I I I I I I I I I I I I I I I I I I																I: Every 12 months R: Every 24 months		
Manual transmission oil	LV Gear oil API GL-4	Normal		I I I I I I I I I I I I I I I I I I I I																Every 48 months		
		Severe		R R R R R R R R R R R R R R R R R R R																Every 48 months		
	API Gear oil GL-4 or GL-5	Normal		I I I I I I I I I I I I I I I I I I I I																Every 48 months ● ●		
		Severe		R R R R R R R R R R R R R R R R R R R																Every 48 months ● ●		
	API Gear oil GL-5		Normal		I I I I I I I I I I I I I I I I I I I I																Every 48 months	
			Severe		R R R R R R R R R R R R R R R R R R R																Every 48 months	
Transfer oil	Gear oil API GL-4 or GL-5	Normal		I I I I I I I I I I I I I I I I I I I I																Every 48 months		
		Severe		R R R R R R R R R R R R R R R R R R R																Every 48 months		
	Gear oil API GL-5	Normal		I I I I I I I I I I I I I I I I I I I I																I: Every 12 months R: Every 48 months		
		Severe		R R R R R R R R R R R R R R R R R R R																I: Every 24 months		
	Toyota Genuine Differential Oil LX85 (API GL-5)	Normal		I I I I I I I I I I I I I I I I I I I I																I: Every 12 months R: Every 48 months		
		Severe		R R R R R R R R R R R R R R R R R R R																R: Every 24 months		
	Toyota Genuine ATF WS		Normal		I I I I I I I I I I I I I I I I I I I I																I: Every 24 months	
			Severe		I I I I I I I I I I I I I I I I I I I I																I: Every 24 months R: Every 48 months	

*1: After 120 months from the vehicle registration date, inspect every 24 months.

7: Lubricate 7: Lubricate within 24 hours after submerging

MAINTENANCE SCHEDULE - GENERAL 10,000 km

Includes updates from **MARCH** until **JUNE '08**

New information: Yaris and Lexus IS Minor Change 08/08; Addition of TMMF Yaris, LS460(L) 4WD (USF45,46); LC120, LC V8, Lexus GS, LS and SC running change; Avensis Full Model Change

Fuel Injection Cleaner added on Avensis 1AZ and 2AZ

GASOLINE ENGINE		MAINTENANCE OPERATIONS I: Inspect and correct or replace as necessary R: Replace or change or lubricate. F: Fill																LC120					
SERVICE INTERVALS: Odometer reading or months, whichever comes first			ODOMETER READING																Months (): for reference	1GR-FE (4.0 V6)			
		× 1,000 km	1	5	10	15	20	25	30	35	40	45	50	55	60	65	70	75		80	GRJ120/5		
MAINTENANCE ITEMS																							05/08 06/08 08/08
Timing Belt				Replace every 150,000 km																—			
Valve Clearance	Sensory Inspection *1																		I	Every 96 months	●		
Drive belts				I					I					I					I	Every 24 months	●		
Engine oil (API: SJ, SL) (ILSAC)		Normal			R		R		R		R		R		R		R		R	Every 12 months			
		Severe			R		R		R		R		R		R		R		R	Every 6 months			
Engine oil (API: SL, SM) (ILSAC)		Normal			R		R		R		R		R		R		R		R	Every 12 months	●		
		Severe			R		R		R		R		R		R		R		R	Every 6 months	●		
Engine oil filter		Normal			R		R		R		R		R		R		R		R	Every 12 months	●		
		Severe			R		R		R		R		R		R		R		R	Every 6 months	●		
Cooling and heater system *2				First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																●			
Engine coolant	S-LLC (pink) *4								I										I	Every 24 months	●		
				First replace at 160,000 km; after, every 80.000 km																	●		
Inverter coolant	S-LLC (pink) *4								I										I	Every 24 months			
				First replace at 160,000 km; after, every 80.000 km																			
Exhaust pipes and mountings				I					I					I					I	Every 12 months	●		
Spark plugs	Platinum or Iridium Tipped type			Replace every 100,000 km																—			
	Others								R										R	Every 48 months	●		
Battery				I		I		I		I		I		I		I		I	Every 12 months	●			
Fuel filter (including the filter in the fuel tank)																			R	Every 96 months	●		
		Aygo only	R																R	Every 48 months			
Fuel injection system *5		F F F F F F F F																--					
		When the "Injector Maintenance Required" message is displayed on the multi-information display																					
Air cleaner filter (including checking pre-air cleaner if equipped)	Paper type	Normal	I					R					I					R	I: Every 24 months R: Every 48 months				
		Dusty road	Inspect every 2,500km/3months and replace every 40,000km/48months.																				
		Normal	I					R					I					R	I: Every 24 months R: Every 48 months	●			
		Dusty road	I		I		I		R		I		I		I	R	I: Every 24 months R: Every 48 months	●					
	TNF (Thin Non-woven Fabrics) type	Normal	Inspect every 10,000km/12months and replace every 100,000km/120months.																				
		Dusty road	Inspect every 5,000km/6months and replace every 100,000km/120months.																				
Fuel tank cap, fuel lines, connections and fuel vapor control valve				First inspect at 40,000km/24months and 80,000km/48months; after, every 20,000km/12months																●			
Charcoal canister									I										I	Every 24 months	●		
	Aygo only			I					R					I					R	I: Every 24 months R: Every 48 months			
Charcoal canister filter		Aygo only			I				R				I				R	I: Every 24 months R: Every 48 months					

*1: Check for tappet noise and engine vibration and adjust if necessary.

*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

*5: Toyota genuine fuel injector cleaner (P/N 08813-00820) or equivalent

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

2008-6-23

Includes updates fromMARCH until JUNE '08

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change

Toyota Genuine CVTF maintenance added for new CVT's

MAINTENANCE OPERATIONS

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.

R: Replace or change or lubricate.

C: Clean

CHASSIS AND BODY 2/2

SERVICE INTERVALS: Odometer reading or months, whichever comes first						ODOMETER READING													Land Cruiser 120 series				Land Cruiser 200 series				
																		Months	GRJ12# KDJ12#			UZJ200 VDJ200					
					× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5		90								
MAINTENANCE ITEMS					× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5		54								
Front Differential oil	Differential integrated with transmission	M/T model	API Gear oil GL-4 or GL-5	Normal										I					Every 48 months								
				Severe										R					Every 48 months								
			LV Gear oil API GL-4	Normal												I					Every 48 months						
				Severe													R					Every 48 months					
		A/T model	Toyota Genuine ATF type T-IV	Normal												I				I	Every 36 months						
				Normal													I				Every 48 months						
				Severe													I				R	I: Every 36 months R: Every 72 months					
				Normal													I				I	Every 36 months					
				Normal													I				Every 48 months						
				Severe													I				R	I: Every 36 months R: Every 72 months					
			Toyota Genuine CVTF TC	Normal													I				Every 48 months						
				Severe													I				R	I: Every 36 months R: Every 72 months					
	Differential separated from transmission (API Gear oil GL-5)																		R	Every 48 months	●	●	●	●			
	Rear differential oil			API Gear oil GL-5															R	Every 48 months	●	●	●	●			
				A/T fluid WS	Normal											I				I	Every 36 months						
					Severe												I				R	I: Every 36 months R: Every 72 months					
					Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease			NLGI No. 2	Normal													R	Every 24 months	8	8	8	
	Severe																			R	Every 12 months	8	8	8			
	Front and rear suspension					Normal														I	Every 24 months	●	●	●	●		
						Severe																I	Every 12 months	●	●	●	●
Active height control suspension fluid - Suspension fluid AHC or equivalent																		R	—				● OPT				
Active height control gas chamber																			I: initial 48 months; then every 12 months				● OPT				
Bolts and nuts on chassis and body				Severe only				T		T		T	T		T			T	Every 12 months	●	●	●	●				
Tires and inflation pressure				Normal						I				I				I	Every 24 months	●	●	●	●				
				Severe													I			I	Every 12 months	●	●	●	●		
Air conditioning filter																											
					Normal																	I	Every 24 months				
					Dusty road																	I	Every 12 months				
					Normal																	R	Every 24 months				
					Dusty road																	R	Every 12 months				
					Normal & Dusty road																	R	Every 24 months				
Particle filter	Foldable type																	R	"Clean" replaced by "Inspect"								
																		R	Refer to TME letter of October 2007 on "Potential Health Risk From				●				
	Pollen removal type																	R	Cleaning of Cabin Air Filter Elements			●					
	Combination filter	Standard type & high efficiency type	Normal																R		●	●	●				
Dusty road																		R		●	●	●					
Combination filter (high efficiency type)		Normal																R									
	Dusty road																	R									
Replace when the service indicator light illuminates																											
Corrosion Inspection																		I	Every 24 months	●	●	●	●				

8: On vehicles with free-wheel hubs, only thrust bush grease (wheel bearing grease is maintenance free)

8: On vehicles with free-wheel hubs, only thrust bush grease (wheel bearing grease is maintenance free)

8: On vehicles with free-wheel hubs, only thrust bush grease (wheel bearing grease is maintenance free)

MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles

Includes updates from **MARCH until JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avenis Full Model Change Aygo 1.0p Clutch mechanism: Inspection interval shortened; Clutch fluid Replacement added for new MMT's; Toyota Genuine CVTF maintenance added for new CVT's

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

MAINTENANCE OPERATIONS

Correction: Lexus IS Manual transmission oil changed to "API Gear oil GL-5" only

I: Inspect and correct or replace as necessary.

T: Tighten to specified torque.

CHASSIS AND BODY 1/2

R: Replace or change or lubricate.

L: Lubricate

SERVICE INTERVALS:			ODOMETER READING												Land Cruiser 120 series					
Odometer reading or months, whichever comes first															GRJ12# KDJ12#					
			× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	Months			
MAINTENANCE ITEMS			× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54		02/08	03/11 05/08	06/08 07/07 08/08
Clutch pedal, return spring and damper - Mechanical type				I			I			I			I			I				
Brake pedal and parking brake																	Every 24 months	●	●	●
Brake linings and drums			Normal														Every 24 months	●	●	●
(Include brake linings of parking brake)			Severe	I			I			I			I			I	Every 12 months	●	●	●
Brake pads and discs			Normal				I			I			I			I	Every 12 months	●	●	●
			Severe	I	I		I	I		I	I		I	I		I	Every 6 months	●	●	●
Clutch fluid	SAE J1703 or FMVSS No. 116 DOT3																Every 24 months	●	●	●
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4						R			R			R			R	Every 24 months			
	SAE J1704 or FMVSS No. 116 DOT4						I			I			I			I	Every 24 months			
Clutch fluid for auto clutch system							R			R			R			R	Every 24 months			
Sequential M/T system fluid							I			I			I			I	Every 24 months			
Brake fluid	SAE J1703 or FMVSS No. 116 DOT3									R			R			R	Every 24 months	●	●	●
	SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4									R			R			R	Every 24 months			
	SAE J1704 or FMVSS No. 116 DOT4									R			R			R	Every 24 months			
Brake pipes and hoses										I			I			I	Every 24 months	●	●	●
Vacuum pump for brake booster (Diesel engines only)			ixetic (Luk-AT) or Pierburg Others	Replace every 195,000 km (121,000 miles) or 120 months																
				Inspect every 195,000 km (121,000 miles) or 120 months																
Power steering fluid			A/T fluid DEXRON® II or III TOYOTA P.S. fluid EH or equivalent													15 15 15				
																● ● ●				
Steering wheel, linkage and steering gear box			Normal				I			I			I			I	Every 24 months	●	●	●
			Severe	I			I	I		I	I		I	I		I	Every 12 months	●	●	●
SRS airbag *1				Initial inspect at first 120 months from the vehicle registration date.																
Propeller shaft	NLGI No. 1 or No. 2	Normal		L	L		L	L		L	L		L	L		L	Every 24 months	7	7	7
		Severe		L	L	L	L	L	L	L	L	L	L	L	L	L	Every 12 months	7	7	7
Propeller shaft bolts		Normal				T				T			T			T	Every 24 months	●	●	●
		Severe			T	T		T	T	T		T	T		T	T	Every 12 months	●	●	●
		Normal				I				I			I			I	Every 24 months			
Drive shaft boots		Severe	I			I			I	I		I	I		I	I	Every 12 months			
		Normal				I			I	I		I	I		I	I	Every 12 months	●	●	●
		Severe	I	I		I	I		I	I		I	I		I	I	Every 6 months	●	●	●
Drive shaft bolts		Normal				T			T			T			T	T	Every 24 months			
		Severe			T	T		T	T	T		T	T		T	T	Every 12 months			
		Normal			T	T		T	T	T		T	T		T	T	Every 12 months	●	●	●
Suspension ball joints and dust covers		Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 6 months	●	●	●
		Normal				I			I			I			I	I	Every 24 months			
		Severe	I			I			I	I		I	I		I	I	Every 12 months			
Shift lever of 6-speed manual transmission		Normal				I			I			I			I	I	Every 12 months	●	●	●
		Severe	I	I		I	I		I	I		I	I		I	I	Every 6 months			
Automatic transmission fluid	Vehicles produced before July, '99	Normal							I			R				I	I: Every 12 months R: Every 48 months			
		Severe					I		R		I		R		I	R	I: Every 12 months R: Every 24 months			
	Vehicles produced after August, '99	Toyota Genuine ATF type T-IV	Normal										I			I	Every 36 months	●		
			Normal										I		I	Every 48 months				
		Toyota Genuine ATF WS	Severe										I		R	I: Every 36 months R: Every 72 months	●			
			Normal										I		I	Every 36 months		●		
			Normal										I		I	Every 48 months			●	
		Toyota Genuine CVT F TC	Severe										I		R	I: Every 36 months R: Every 72 months				
			Normal										I		I	Every 48 months				
		Other	Normal										I		R	I: Every 36 months R: Every 72 months				
	Severe								I		R		I	R	I: Every 18 months R: Every 36 months					
Manual transmission oil and transfer oil if so equipped (Including auto clutch system)	API Gear oil GL-5	Normal										I			I	Every 48 months				
		Severe										R			I	Every 48 months				
	API Gear oil GL-4 or GL-5	Normal										I			I	Every 48 months	●	●	●	
		Severe										R			I	Every 48 months	●	●	●	
	LV Gear oil API GL-4	Normal										I			I	Every 48 months				
		Severe										R			I	Every 48 months				
	Other (GL-4 or GL-5)	Normal										I			I	Every 48 months				
Transfer oil	API Gear oil GL-4 or GL-5	Normal										I			I	Every 48 months				
		Severe										R			I	Every 48 months	●	●	●	
	API Gear oil GL-5	Normal										R			R	Every 48 months				
		Severe										R			R	Every 48 months				
	Toyota Genuine Differential Oil LX85 (API GL-5)	Normal										I			I	Every 48 months	●	●	●	
		Severe										R			R	Every 48 months				
	Toyota Genuine ATF WS	Normal										I			I	Every 48 months				
		Severe										I			R	I: Every 36 months R: Every 72 months				

*1: After 120 months from the vehicle registration date, inspect every 24 months.

7: Lubricate within 24 hurs after submerging

15: Replace the blades with new ones; blades are not reusable

7: Lubricate within 24 hours after submerging

15: Replace the blades with new ones; blades are not reusable

7: Lubricate within 24 hours after submerging

15: Replace the blades with new ones; blades are not reusable