

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Ambient Temp. Sensor	90980-11070	B10	Back Door Courtesy Light	90980-10860
A 2	A/C Lock Sensor	90980-11016	B11	Back Door Courtesy SW	90980-10789
	A/C Magnetic Clutch			Back Door Opener Motor	
A 3	Air Flow Meter	90980-11317	B12	Back Door Lock Assembly	90980-11537
A 4	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	B13	Back Door Opener SW	90980-11967
A 5	Air Fuel Ratio Sensor (Bank 2 Sensor 1)		B14	Back-Up Light LH	90980-10860
A 6	Airbag Sensor Front LH	90980-11856	B15	Back-Up Light RH	
A 7	Airbag Sensor Front RH		B16	Buckle SW (Front Passenger's Side)	90980-12366
A 8	Alternator	Occupant Detection Sensor			
A 9	Alternator	90980-11964	C 1	Cooling Fan ECU	90980-12058
A10	A/C Amplifier	90980-12149	C 2	Counter Gear Speed Sensor	90980-11156
A11	A/C Amplifier	90980-12150	C 3	Crankshaft Position Sensor	90980-10947
A12	A/C Room Temp. Sensor	90980-10825	C 4	Center Cluster Integration Panel	90980-11911
A13	A/C Solar Sensor	90980-12056	C 5	Center Speaker	90980-10860
	Automatic Light Control Sensor		C 6	Cigarette Lighter	90980-10760
A14	A/C Thermistor	90980-11918	C 7	Cigarette Lighter Illumination	90980-11148
A15	Accel Position Sensor	90980-11858	C 8	Combination Meter	90980-12155
A16	Access Mode SW	90980-10933	C 9	Combination Meter	90980-12200
A17	AFS ECU	90980-12259	C10	Combination SW	90980-12359
A18	AFS ECU	90980-12153	C11	Combination SW	90980-12358
A19	Air Inlet Control Servo Motor	90980-11909	C12	Combination SW	90980-12259
A20	Air Mix Control Servo Motor (Driver Side)		C13	Combination SW	90980-12183
A21	Air Mix Control Servo Motor (Front Passenger Side)		C14	Console Box Illumination	90980-11299
A22	Air Vent Mode Control Servo Motor		C15	Curtain Shield Airbag Squib LH	90980-12219
A23	Airbag Sensor Assembly	82824-50160	C16	Curtain Shield Airbag Squib RH	
A24	Airbag Sensor Assembly	90980-11872	D 1	DLC3	90980-11665
A25	Airbag Sensor Assembly	82824-50150	D 2	Double Door Lock ECU	90980-10807
A26	Airbag Squib (Steering Wheel Pad)	90980-12160	D 3	Door Control Receiver	90980-11909
A27	Airbag Squib No.1 (Front Passenger Airbag Assembly)	90980-12224	D 4	Door Courtesy Light Front LH	90980-11148
A28	Airbag Squib No.2 (Front Passenger Airbag Assembly)	90980-12219	D 5	Door Courtesy Light Front RH	
A29	Antenna Amplifier	90980-10871	D 6	Door Courtesy SW Front LH	90980-10871
A30	Auto Wiper ECU	90980-10801	D 7	Door Courtesy SW Front RH	
A31	Auto Wiper ECU	90980-12183	D 8	Door Courtesy SW Rear LH	
A32	AFS Off SW	90980-10825	D 9	Door Courtesy SW Rear RH	
B 1	Brake Fluid Level Warning SW	90980-11207	D10	Door Key Lock and Unlock SW (Driver's Side)	90980-12226
B 2	Blower Motor	90980-10385		Door Lock Motor (Driver's Side)	
B 3	Blower Motor Controller	90980-11676		Door Unlock Detection SW (Driver's Side)	
B 4	Body ECU	90980-12328		Double Lock Motor (Driver's Side)	
B 5	Body ECU	90980-12329		Double Lock Position SW (Driver's Side)	
B 6	Body ECU	90980-12150	D11	Door Lock Control SW Front LH	90980-11950
B 7	Body ECU	90980-12330	D12	Door Lock Control SW Front RH	
B 8	Brake Pedal Load Sensing SW	90980-10860			
B 9	Buckle SW (Driver's Side)	90980-10942			
	Seat Position Airbag Sensor				

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D13	Door Lock Motor (Front Passenger's Side)	90980-12226	H 1	Headlight Cleaner Control Relay	90980-10939
	Door Unlock Detection SW (Front Passenger's Side)		H 2	Headlight Cleaner Motor	90980-11410
	Double Lock Motor (Front Passenger's Side)		H 3	Headlight LH (w/ Adaptive Front-Lighting System)	90980-11144
	Double Lock Position SW (Front Passenger's Side)			Headlight LH (w/o Adaptive Front-Lighting System)	90980-11028
D14	Door Lock Motor Rear LH		H 4	Headlight RH (w/ Adaptive Front-Lighting System)	90980-11144
	Door Unlock Detection SW Rear LH			Headlight RH (w/o Adaptive Front-Lighting System)	90980-11028
	Double Lock Motor Rear LH		H 5	Headlight LH	90980-11255
	Double Lock Position SW Rear LH		H 6	Headlight LH	90980-11659
D15	Door Lock Motor Rear RH		H 7	Headlight LH	90980-10942
	Door Unlock Detection SW Rear RH		H 8	Headlight RH	90980-11255
	Double Lock Motor Rear RH		H 9	Headlight RH	90980-11659
	Double Lock Position SW Rear RH		H10	Headlight RH	90980-10942
D16	Driving Position Memory SW	90980-11950	H11	Heated Oxygen Sensor (Bank 1 Sensor 1)	90980-11930
E 1	ECT Solenoid	90980-12326	H12	Height Control Sensor Front LH	90980-11860
E 2	EFI Water Temp. Sensor	90980-10737	H13	Height Control Sensor Front RH	
E 3	Engine Hood Courtesy SW	90980-11189	H14	Height Control Solenoid Valve Front	90980-11143
E 4	Engine Oil Level Sensor	90980-11235	H15	Horn LH	90980-10619
E 5	ECT Pattern Select SW	90980-11950	H16	Horn RH	
E 6	Engine and ECT ECU	90980-12142	H17	Headlight Beam Level Control ECU	90980-11406
E 7	Engine and ECT ECU	90980-12146	H18	Headlight Cleaner SW	90980-11950
E 8	Engine and ECT ECU	90980-12143	H20	Heated Oxygen Sensor (Bank 2 Sensor 1)	90980-11929
E 9	Engine and ECT ECU	90980-12144	H21	Height Control OFF SW	90980-10860
E10	Engine and ECT ECU	90980-12145	H22	Height Control SW	90980-11986
F 1	Front Clearance Light LH	90980-11156	H23	Height Control Compressor Assembly	90980-11579
F 2	Front Clearance Light RH		H24	Height Control Compressor Assembly	90980-11013
F 3	Front Fog Light LH	90980-11660	H25	Height Control Sensor Rear LH	90980-11860
F 4	Front Fog Light RH		H26	Height Control Sensor Rear RH	
F 5	Front Side Turn Signal Light LH	90980-11162	H27	Height Control Solenoid Valve Rear	90980-11918
F 6	Front Side Turn Signal Light RH		H28	High Mounted Stop Light	
F 7	Front Turn Signal Light LH	90980-11019	I 1	Idle Air Control Valve	90980-11156
F 8	Front Turn Signal Light RH		I 2	Ignition Coil and Igniter No.1	90980-11885
F 9	Front Washer Motor		I 3	Ignition Coil and Igniter No.2	
F10	Front Window Deicer	I 4	Ignition Coil and Igniter No.3		
F11	Front Wiper Motor	I 5	Ignition Coil and Igniter No.4		
F12	Front Power Outlet	I 6	Ignition Coil and Igniter No.5		
F13	Front Squawker LH	I 7	Ignition Coil and Igniter No.6		
F14	Front Squawker RH	I 8	Injector No.1	90980-11153	
F15	Fuel Lid Opener SW	I 9	Injector No.2		
F16	Front Interior Light	I10	Injector No.3		
F17	Fuel Lid Opener Motor	I11	Injector No.4		
F18	Fuel Pump	I12	Injector No.5		
	Fuel Sender (Main)	I13	Injector No.6		
G 1	Gateway ECU	90980-11911	I14		Ignition SW
G 2	Glove Box Light	90980-11098			

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
I15	Inner Mirror	90980-11794	J40	Junction Connector	90980-11539
I16	Inside Handle Illumination Front LH	90980-12063	J41	Junction Connector	90980-11542
I17	Inside Handle Illumination Front RH		J42	Junction Connector	
I18	Inside Handle Illumination Rear LH		J43	Junction Connector	90980-12355
I19	Inside Handle Illumination Rear RH		J44	Junction Connector	90980-10871
J 1	Junction Connector	90980-11194	J45	Junction Connector	90980-12355
J 2	Junction Connector		J46	Junction Connector	90980-12374
J 3	Junction Connector		J47	Junction Connector	
J 4	Junction Connector		J48	Junction Connector	
J 5	Junction Connector		J49	Junction Connector	
J 6	Junction Connector	90980-11686	K 1	Keyless Buzzer	90980-11142
J 7	Junction Connector	90980-11661	K 2	Knock Sensor No.1	90980-11166
J 8	Junction Connector		K 3	Knock Sensor No.1	90980-11875
J 9	Junction Connector	90980-11915	K 4	Knock Sensor No.2	90980-11166
J10	Junction Connector	90980-11529	K 5	Knock Sensor No.2	90980-11875
J11	Junction Connector	90980-11915	K 6	Key Interlock Solenoid	90980-10795
J12	Junction Connector	90980-11542		Unlock Warning SW	
J13	Junction Connector		90980-11661	K 7	Kick Down SW
J14	Junction Connector	K 8		Knee Airbag Squib	90980-12253
J15	Junction Connector	L 1		License Plate Light LH	90980-11148
J16	Junction Connector	90980-11542	L 2	License Plate Light RH	
J17	Junction Connector	90980-11661	L 3	Luggage Compartment Light	90980-10860
J18	Junction Connector (LHD)		90980-11661	M 1	Multi Display
	Junction Connector (RHD)	90980-11542	M 2	Multi Display	90980-11909
J19	Junction Connector (LHD)	90980-11661	M 3	Multi Display	90980-10799
	Junction Connector (RHD)	90980-11542	M 4	Multi Display	90980-11923
J20	Junction Connector	90980-11661	M 5	Moon Roof Control ECU (Multi Panel Type Moon Roof)	90980-10997
J21	Junction Connector			Moon Roof Control ECU (Normal Type Moon Roof)	90980-10801
J22	Junction Connector	90980-10871	N 1	Neutral Start SW	90980-12362
J23	Junction Connector	90980-12355	N 2	Noise Filter	90980-10843
J24	Junction Connector		N 3	Navigation ECU	90980-11923
J25	Junction Connector		N 4	Navigation ECU	90980-11973
J26	Junction Connector		N 5	Noise Filter and Rear Window Defogger	90980-11259
J27	Junction Connector		N 6	Noise Filter and Rear Window Defogger	
J28	Junction Connector	90980-11661	O 1	Oil Pressure SW	90980-11363
J29	Junction Connector		O 2	Overhead J/B	90980-12153
J30	Junction Connector		P 1	Power Steering Oil Pressure SW	90980-11428
J31	Junction Connector		P 2	Pressure SW	90980-10943
J32	Junction Connector		P 3	Panel Relay	82660-20340
J33	Junction Connector		P 4	Parking Brake SW	90980-10871
J34	Junction Connector	90980-11542	P 5	Pneumatic Tank Solenoid Valve	90980-12194
J35	Junction Connector	90980-11686	P 6	Power Back Door Off SW	90980-10825
J36	Junction Connector		90980-11542	P 7	Power Back Door Opener/Closer SW
J37	Junction Connector	90980-11529	P 8	Power Back Door Closer SW	90980-10860
J38	Junction Connector	90980-11529			
J39	Junction Connector	90980-11542			

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
P 9	Power Back Door Drive Unit	90980-11527	R 5	Remote Control Mirror SW (w/ Driving Position Memory)	90980-11989
P10	Power Back Door ECU	90980-12203		Remote Control Mirror SW (w/o Driving Position Memory)	90980-11657
P11	Power Back Door ECU	90980-11362	R 6	Rheostat	90980-12113
P12	Power Back Door Touch Sensor LH	90980-11917		Trip SW	
P13	Power Back Door Touch Sensor RH		90980-11142	R 7	Rain Sensor
P14	Power Back Door Warning Buzzer	90980-11947		R 8	Rear Combination Light LH
P15	Power Window Control SW Front LH		R 9	Rear Combination Light RH	
P16	Power Window Control SW Front RH		R10	Rear Door Speaker LH	90980-10935
P17	Power Window Control SW Rear LH		R11	Rear Door Speaker RH	
P18	Power Window Control SW Rear RH	90980-12166	R12	Rear Fog Light LH	90980-11019
P19	Power Window Master SW		R13	Rear Fog Light RH	
P20	Power Window Motor Front LH	90980-10797	R14	Rear Interior Light	90980-10860
P21	Power Window Motor Front RH		R15	Rear Power Outlet	90980-11155
P22	Power Window Motor Rear LH		R16	Rear Wiper Motor and Relay	90980-11296
P23	Power Window Motor Rear RH		R17	Remote Control Mirror ECU LH	90980-10799
P24	Pretensioner LH	90980-12253	R18	Remote Control Mirror ECU RH	
P25	Pretensioner RH		90980-10789	R19	Remote Control Mirror LH (Except G.C.C. w/o Driving Position Memory)
P26	Power Seat Control SW (Driver's Seat Lumbar Support Control)	Remote Control Mirror LH (G.C.C. w/o Driving Position Memory)			90980-12059
P27	Power Seat Control SW (Driver's Seat)	Remote Control Mirror LH (w/ Driving Position Memory)			90980-12156
P28	Power Seat Control SW (Front Passenger's Seat Lumbar Support Control)	90980-12221		R20	Remote Control Mirror RH (Except G.C.C. w/o Driving Position Memory)
P29	Power Seat Control SW (Front Passenger's Seat)		Remote Control Mirror RH (G.C.C. w/o Driving Position Memory)		90980-12059
P30	Power Seat ECU (Driver's Seat)		Remote Control Mirror RH (w/ Driving Position Memory)		90980-12156
P31	Power Seat ECU (Driver's Seat)	90980-10801	S 1	Skid Control ECU with Actuator	90980-12297
P32	Power Seat Motor (Driver's Seat Front Vertical Control)		S 2	Speed Sensor Front LH	90980-11075
P33	Power Seat Motor (Driver's Seat Lifter Control)		S 3	Speed Sensor Front RH	
P34	Power Seat Motor (Driver's Seat Lumbar Support Control)		S 4	Starter	90980-11400
P35	Power Seat Motor (Driver's Seat Reclining Control)		S 5	Starter	90980-09463
P36	Power Seat Motor (Driver's Seat Slide Control)		S 6	Seat Heater SW	90980-12113
P37	Power Seat Motor (Front Passenger's Seat Front Vertical Control)		S 7	Shift Lock ECU	90980-12183
P38	Power Seat Motor (Front Passenger's Seat Lifter Control)		S 8	Side Airbag Squib LH	90980-11864
P39	Power Seat Motor (Front Passenger's Seat Lumbar Support Control)		S 9	Side Airbag Squib RH	90980-11884
P40	Power Seat Motor (Front Passenger's Seat Reclining Control)		S10	Steering Angle Sensor	90980-12162
P41	Power Seat Motor (Front Passenger's Seat Slide Control)		S11	Step Light LH	90980-11918
R 1	Rear Washer Motor		90980-11051	S12	
R 2	Radio and Player	90980-12038	S13	Stop Light SW	90980-11118
R 3	Radio and Player	90980-12183	S14	Suspension Control ECU	82824-48130
R 4	Radio and Player	90980-12259	S15	Suspension Control ECU	90980-12151
			S16	Suspension Control ECU	82824-48140

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
S17	Scuff Plate Light Front LH	90980-11917	V10	Vanity Light LH	90980-11369
S18	Scuff Plate Light Front RH		V11	Vanity Light RH	
S19	Scuff Plate Light Rear LH		W 1	Washer Level Warning SW	90980-11068
S20	Scuff Plate Light Rear RH		W 2	Woofer (Front LH)	90980-10935
S21	Side Airbag Sensor Front LH	W 3	Woofer (Front RH)		
S22	Side Airbag Sensor Front RH	90980-12225	Y 1	Yaw Rate Sensor	90980-11904
S23	Side Airbag Sensor Rear LH				
S24	Side Airbag Sensor Rear RH				
S25	Speed Sensor Rear LH		90980-11060		
S26	Speed Sensor Rear RH				
S27	Stereo Component Amplifier	90980-12200			
S28	Stereo Component Amplifier	90980-11877			
S29	Stereo Component Amplifier	90980-10848			
S30	Stereo Component Amplifier	90980-10821			
S31	Stop Light LH	90980-11148			
S32	Stop Light RH				
S33	Seat Heater (Driver's Seat)	90980-10797			
S34	Seat Heater (Front Passenger's Seat)				
T 1	Theft Deterrent Horn	90980-10619			
T 2	Throttle Position Sensor	90980-11858			
T 3	Turbine Speed Sensor	90980-11156			
T 4	Tilt and Telescopic ECU	90980-11973			
T 5	Tilt Motor	90980-10797			
T 6	Transmission Control SW	90980-12367			
T 7	Transponder Key Amplifier	90980-12092			
T 8	Transponder Key Computer	90980-11911			
T 9	Turn Signal Flasher	90980-10799			
T10	Tweeter LH	90980-10858			
T11	Tweeter RH				
T12	Taillight LH	90980-11156			
T13	Taillight RH				
T14	Television Camera	90980-12211			
T15	Television Camera ECU	90980-12149			
T16	Television Camera ECU	90980-12150			
T17	Television Camera ECU	90980-12151			
T18	Theft Deterrent Siren	90980-11349			
V 1	VSV (ACIS)	90980-11149			
V 2	VSV (ACM)	90980-11156			
V 3	VSV (EGR)	90980-11149			
V 4	VSV (EVAP)	90980-11156			
V 5	VVT Sensor LH	90980-10947			
V 6	VVT Sensor RH				
V 7	VVT Solenoid LH	90980-11162			
V 8	VVT Solenoid RH				
V 9	VSC Warning Buzzer	90980-10906			

Note: Not all of the above part numbers of the connector are established for the supply.

