




LEXUS Navigation System and LEXUS Parking Assist

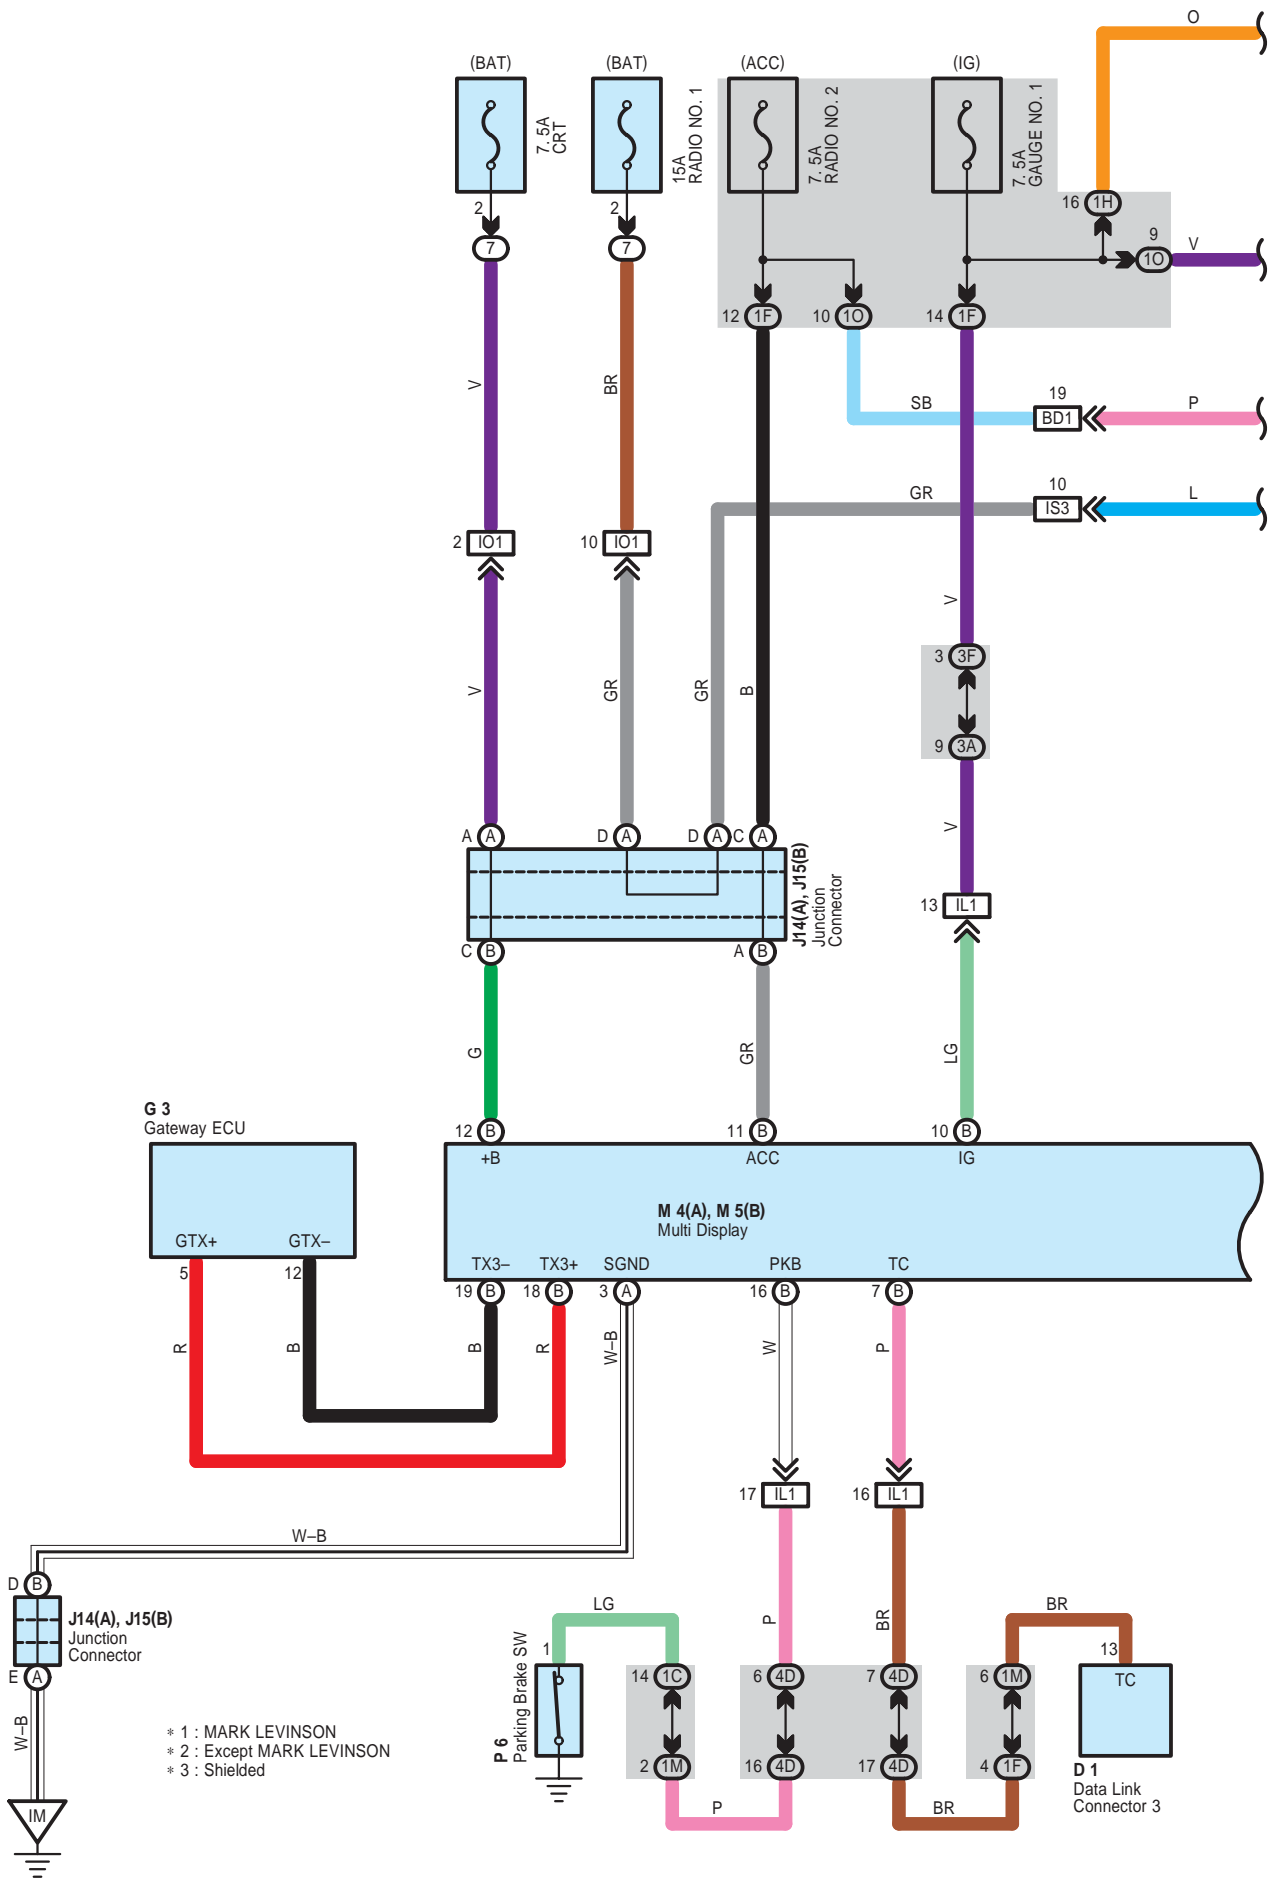


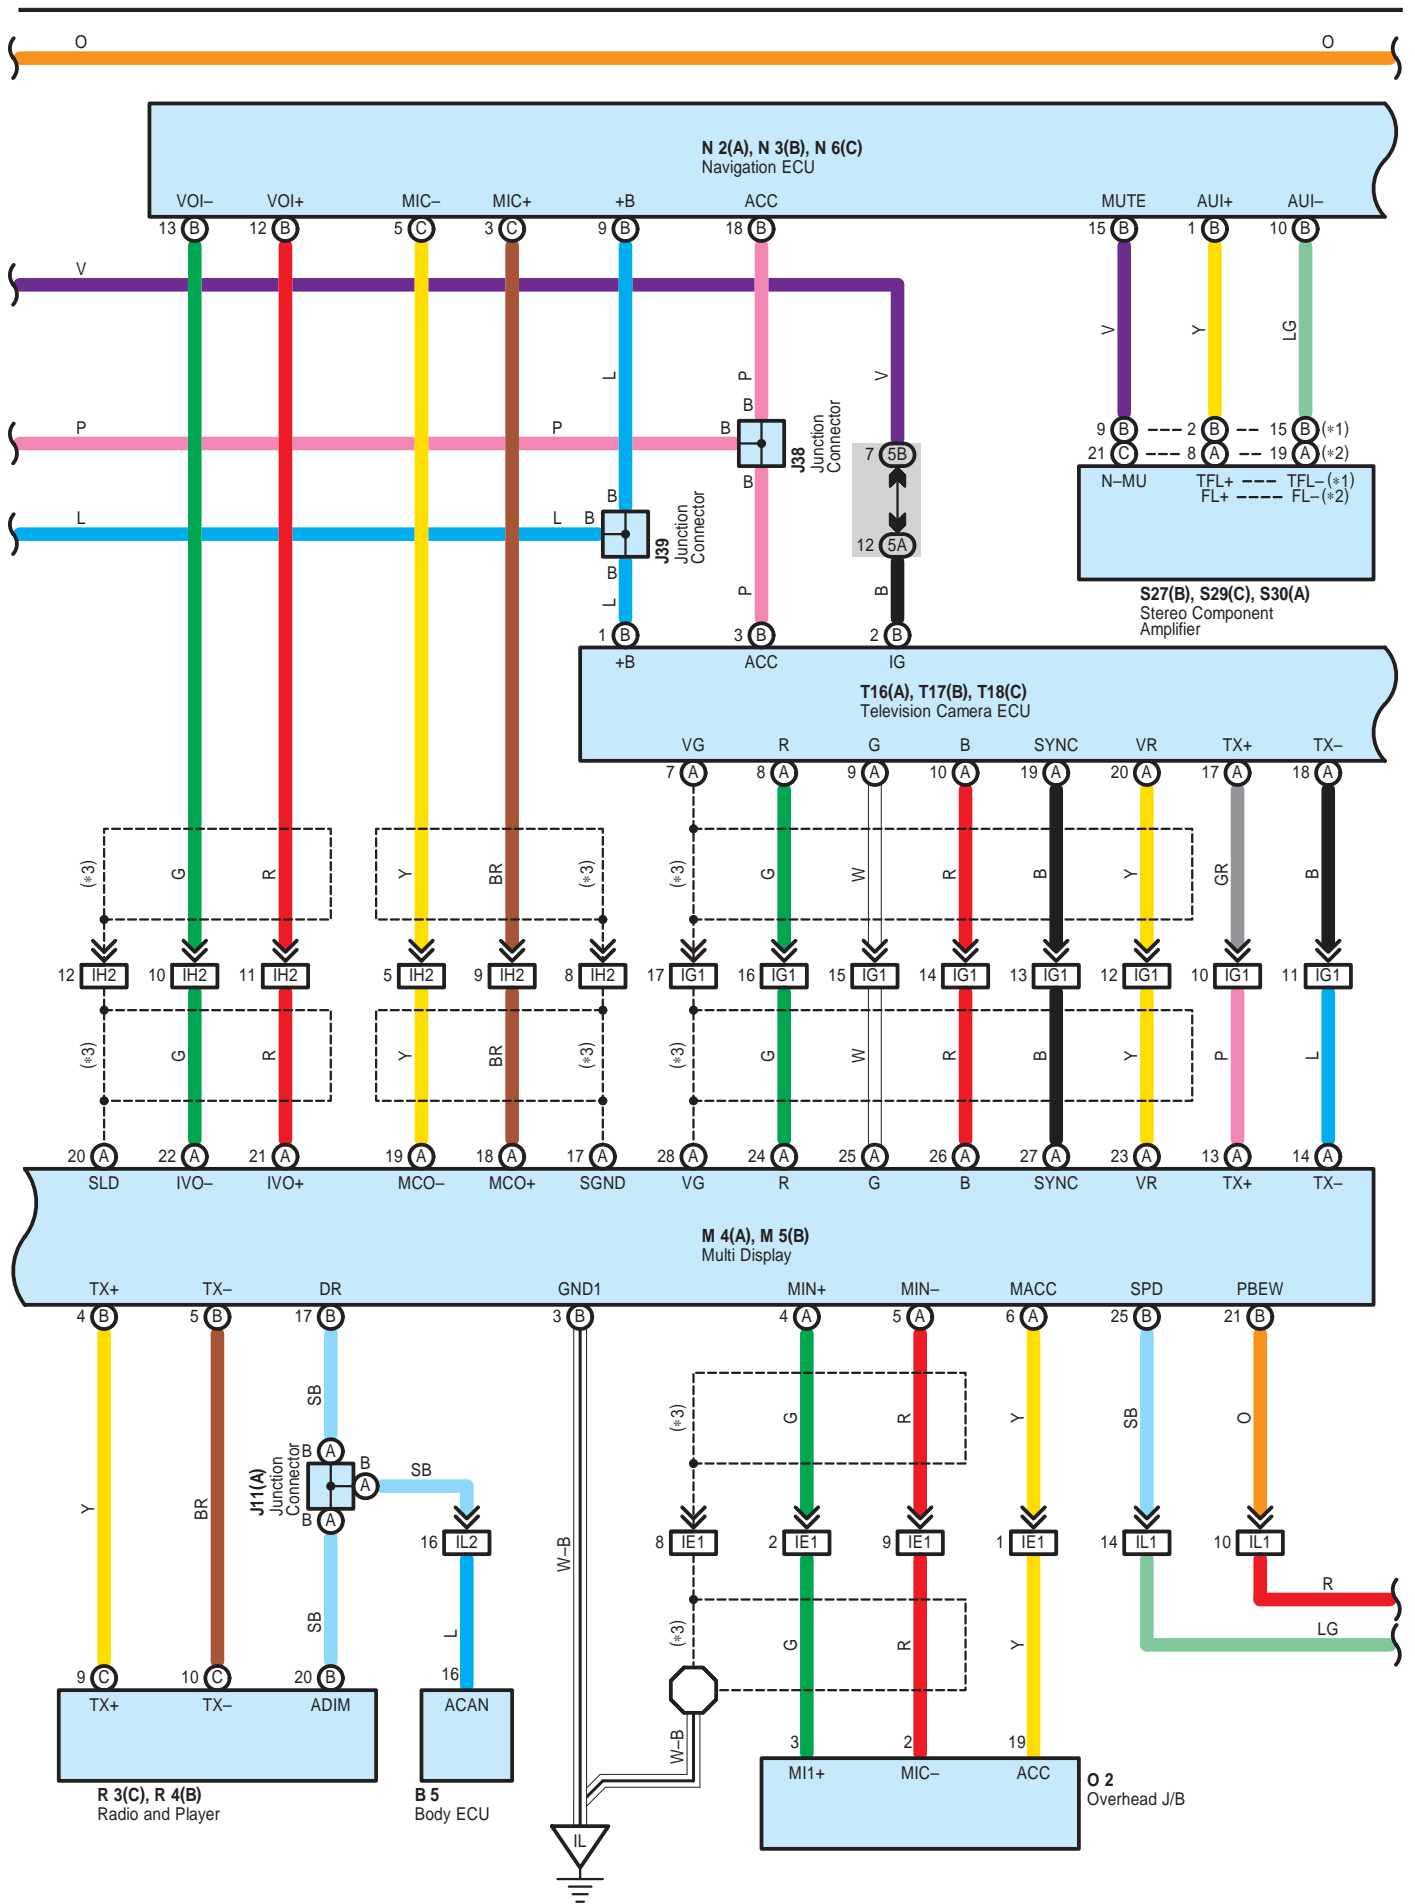


LEXUS Navigation System and LEXUS Parking Assist

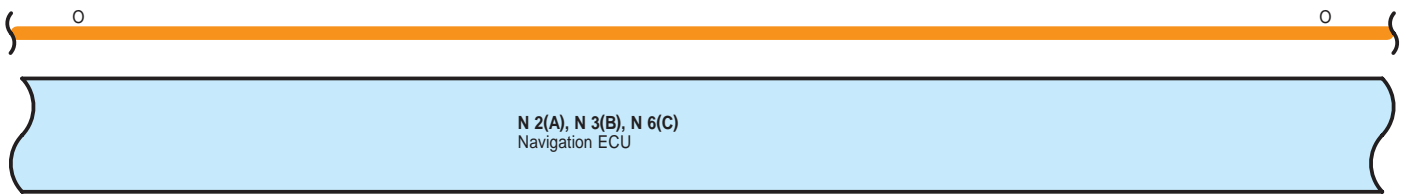



- * 3 : Shielded
- * 4 : w/o Rear Seat Entertainment System
- * 5 : w/ Rear Seat Entertainment System

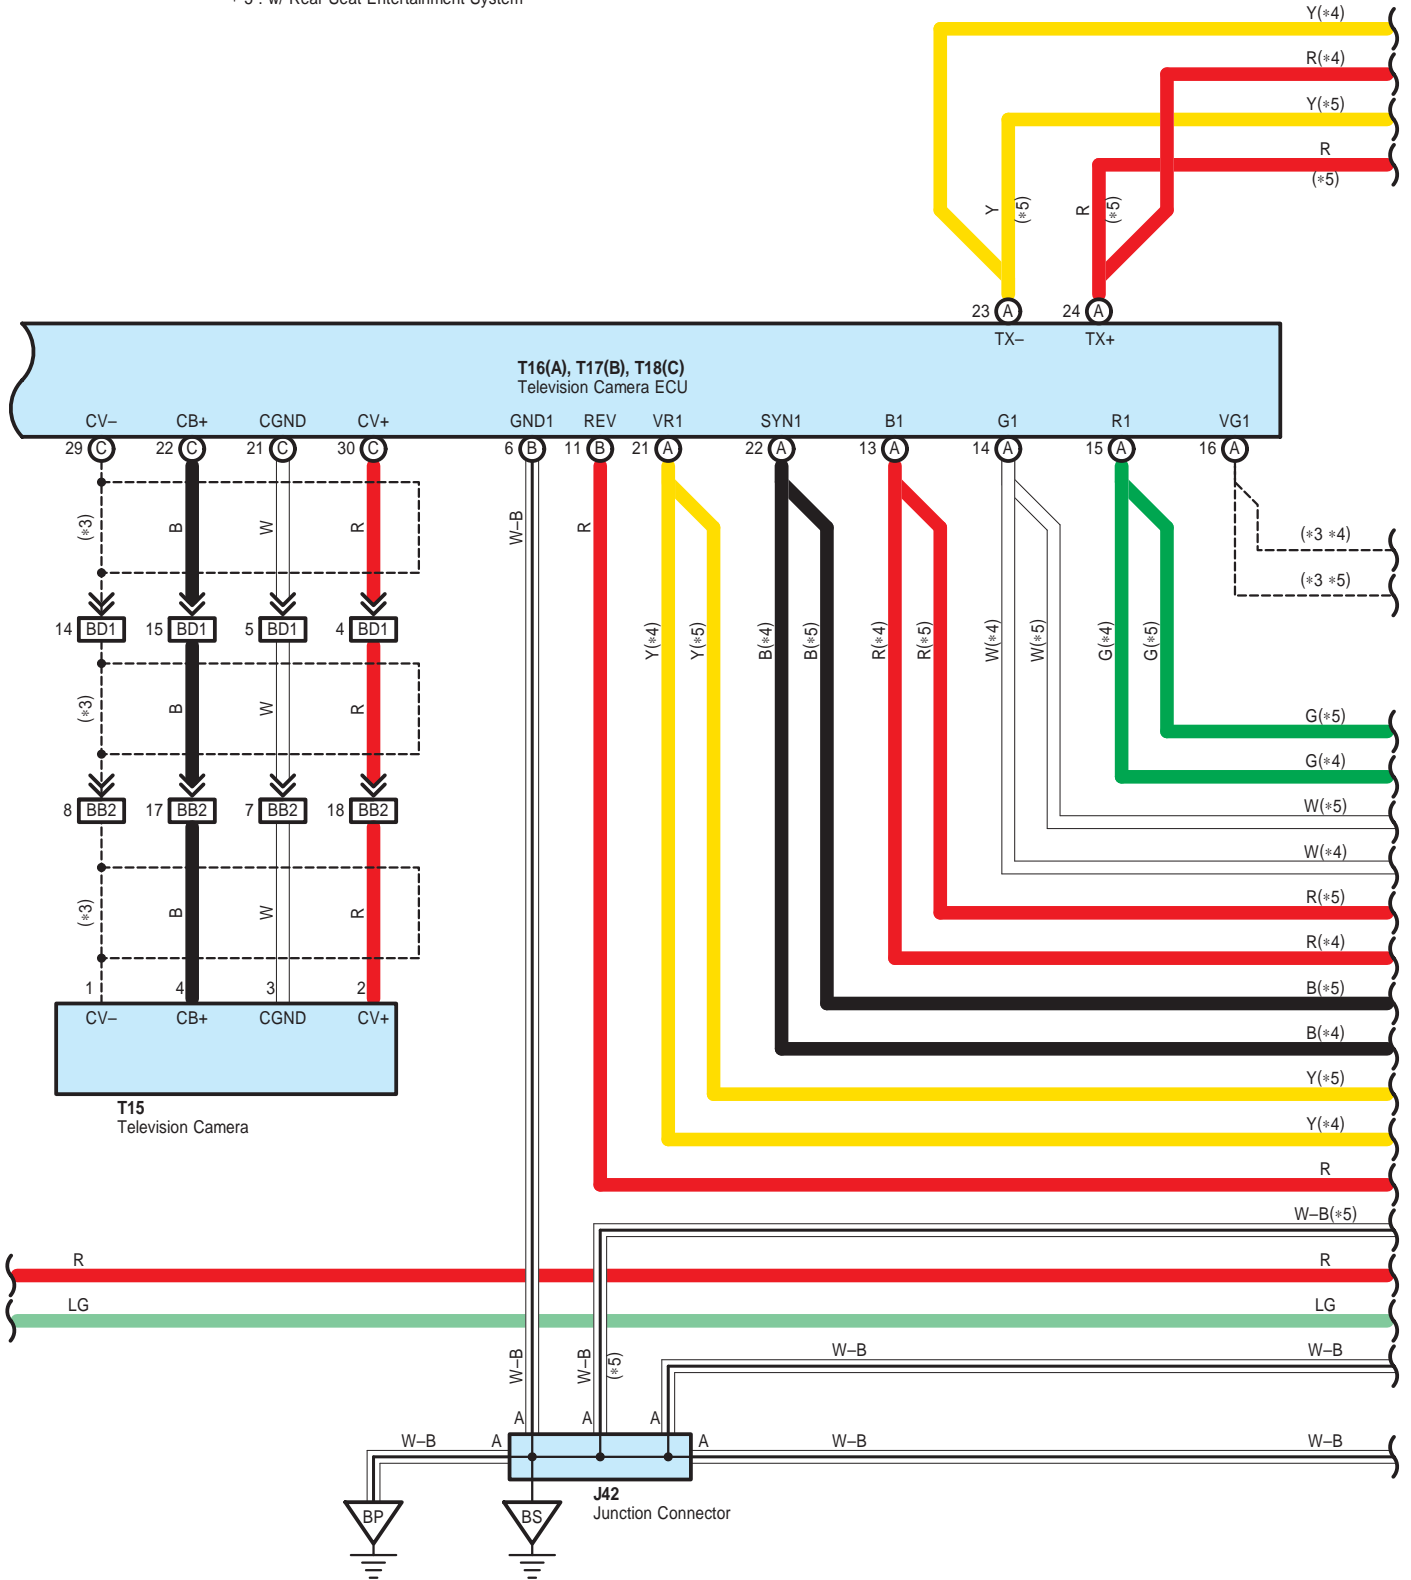

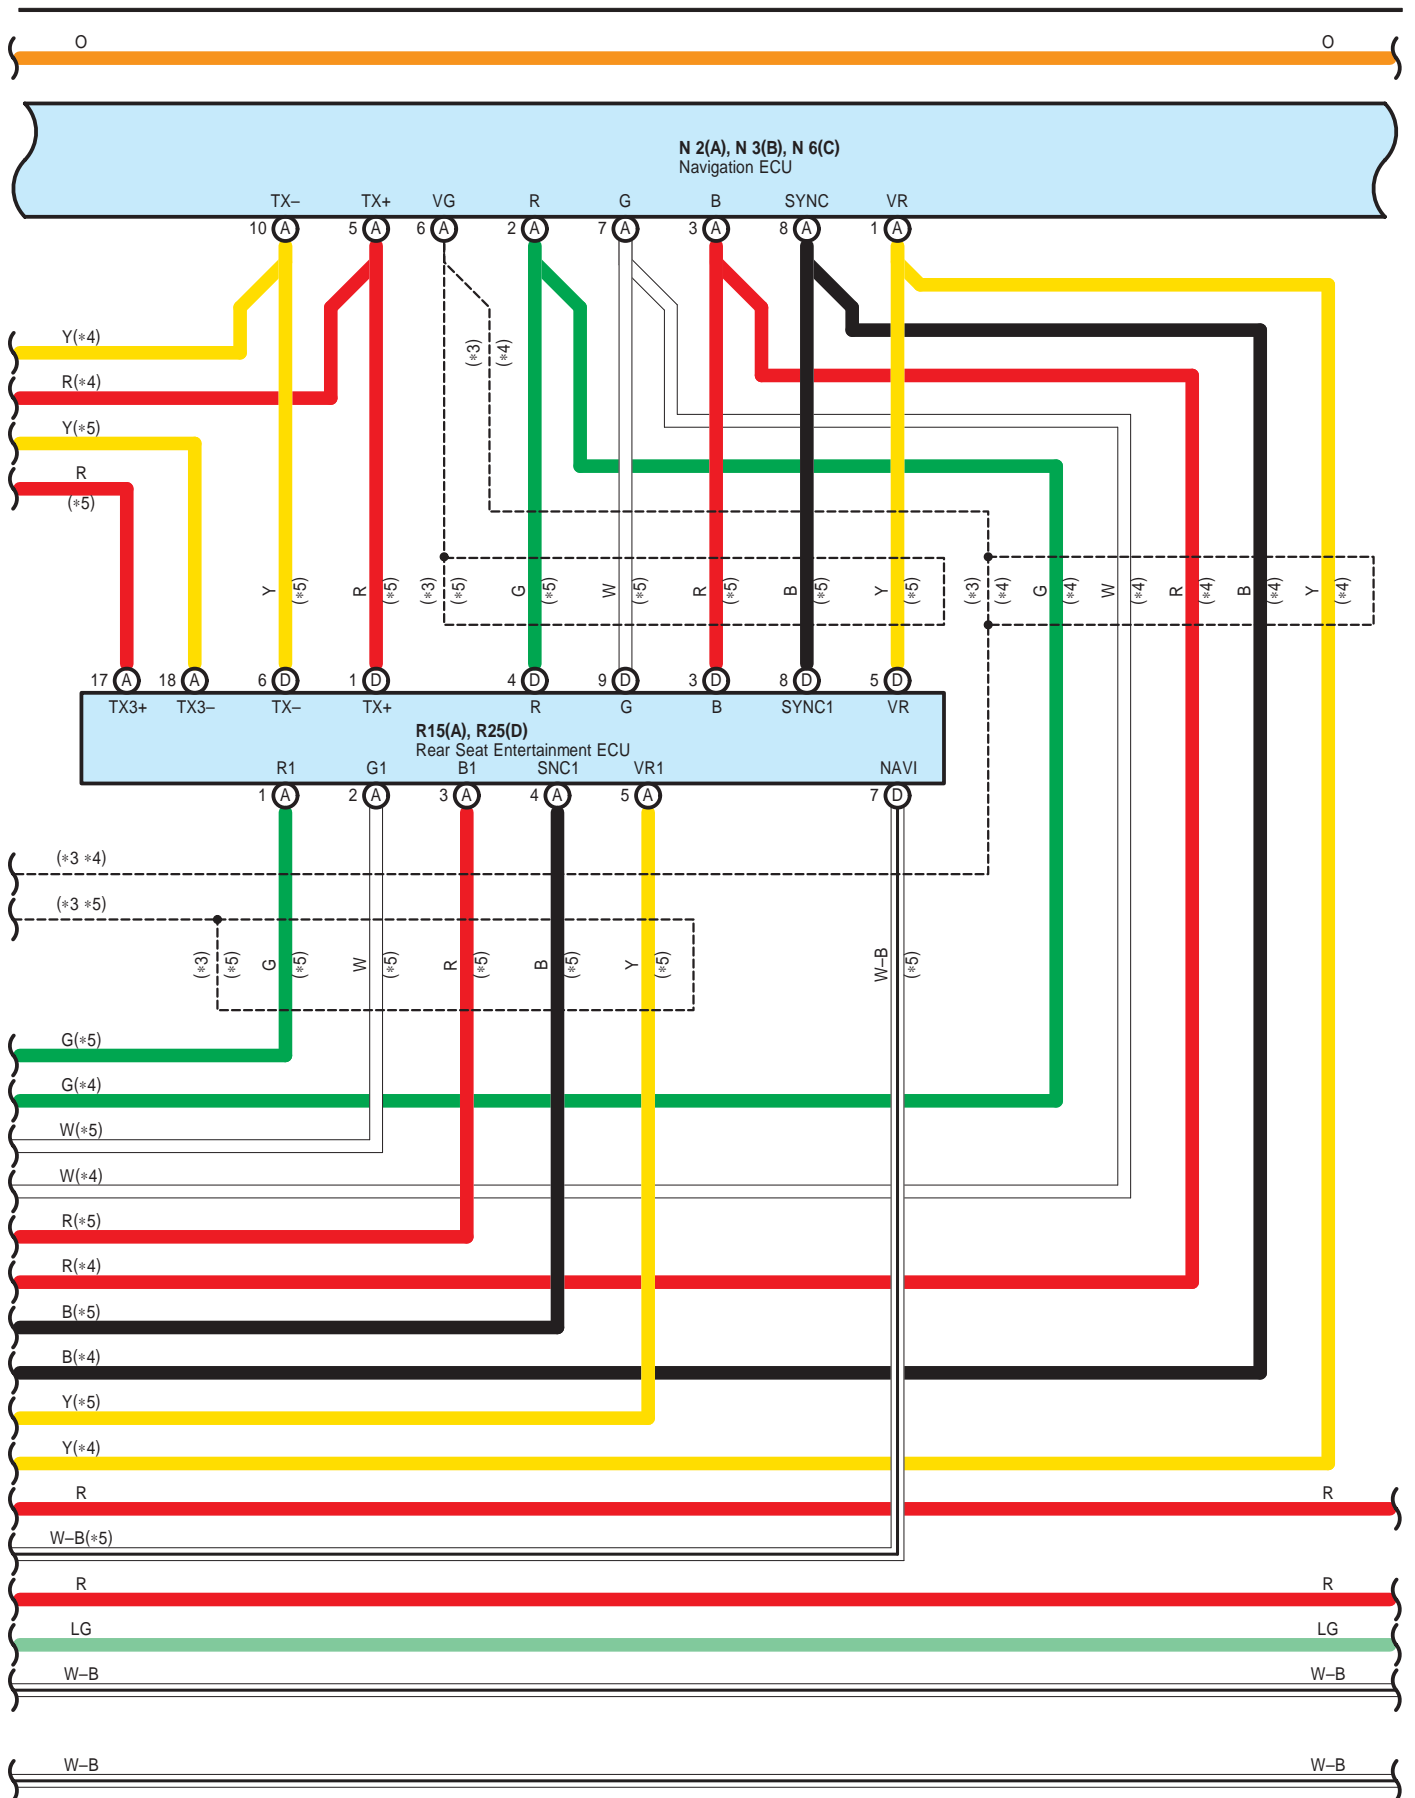

LEXUS Navigation System and LEXUS Parking Assist

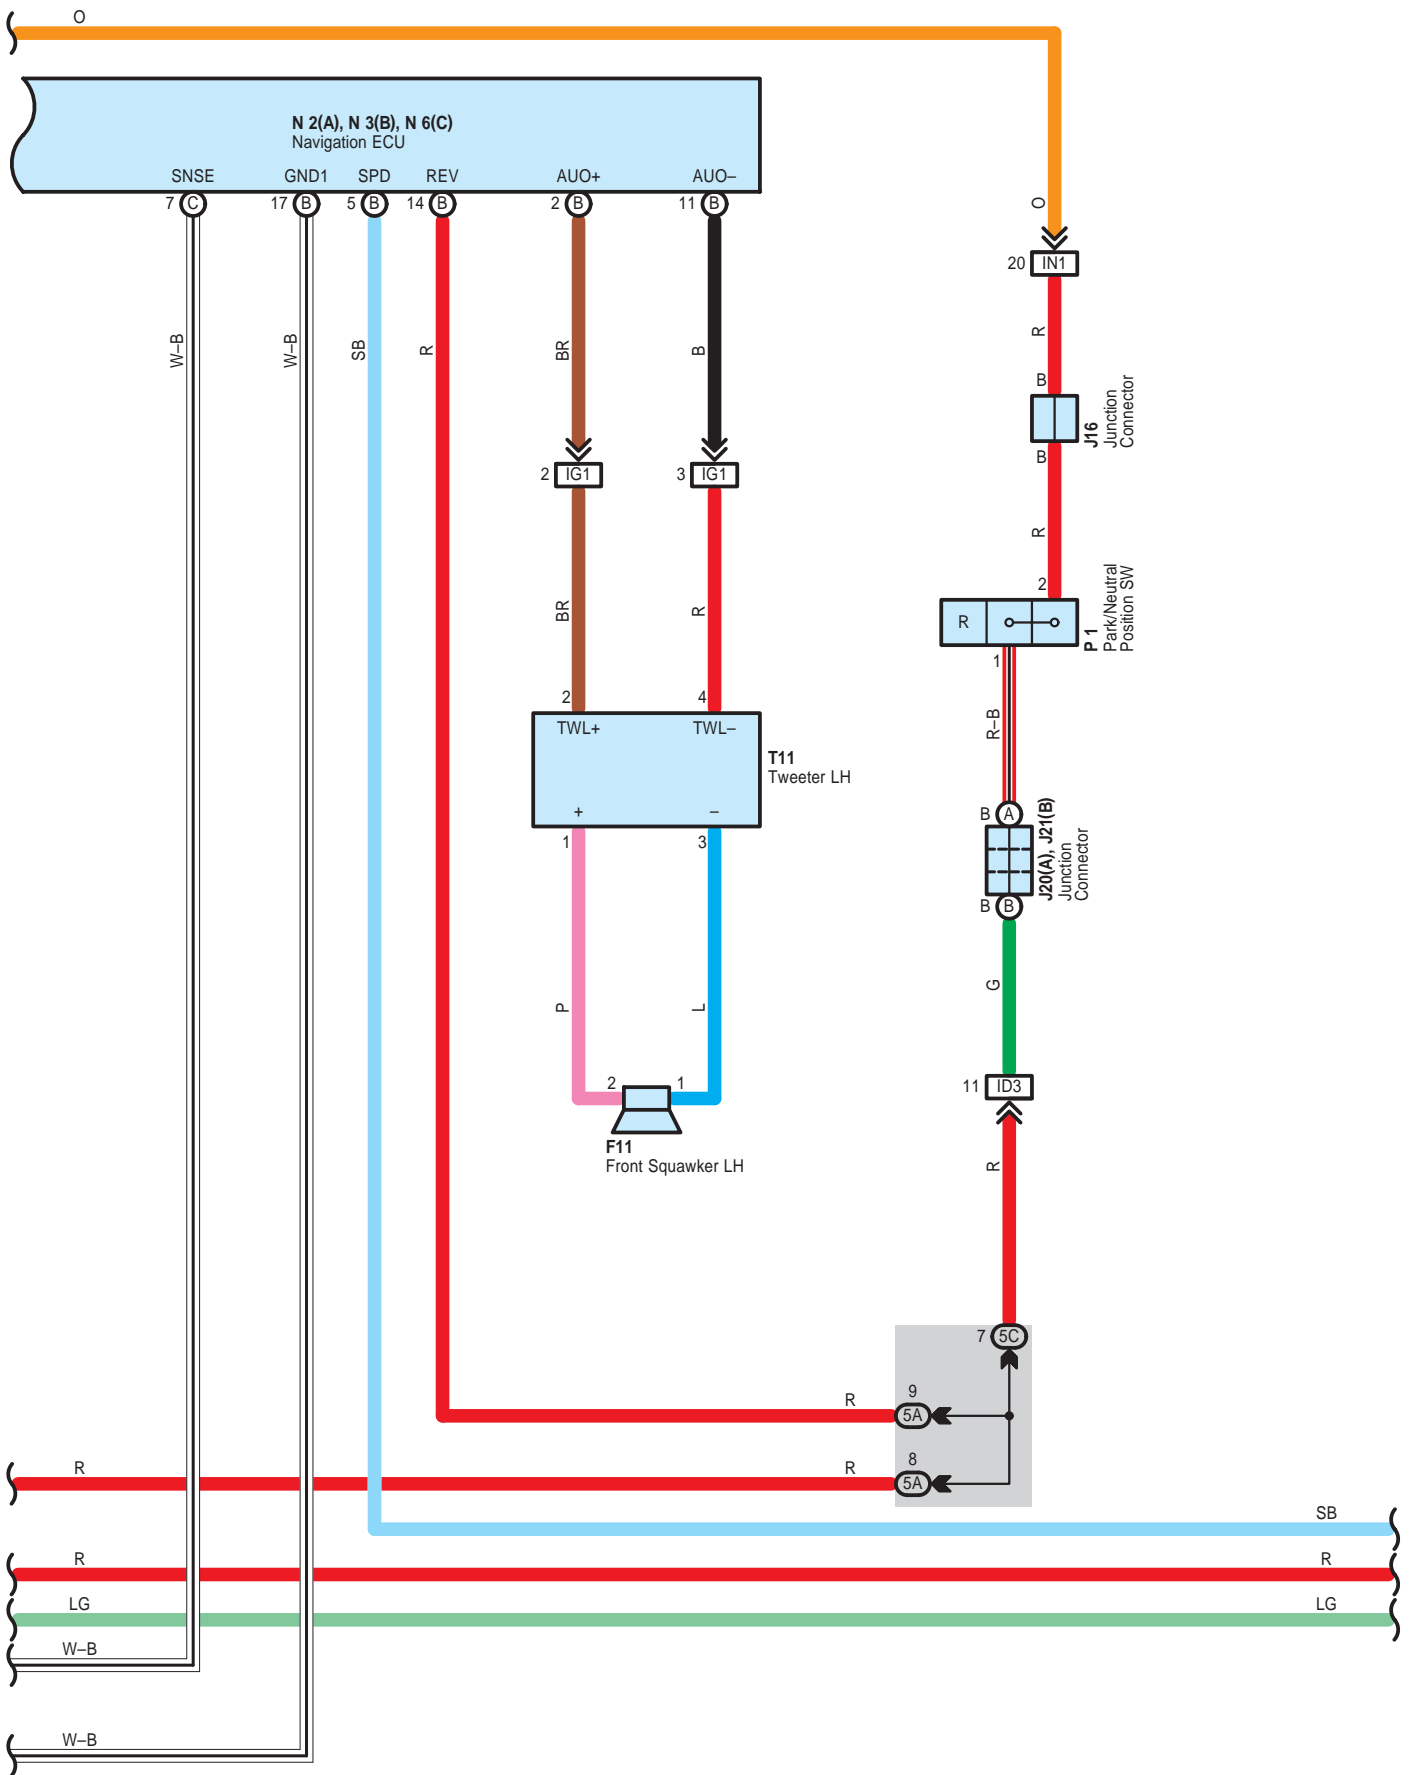

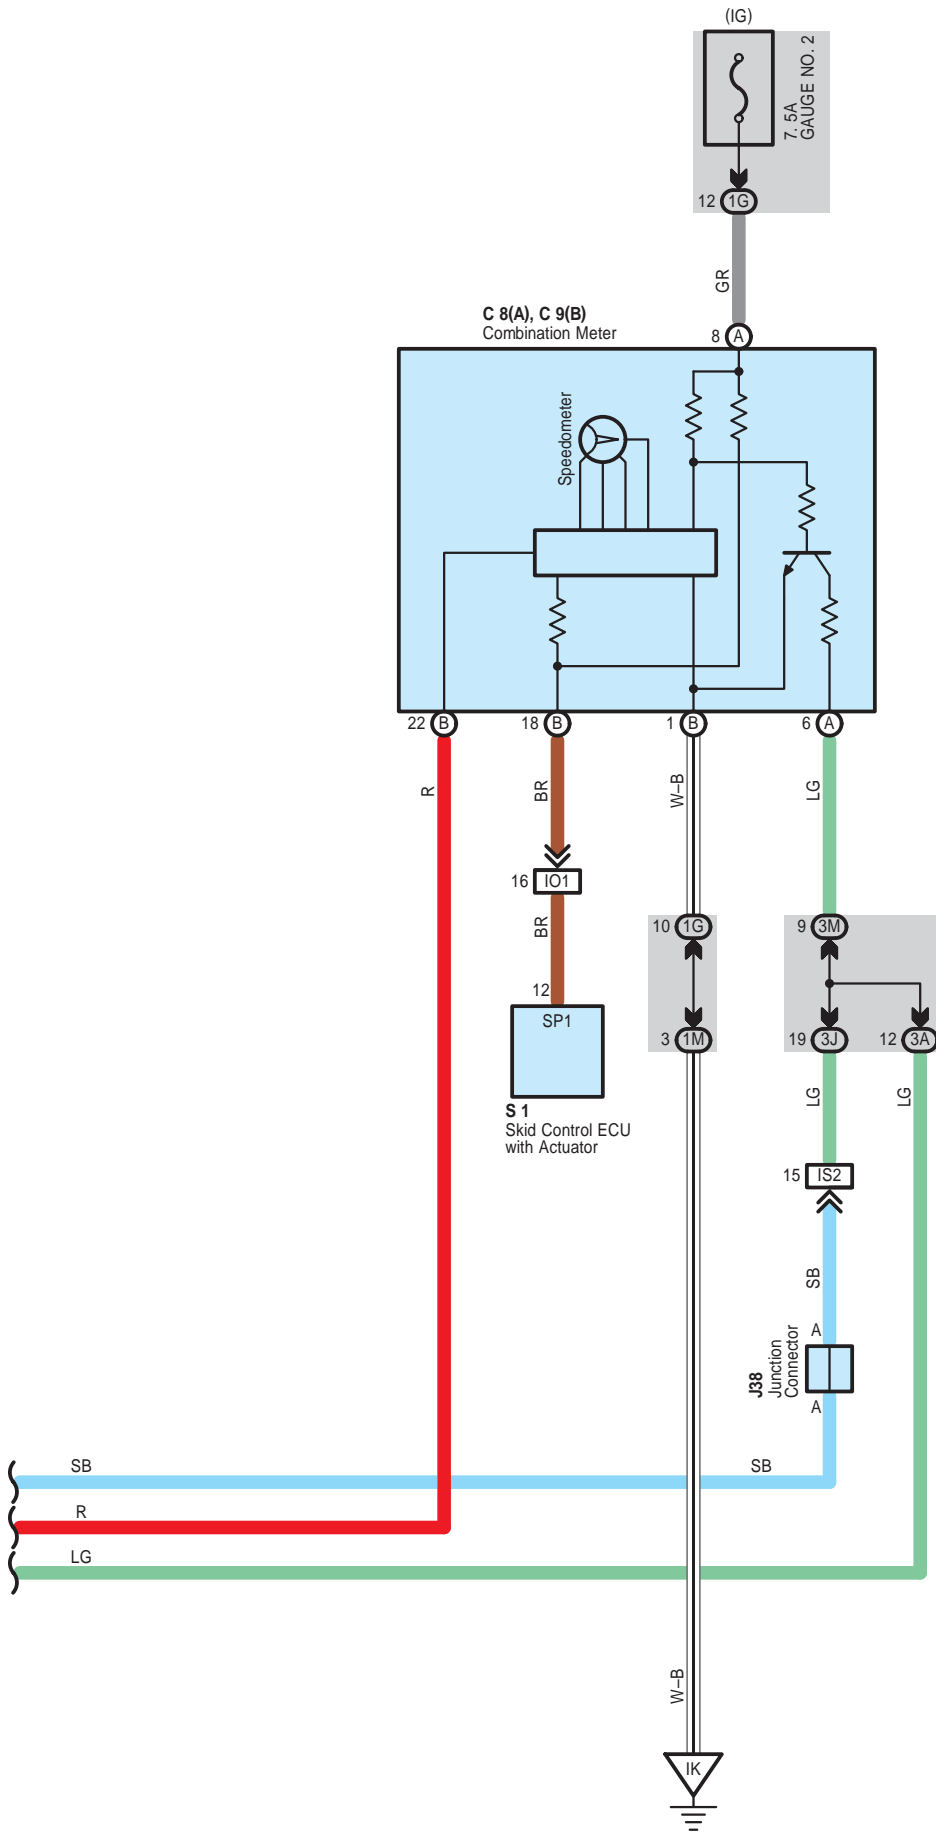

LEXUS Navigation System and LEXUS Parking Assist

: Parts Location

Code	See Page	Code	See Page	Code	See Page
B5	46	J38	51	R4	B 49
C8	A 47	J39	51	R15	A 52
C9	B 47	J42	51	R25	D 52
D1	47	M4	A 48	S1	45
F11	47	M5	B 48	S27	B 53
G3	47	N2	A 51	S29	C 53
J11	A 48	N3	B 51	S30	A 53
J14	A 48	N6	C 51	T11	49
J15	B 48	O2	52	T15	53
J16	48	P1	45	T16	A 53
J20	A 48	P6	49	T17	B 53
J21	B 48	R3	C 49	T18	C 53

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
7	22	Fusible Link Block (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	26	Engine Room Main Wire and Instrument Panel J/B (Lower Finish Panel)
1F	26	Instrument Panel Wire and Instrument Panel J/B (Lower Finish Panel)
1G	27	
1H		
1M	26	
1O	26	
3A	34	Instrument Panel Wire and J/B No.3 (Behind the Combination Meter)
3F		
3J		
3M		
4D	39	Instrument Panel Wire and J/B No.4 (Behind the Glove Box)
5A	42	Floor Wire and Rear J/B (Left Rear Quarter Panel)
5B	42	Floor No.2 Wire and Rear J/B (Left Rear Quarter Panel)
5C		

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID3	58	Instrument Panel Wire and Floor No.2 Wire (Left Kick Panel)
IE1	59	Roof Wire and Instrument Panel No.2 Wire (Left Side of the Instrument Panel)
IG1	59	Instrument Panel No.2 Wire and Floor Wire (Instrument Panel Brace LH)
IH2	59	Instrument Panel No.2 Wire and Floor Wire (Instrument Panel Brace RH)
IL1	60	Instrument Panel Wire and Instrument Panel No.2 Wire (Above the Glove Box)
IL2		
IN1	60	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IO1	60	Engine Room Main Wire and Instrument Panel Wire (Right Kick Panel)
IS2	61	Instrument Panel Wire and Floor Wire (Right Kick Panel)
IS3		
BB2	62	Back Door No.1 Wire and Floor No.2 Wire (Left Rear Side of the Roof)
BD1	62	Floor No.2 Wire and Floor Wire (Left Rear Quarter Panel)



: Ground Points

Code	See Page	Ground Points Location
IK	58	Behind the Combination Meter
IL	58	Instrument Panel Brace RH
IM	58	Right Kick Panel
BP	62	Under the Right Center Pillar
BS	62	Right Rear Quarter Panel