


Wiring Diagram


Combination Meter/Meters, Gauges and Illumination

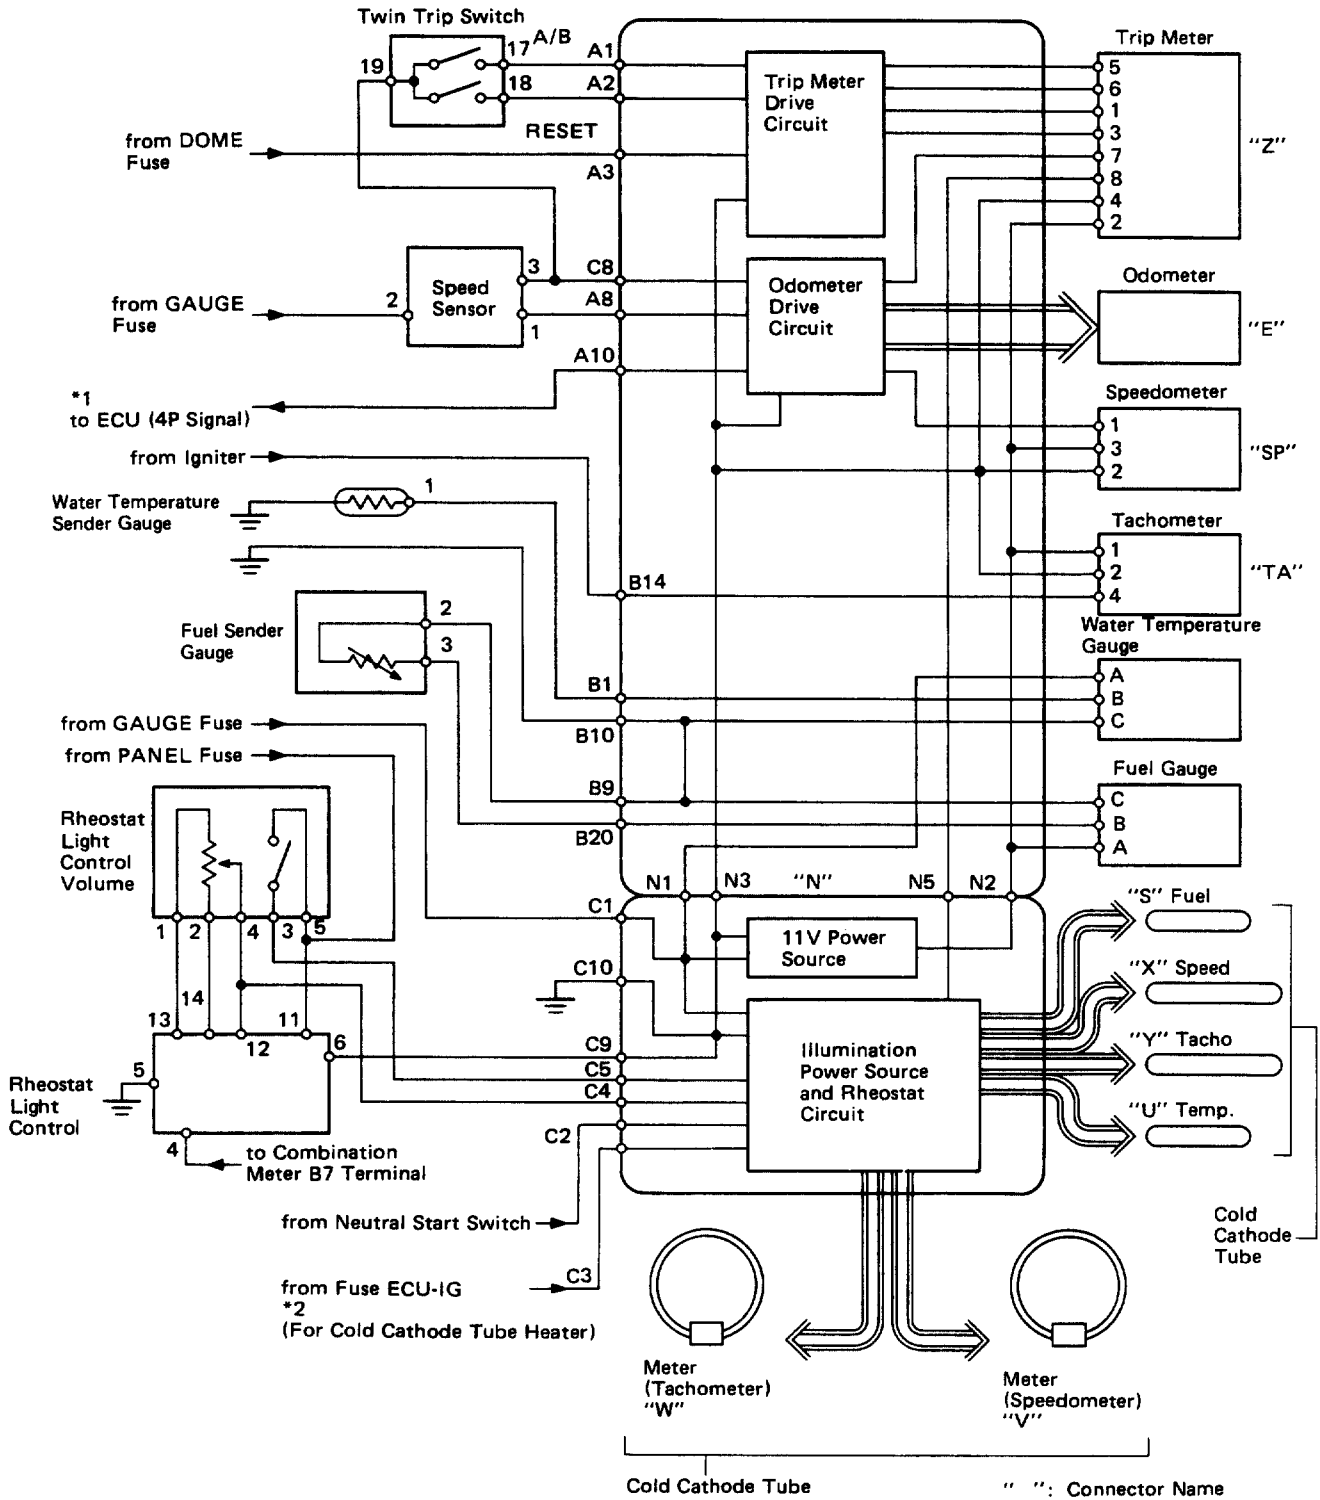

- *1 • A.B.S. and TRAC ECU
- Engine and ECT ECU
- Suspension ECU
- Cruise Control ECU
- *2 Except. Indicator Needle

Wiring Diagram (Cont'd)


Combination Meter/Warning Lights and Indicator Lights

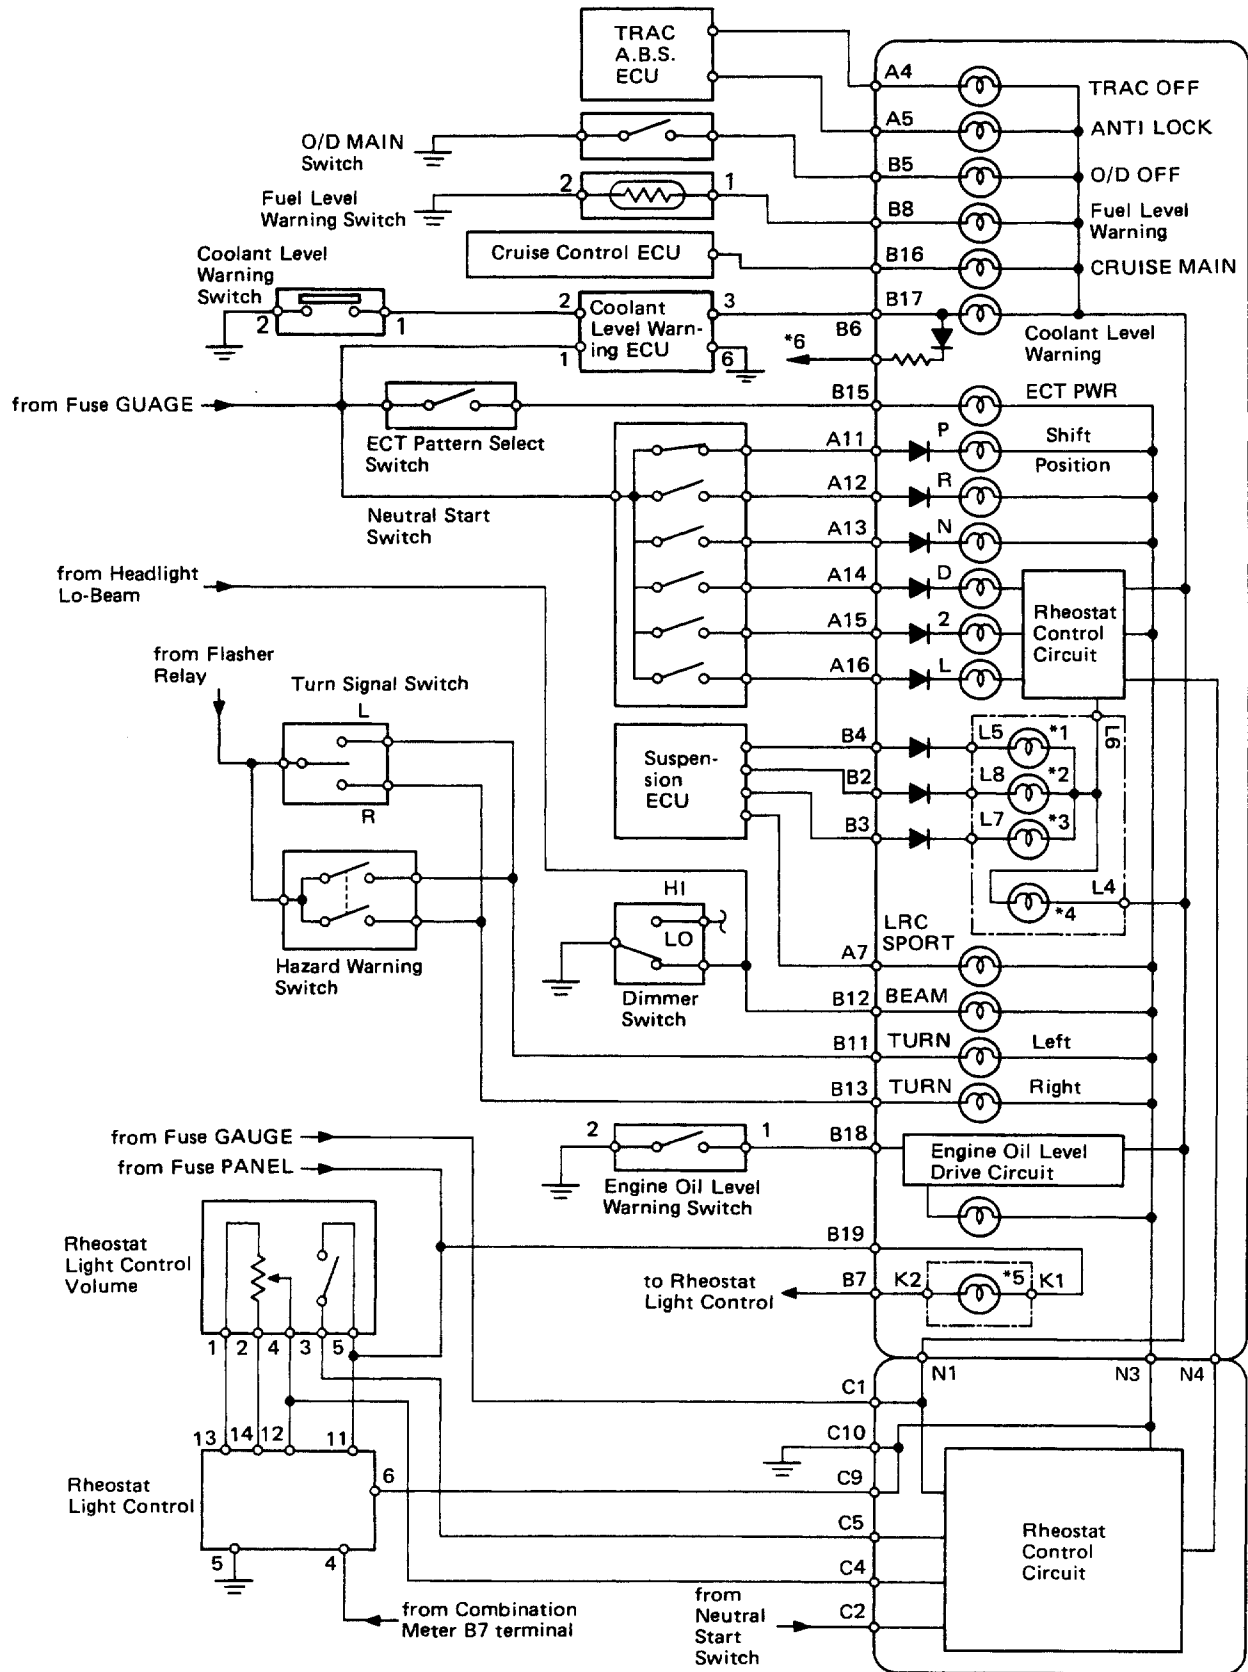

- *1 HEIGHT HI
- *2 HEIGHT LO
- *3 HEIGHT NORM
- *4 HEIGHT Illumination
- *5 Odometer Illumination
- *6 Alternator L terminal

Wiring Diagram (Cont'd)

Meter Cluster/Warning Lights, Rheostat Light Control and Twin Trip Switch

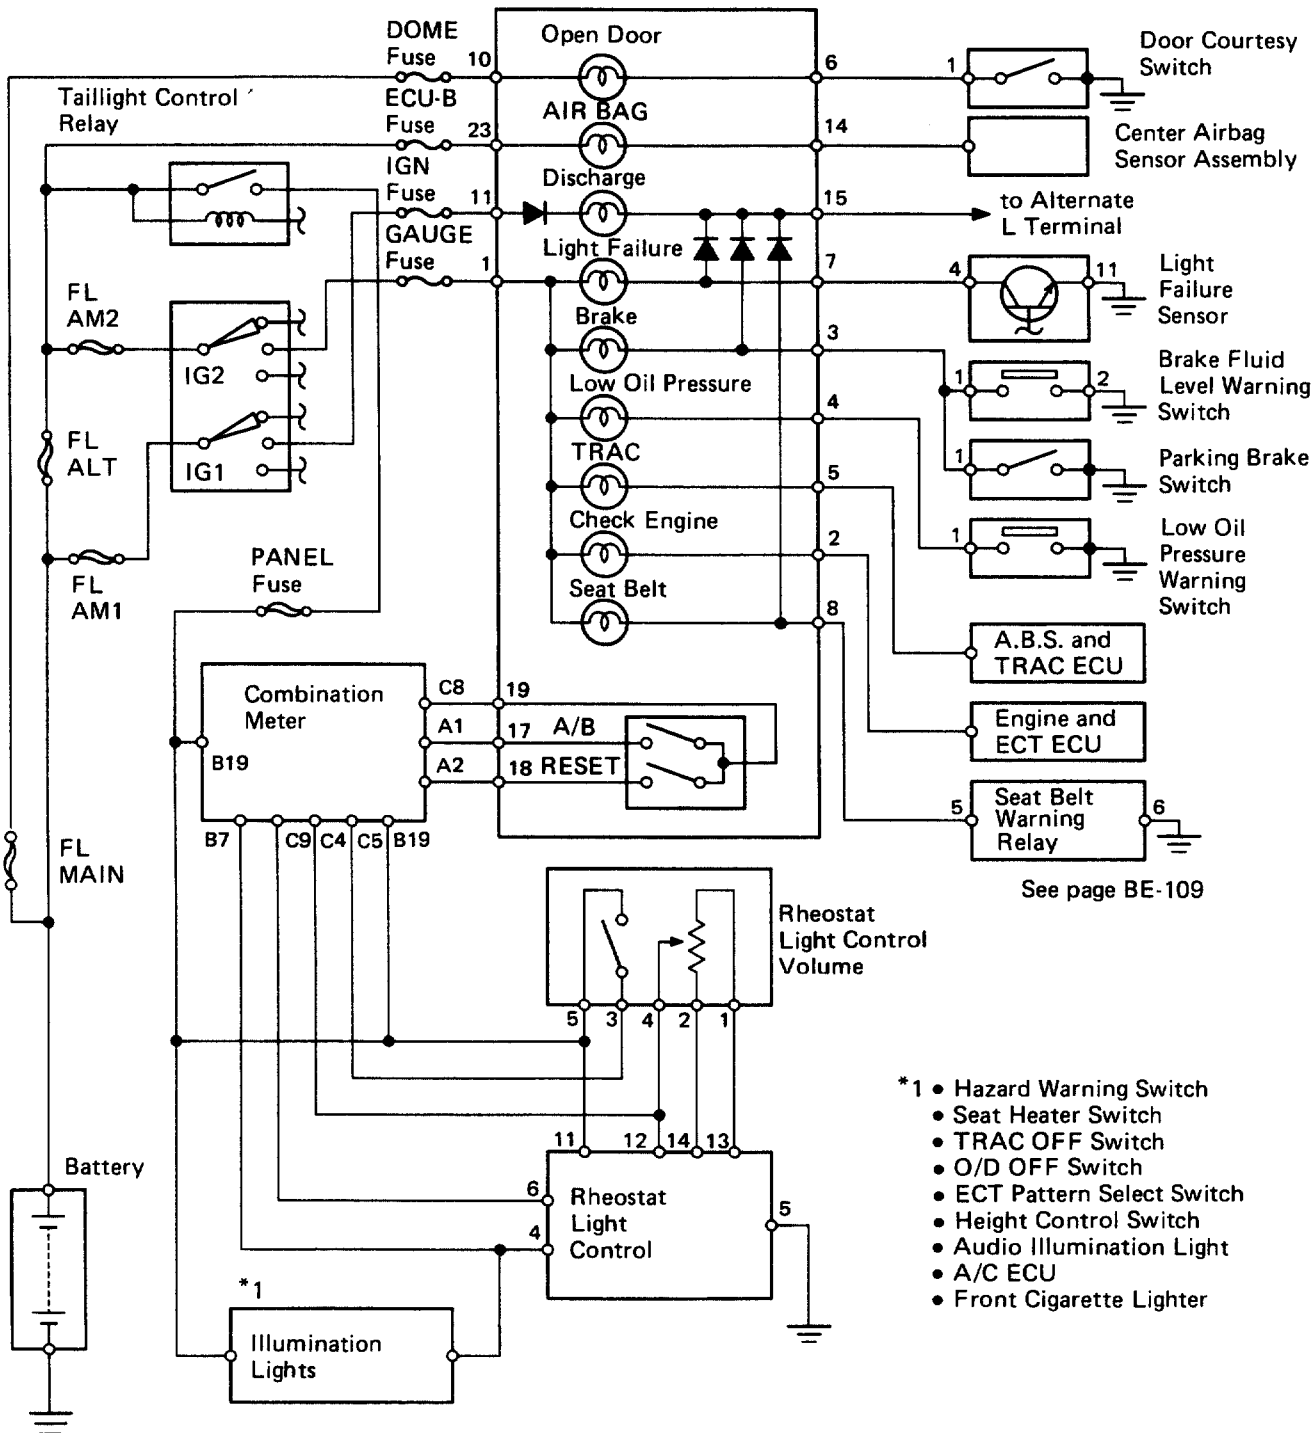

See page BE-109

- *1 • Hazard Warning Switch
- Seat Heater Switch
- TRAC OFF Switch
- O/D OFF Switch
- ECT Pattern Select Switch
- Height Control Switch
- Audio Illumination Light
- A/C ECU
- Front Cigarette Lighter