


H02947

## REPLACEMENT


### 1. IF NECESSARY, DISCONNECT MIRROR

- (a) Insert a shop rag between the mirror and the mirror body.
- (b) Pull up the lower side of the shop rag to disconnect the mirror joint.

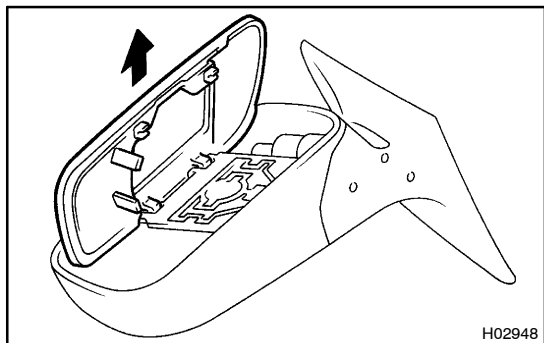


H02948

- (c) Pull up the mirror and disconnect it.

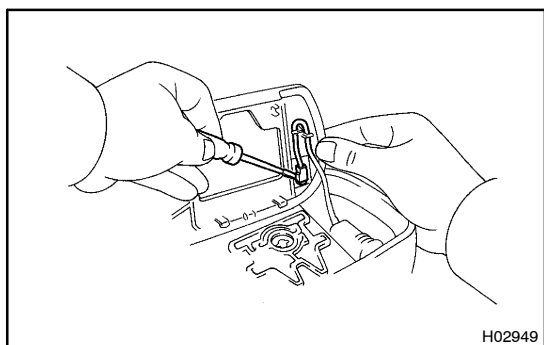

H02949

- (d) Disconnect the connectors.

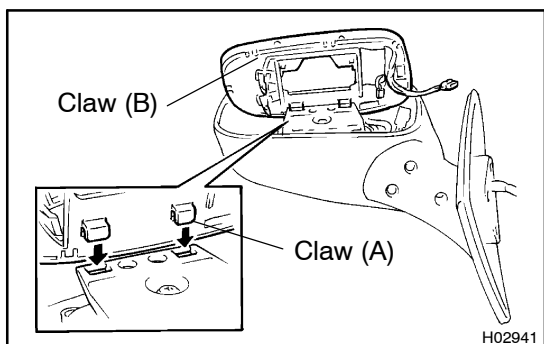

H02941

### 2. CONNECT MIRROR

- (a) Connect the connectors.
- (b) Connect the claws (A) and set the mirror to the mirror body.
- (c) Push the mirror to connect the claws (B) and set it.