


# Power Rear Quarter Window

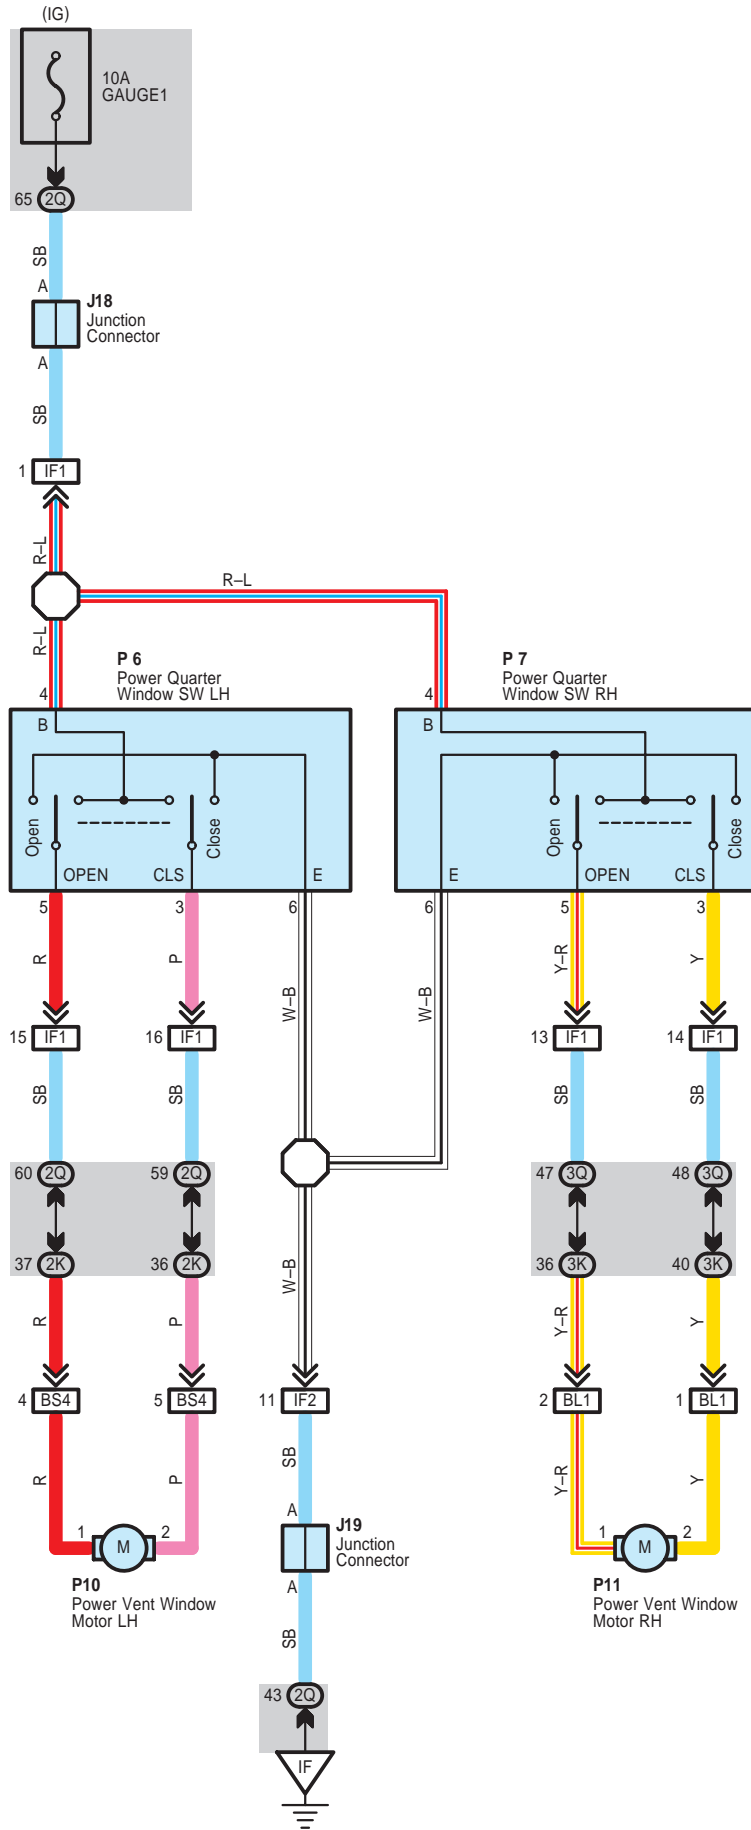

 : **Parts Location**

Code	See Page	Code	See Page	Code	See Page
J18	76	P6	77	P10	79
J19	76	P7	77	P11	79

 : **Junction Block and Wire Harness Connector**

Code	See Page	Junction Block and Wire Harness (Connector Location)
2K	28	Floor No.1 Wire and Cowl Side J/B LH (Left Kick Panel)
2Q	30	Instrument Panel Integration Wire and Cowl Side J/B LH (Left Kick Panel)
3K	40	Floor No.2 Wire and Cowl Side J/B RH (Right Kick Panel)
3Q	42	Instrument Panel Integration Wire and Cowl Side J/B RH (Right Kick Panel)

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	84	Instrument Panel Integration Wire and Instrument Panel Wire (Left Side of Instrument Panel)
IF2		
BL1	86	Roof No.2 Wire and Floor No.2 Wire (Right Side Rear Quarter Panel)
BS4	86	Pillar No.1 Wire and Floor No.1 Wire (Left Rear Side Quarter Panel)

 : **Ground Points**

Code	See Page	Ground Points Location
IF	84	Set Bolt of Cowl Side J/B LH