


Position of Parts in Instrument Panel <LHD>

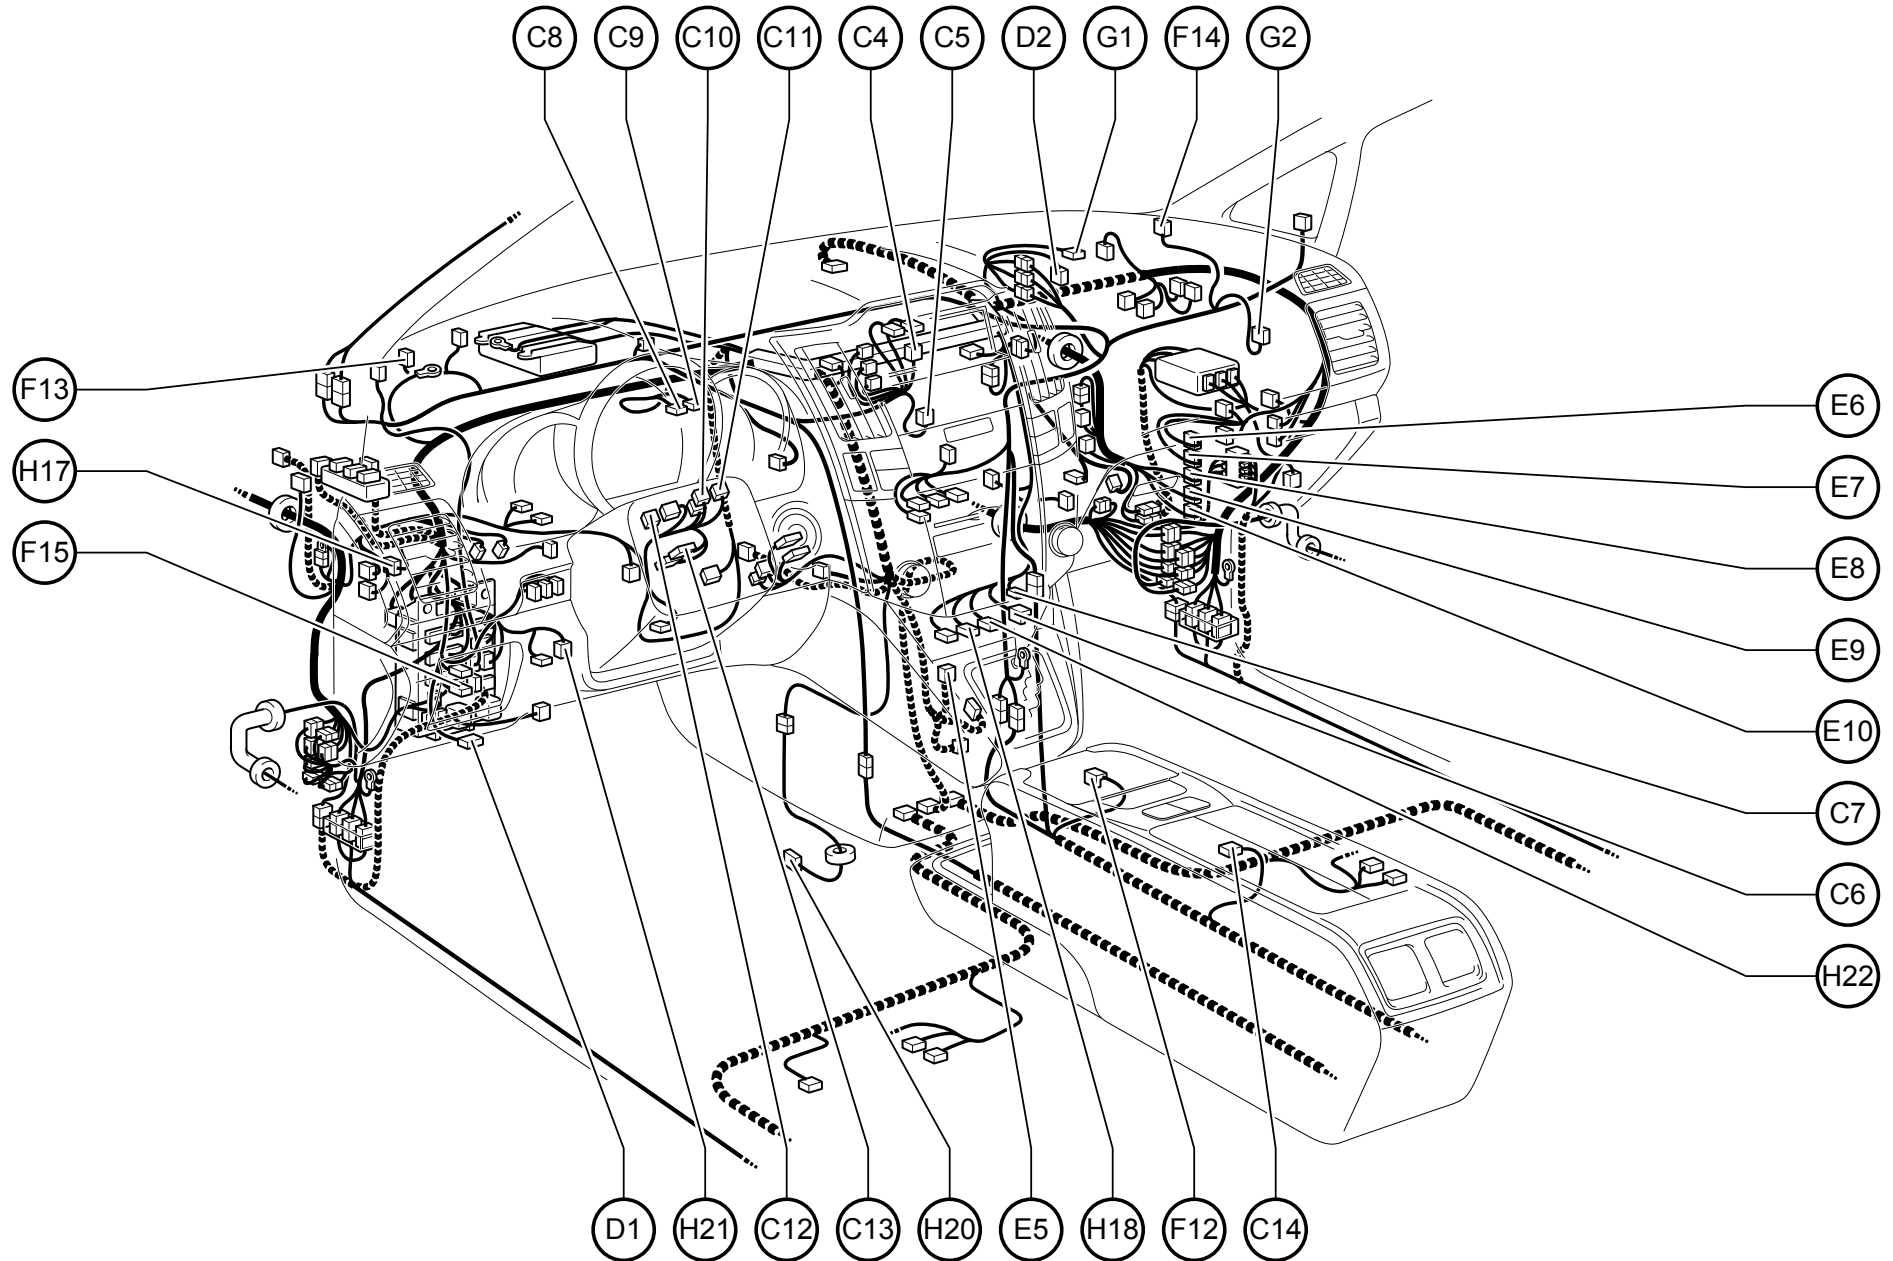

Position of Parts in Instrument Panel <LHD>

- C 4 Center Cluster Integration Panel
- C 5 Center Speaker
- C 6 Cigarette Lighter
- C 7 Cigarette Lighter Illumination
- C 8 Combination Meter
- C 9 Combination Meter
- C 10 Combination SW
- C 11 Combination SW
- C 12 Combination SW
- C 13 Combination SW
- C 14 Console Box Illumination

- D 1 DLC3
- D 2 Double Door Lock ECU













 
 
 

- E 5 ECT Pattern Select SW
- E 6 Engine and ECT ECU
- E 7 Engine and ECT ECU
- E 8 Engine and ECT ECU
- E 9 Engine and ECT ECU
- E 10 Engine and ECT ECU

- F 12 Front Power Outlet
- F 13 Front Squawker LH
- F 14 Front Squawker RH
- F 15 Fuel Lid Opener SW

- G 1 Gateway ECU
- G 2 Glove Box Light

- H 17 Headlight Beam Level Control ECU
- H 18 Headlight Cleaner SW
- H 20 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 21 Height Control OFF SW
- H 22 Height Control SW

Position of Parts in Instrument Panel <LHD>

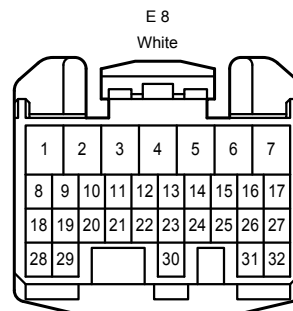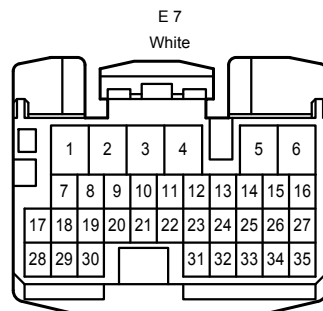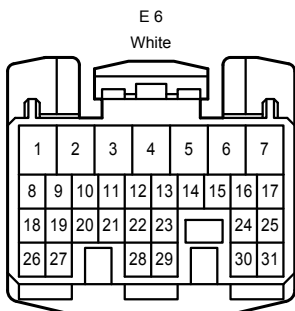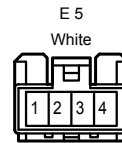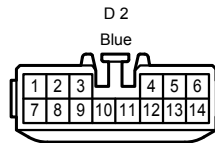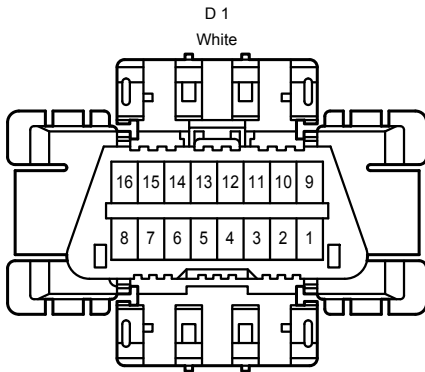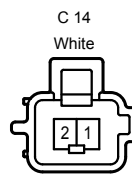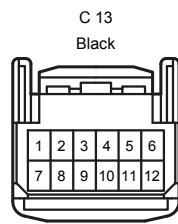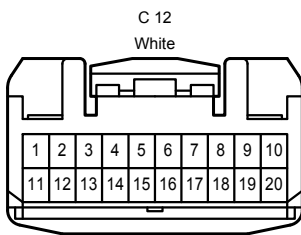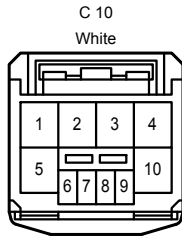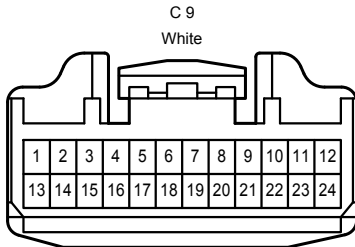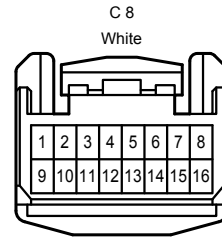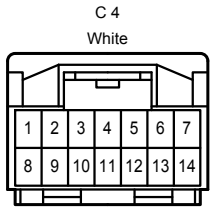

Position of Parts in Instrument Panel <LHD>

