

 
Lexus Personalized Settings

Your vehicle includes a variety of electronic features that can be programmed to your preferences. Programming of these features is performed once at no charge by your Lexus Dealer provided you obtain the service at the 6 month/5,000-mile scheduled maintenance service.

 


It is also possible to customize certain vehicle features yourself using the navigation system.

 
Vehicles with Navigation system:

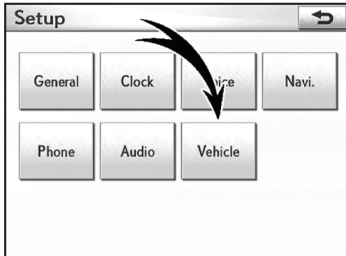

STEP 1 Press the **SETUP** panel button followed by **Vehicle**.

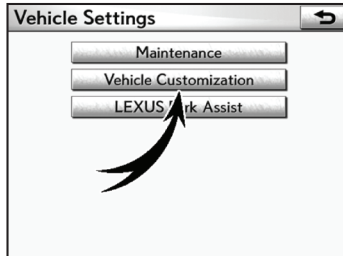

STEP 2 Touch **Vehicle Customization**.

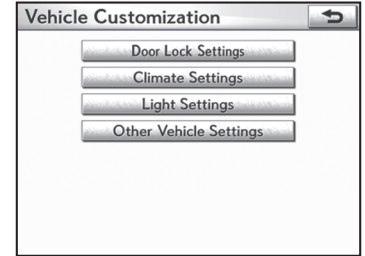

STEP 3 Touch the desired category. Scroll to specific customization setting.

 

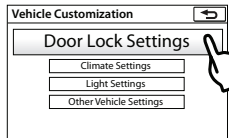 

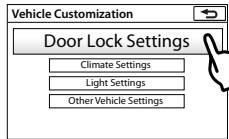 

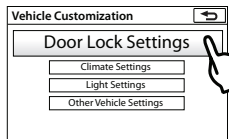 

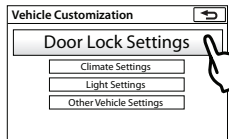 

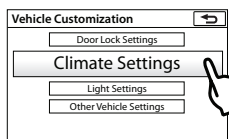 

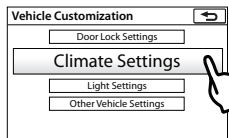 

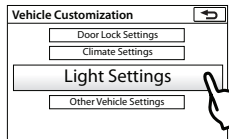 

Vehicle must be in "ON" mode to program personalized settings.

 

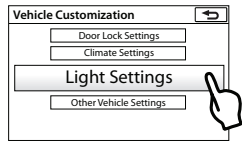 

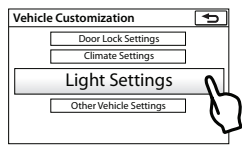 

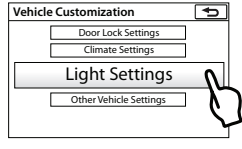 






 


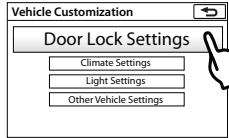

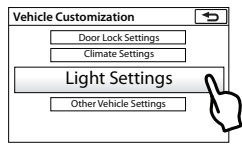

 

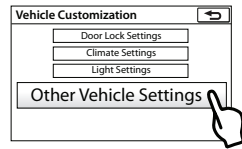 

After changing the settings, touch **Save**.



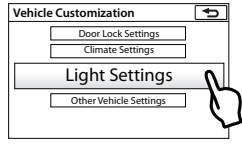



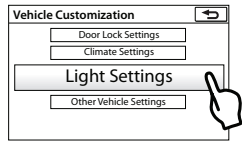


Settings that can be customized by:

Door Lock Settings	Using the navigation system	Dealer
<p>1. Speed Sensitive Auto Lock When the vehicle reaches 13 mph:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The doors will not lock. (Standard) = Off <input type="checkbox"/> All the doors will automatically lock. = On 		
<p>2. Shift-Linked Auto Lock When the vehicle is taken out of park and placed into another range:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The doors, if unlocked, will not automatically lock. = Off <input type="checkbox"/> The doors automatically lock. (Standard) = On 		
<p>3. Shift-Linked Auto Unlock When the engine is running and the vehicle is placed into park:</p> <ul style="list-style-type: none"> <input type="checkbox"/> All the doors will remain locked. = Off <input type="checkbox"/> All the doors will automatically unlock. (Standard) = On 		
<p>4. Driver Door-Linked Unlock When the vehicle is turned off and the driver door is opened within 10 seconds:</p> <ul style="list-style-type: none"> <input type="checkbox"/> All of the remaining doors will remain locked. (Standard) = Off <input type="checkbox"/> All of the remaining doors will automatically unlock. = On 		
<p>5. Unlock on Second Key Turn When using the mechanical key to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Turning the key one time will unlock all doors. = Off <input type="checkbox"/> Turning the key one time unlocks the driver door, and two times unlocks all doors. (Standard) = On 		
<p>6. Remote 2-Press Unlock When using the electronic key to unlock the doors:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Pressing the unlock button one time will unlock all doors. = Off <input type="checkbox"/> Pressing the unlock button one time unlocks the driver door, and two times unlocks all doors. (Standard) = On 		

LPS options were correct at time of development. All options are subject to change without prior notice.

Door Lock Settings (cont'd)	Using the navigation system	Dealer
<p>7. Select Doors to Unlock When pressing the unlock button one time on the electronic key: <input type="checkbox"/> All doors will unlock (Option # 6 Remote 2-Press Unlock must be Off). = All <input type="checkbox"/> Only driver door unlocks (Option # 6 Remote 2-Press Unlock must be On). (Standard) = Driver</p>		
<p>8. Access System with Elec. Key When unlocking the doors: <input type="checkbox"/> Deactivates SmartAccess, only accessible using elec. key unlock button. = Off <input type="checkbox"/> Use SmartAccess (touch door handle) or remote buttons. (Standard)= On</p>		
<p>9. Auto Relock Time Adjust When the unlock button on the electronic key is pressed and the doors are not opened: <input type="checkbox"/> The doors will automatically re-lock in 30 seconds. <input type="checkbox"/> The doors will automatically re-lock in 60 seconds. (Standard) <input type="checkbox"/> The doors will automatically re-lock in 120 seconds.</p>		
<p>10. Lock/Unlock Answer Back Using the electronic key, the following functions can be programmed: <input type="checkbox"/> Press the lock/unlock button and the system will not beep. = Off <input type="checkbox"/> Press the lock/unlock button and the system will beep. (Standard) = On</p>		
<p>11. Lock Feedback Volume When the lock button is pressed on the electronic key, the system volume can be programmed as follows:</p> <p> <input type="checkbox"/> off <input type="checkbox"/> volume 1 <input type="checkbox"/> volume 2 <input type="checkbox"/> volume 3 <input type="checkbox"/> volume 4 <input type="checkbox"/> volume 5 <input type="checkbox"/> loudest (standard) </p>		
<p>Climate Settings</p> <p>12. Smog Sensor Sensitivity When in AUTO recirculation mode, the sensor will determine when to switch from outside air to recirculated air based on outside air quality:</p> <p> <input type="checkbox"/> lowest sensitivity <input type="checkbox"/> sensitivity 2 <input type="checkbox"/> sensitivity 3 <input type="checkbox"/> normal (standard) <input type="checkbox"/> sensitivity 5 <input type="checkbox"/> sensitivity 6 <input type="checkbox"/> highest sensitivity </p>		
<p>13. Auto A/C Mode When Auto A/C is selected: <input type="checkbox"/> It will automatically engage the air conditioner compressor to reach the set temperature. (Standard) = On <input type="checkbox"/> It will automatically achieve a set temperature, warm or cool, without engaging the air conditioner compressor.* = Off * Note: The AC compressor will be engaged when the auto AC button is pressed a second time.</p>		
<p>Light Settings</p> <p>14. Light Sensor Sensitivity When driving the vehicle, the front headlights can be programmed to turn ON under darker or lighter ambient light conditions. (Headlight switch must be in "AUTO" mode):</p> <p> <input type="checkbox"/> very dark <input type="checkbox"/> dark <input type="checkbox"/> normal (standard) <input type="checkbox"/> light <input type="checkbox"/> very light </p>		

Light Settings (cont'd)	Using the navigation system	Dealer
<p>15. Headlight Off Time Adjust After turning off the ignition and all the doors are closed, if the headlights are ON or in the AUTO position:</p> <ul style="list-style-type: none"> <input type="checkbox"/> The headlights will turn off immediately, when the vehicle is turned off and the driver door is opened. <input type="checkbox"/> The headlights will turn off in 30 seconds. (Standard) <input type="checkbox"/> The headlights will turn off in 60 seconds. <input type="checkbox"/> The headlights will turn off in 90 seconds. 		
<p>16. Daytime Running Lights Illumination of daytime running lights:</p> <ul style="list-style-type: none"> <input type="checkbox"/> OFF. <input type="checkbox"/> ON. (Standard) 		
<p>17. Int. Light Off Adjustment After closing the door, the interior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 15 seconds. (Standard) <input type="checkbox"/> 7.5 seconds. <input type="checkbox"/> 30 seconds. 		
<p>18. Ext. Lights Off Time Adjust After closing the door, the exterior lights can be adjusted to stay on for the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> 15 seconds. (Standard) <input type="checkbox"/> 7.5 seconds. <input type="checkbox"/> 30 seconds. <input type="checkbox"/> 0 seconds. 		
<p>19. Instrument Dim. Sensitivity Level of light required to dim the instrument panel lights:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> very dark</div> <div style="text-align: center;"> dark</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> light</div> <div style="text-align: center;"> very light</div> </div>		
<p>20. Instrument Rest. Sensitivity Level of light required to brighten the instrument panel lights:</p> <div style="display: flex; justify-content: space-around; align-items: center;"> <div style="text-align: center;"> very light</div> <div style="text-align: center;"> light</div> <div style="text-align: center;"> normal (standard)</div> <div style="text-align: center;"> dark</div> <div style="text-align: center;"> very dark</div> </div>		
<p>Other Vehicle Settings</p> <p>21. Driver's Seat Easy Exit When the vehicle is placed in park, the ignition turned off, the driver seat can be set to the following:</p> <ul style="list-style-type: none"> <input type="checkbox"/> Remain in the current position, as set by the driver. = Off <input type="checkbox"/> Automatically move away from the steering wheel partially. = Partial <input type="checkbox"/> Automatically move away from the steering wheel fully. = Full (Standard) 		

Programmable by Dealer Only	Settings that can be customized by:	
	Using the navigation system	Dealer
22. Efficient Ventilation Mode When the front defogger is activated: <ul style="list-style-type: none"> <input type="checkbox"/> It will automatically blow air onto the windshield without engaging the air conditioner compressor. = Off <input type="checkbox"/> It will automatically engage the air conditioner compressor to blow air onto the windshield. (Standard)= On 	_____	 Dealer only
23. Flashing of Signal Lights Using the electronic key, the following functions can be programmed: <ul style="list-style-type: none"> <input type="checkbox"/> Press the lock or unlock button and the lights will not flash. = Off <input type="checkbox"/> Press the lock button and the lights will flash once. Press the unlock button and the lights will flash twice. (Standard) = On 	_____	 Dealer only
24. Open Windows with Elec. Key When pressing the unlock button on the electronic key for 3 seconds: <ul style="list-style-type: none"> <input type="checkbox"/> The windows will not roll down. (Standard) = Off <input type="checkbox"/> All the windows will roll down. = On 	_____	 Dealer only
25. Open windows warning* When pressing the unlock button on the electronic key for 3 seconds to roll down the windows: <ul style="list-style-type: none"> <input type="checkbox"/> The buzzer will not sound. = Off <input type="checkbox"/> The buzzer will sound. (Standard) = On * Option #24 must be on.	_____	 Dealer only
26. Slide/Tilt Moonroof with Elec. Key When option #24 is on, the moonroof can be programmed for the following: <ul style="list-style-type: none"> <input type="checkbox"/> Slide. (Standard) <input type="checkbox"/> Tilt. 	_____	 Dealer only
27. Opening windows using key When using the mechanical key to operate the windows: <ul style="list-style-type: none"> <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will not open the windows. (Standard) = Off <input type="checkbox"/> Turning the key right and holding the position for 2 seconds will open the windows. = On 	_____	 Dealer only
28. Slide/Tilt Moonroof using Key When option #27 is on, the moonroof can be programmed for the following: <ul style="list-style-type: none"> <input type="checkbox"/> Slide. (Standard) <input type="checkbox"/> Tilt. 	_____	 Dealer only
29. Tilt Away of Steering Wheel When the vehicle is placed in park, the ignition turned off, the steering wheel can be set to the following: <ul style="list-style-type: none"> <input type="checkbox"/> Automatically move up and away from the driver position setting. (Standard) = On <input type="checkbox"/> Remain in the current position, as set by the driver. = Off 	_____	 Dealer only
30. Automatic High Beam* Illumination of automatic high beam: <ul style="list-style-type: none"> <input type="checkbox"/> OFF. <input type="checkbox"/> ON. (Standard) * If equipped.	_____	 Dealer only

Date _____ Customer Signature _____

Repair Order Number (Dealer only) _____

Vehicle Identification Number (Dealer only) _____