

## INSPECTION


### 1. INSPECT THEFT DETERRENT INDICATOR LIGHT OPERATION

Connect the positive (+) lead from the battery terminal 2 and negative (-) lead to terminal 5, and check that the warning light lights up.

If operation is not as specified, replace the light control rheostat.

### 2. INSPECT THEFT DETERRENT INDICATOR LIGHT CIRCUIT

(See page DI-644)

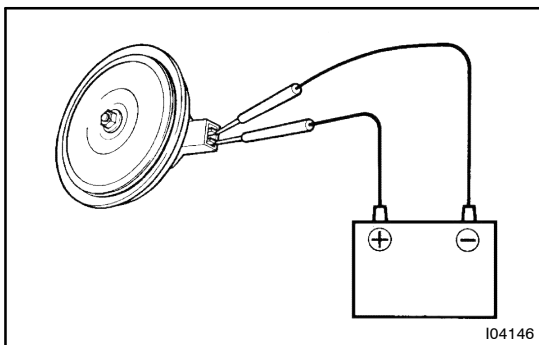


### 3. INSPECT THEFT DETERRENT HORN OPERATION

Connect the positive (+) lead from the battery to the terminal 1 and negative (-) lead to the theft deterrent horn body, and check that the theft deterrent horn blows.

If operation is not as specified, replace the horn.

### 4. INSPECT THEFT DETERRENT HORN CIRCUIT

(See page DI-640)

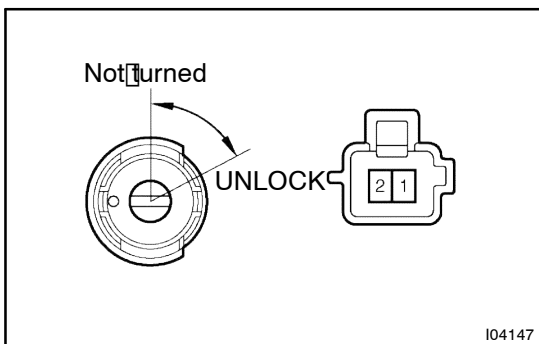


### 5. INSPECT LUGGAGE COMPARTMENT DOOR KEY UNLOCK SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Not turned	-	No continuity
UNLOCK	1 - 2	Continuity

If continuity is not as specified, replace the switch.

### 6. INSPECT LUGGAGE COMPARTMENT DOOR KEY UNLOCK SWITCH CIRCUIT

(See page DI-630)

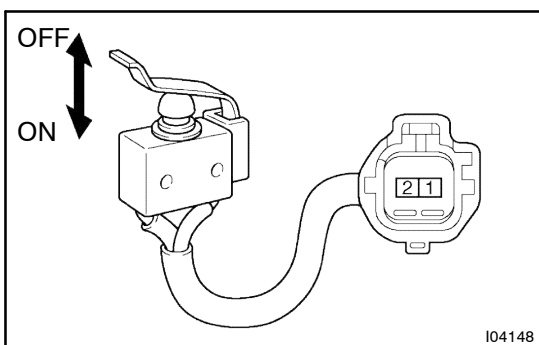

### 7. INSPECT ENGINE HOOD COURTESY SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	-	No continuity
UNLOCK	1 - 2	Continuity

If continuity is not as specified, replace the switch.

### 8. INSPECT ENGINE HOOD COURTESY SWITCH CIRCUIT

(See page DI-626)