


ADJUSTMENT

1. INSPECT PARK/NEUTRAL POSITION SWITCH ASSY

- (a) Apply the parking brake and turn the ignition switch ON.
- (b) Depress the brake pedal and check that the engine starts only when the shift lever is set in N or P position and it does not start in other positions.
- (c) Check that the back-up light is lit and **the reverse warning buzzer** sounds only when the shift lever is set in R position and these do not function in other positions.

If a failure is found, check the park/neutral position switch for continuity.

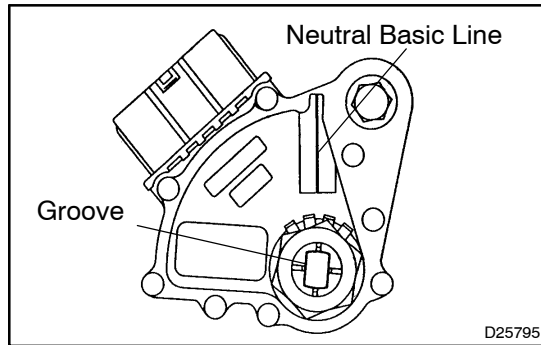

2. ADJUST PARK/NEUTRAL POSITION SWITCH ASSY

- (a) Loosen the bolt of park/neutral position switch and set the shift lever to the N position.
- (b) Align the groove and neutral basic line.
- (c) Hold the switch in position and tighten the bolt.
Torque: 13.0 N·m (130 kgf·cm, 9 ft·lbf)
- (d) After adjustment, perform the inspection described in step 1.