

REMOVAL


1. REMOVE MAP LAMP ASSEMBLY

- (a) Open the glasses case.
- (b) Using a screwdriver, remove the lens and cover.

HINT:


Tape the screwdriver tip before use.

- (c) Remove the 4 screws and map lamp assembly.
- (d) Disconnect the connectors.

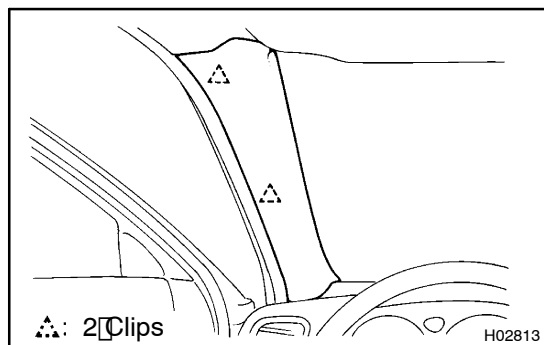

2. REMOVE THESE PARTS:

- (a) Rear seat
(See page BO-11)
- (b) Sun visors and holders
- (c) Assist grips
- (d) Front door inside scuff plates
- (e) Rear door inside scuff plates
- (f) Front door opening trims
- (g) Rear door opening trims
- (h) Front pillar garnishes
- (i) Rear personal lights
- (j) Rear seat side garnishes

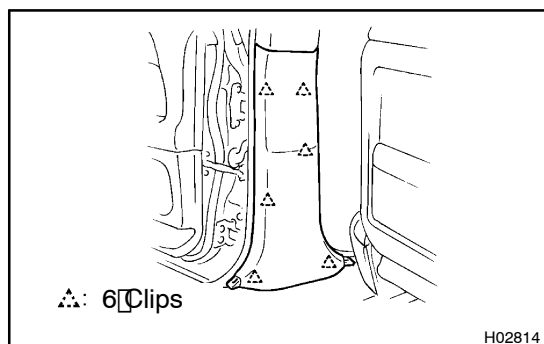


3. REMOVE CENTER PILLAR LOWER GARNISH

Using a screwdriver, remove the center pillar lower garnish.

HINT:


- Tape the screwdriver tip before use.
- Do the same for LH and RH.

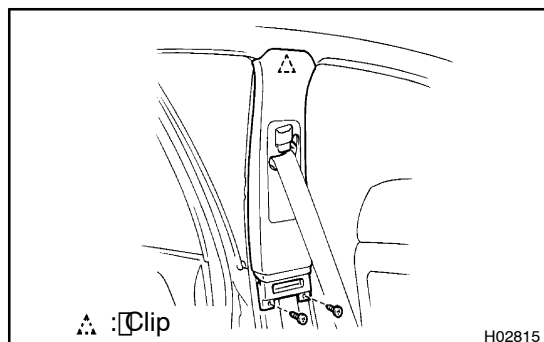

4. REMOVE CENTER PILLAR UPPER GARNISH

HINT:

- Tape the screwdriver tip before use.
 - Do the same for LH and RH.
- (a) Remove the 2 screws.
 - (b) Using the screwdriver, remove the center pillar upper garnish.

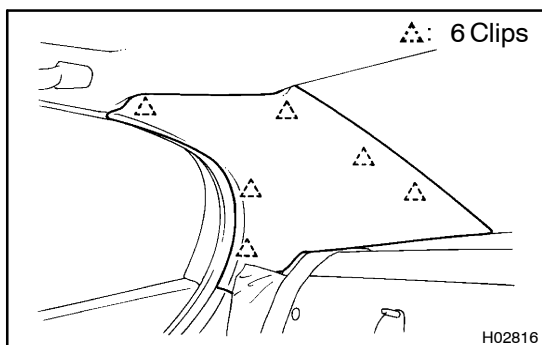

5. REMOVE ROOF SIDE INNER GARNISH


Using a screwdriver, remove the roof side inner garnishes.

HINT:

Tape the screwdriver tip before use.

6. REMOVE ROOF HEADLINING

- (a) Remove the opening trim.
- (b) Release the 3 clips and fastener tapes to remove the roof headlining.

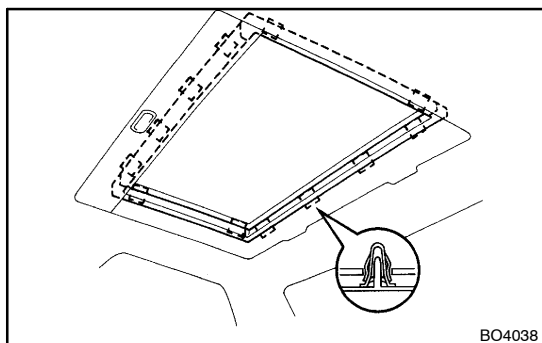


7. REMOVE SLIDING ROOF GARNISHES

Using a screwdriver, remove the sliding roof garnishes.

HINT:

- Tape the screwdriver tip before use.
- Be careful not to scratch the glass or garnishes.

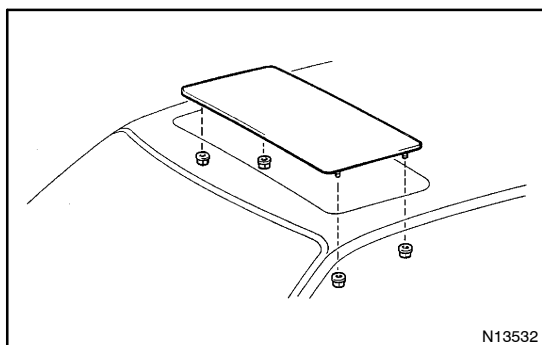


8. REMOVE SLIDING ROOF GLASS

- (a) Remove the 4 nuts.
- (b) Pull the glass upward to remove it.

9. REMOVE SLIDING ROOF HOUSING

- (a) Disconnect the connector.
- (b) Remove the 4 clips and disconnect the 4 drain hoses from the housing.
- (c) Remove the 12 bolts and 6 brackets.
- (d) Remove the 6 nuts and sliding roof housing from the body.

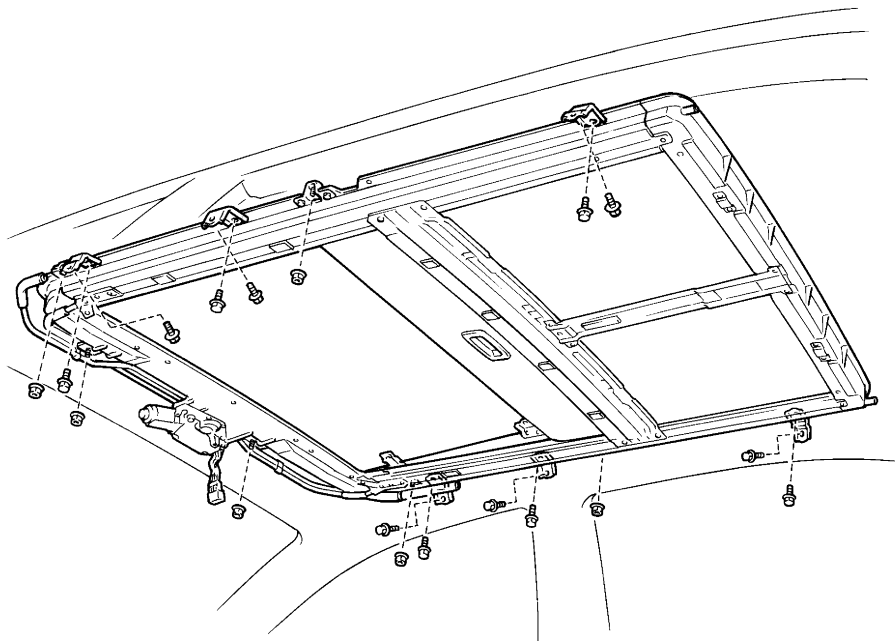

H02808