


DTC	B1242	WIRELESS DOOR LOCK TUNER CIRCUIT MALFUNCTION
------------	--------------	---

CIRCUIT DESCRIPTION

This DTC is output when a ground short is detected in terminal RDA or PRG.

DTC No.	DTC Detection Condition	Trouble Area
B1242	Ground short in terminal RDA or PRG	<ul style="list-style-type: none"> • Door control receiver • Wire harness • Instrument panel J/B assy (Body ECU)

WIRING DIAGRAM

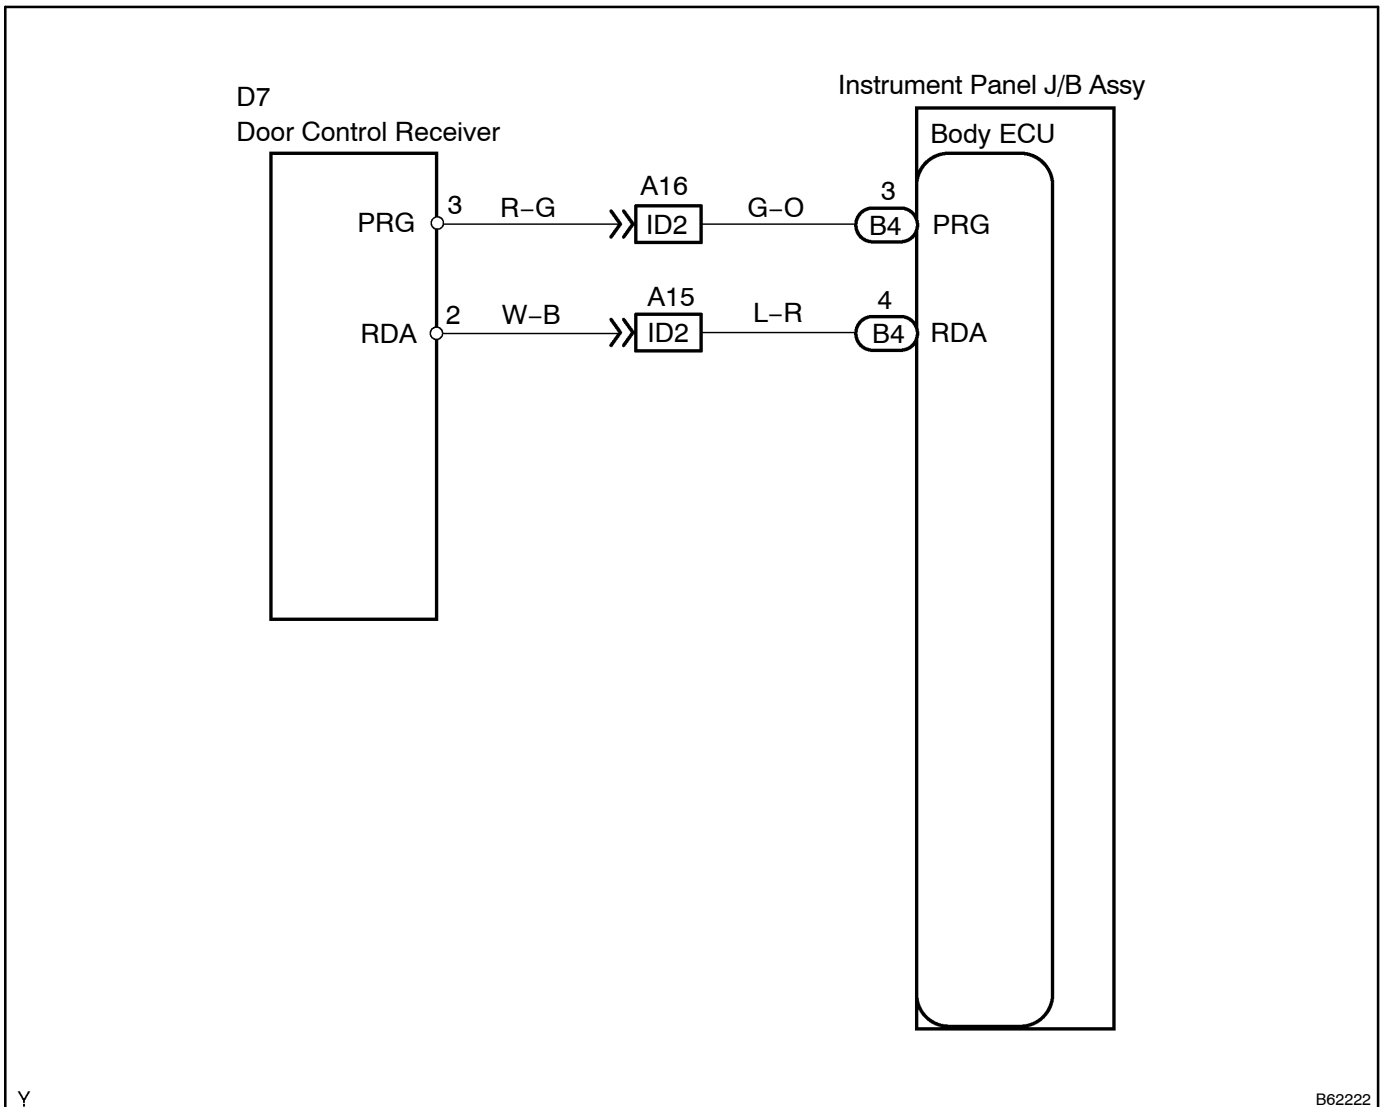

Y

B62222

INSPECTION PROCEDURE

1 CHECK DOOR CONTROL RECEIVER

- (a) Check that the wireless system operates when a new or normal door control receiver is installed.
 (b) Check that no DTC is output.

OK → REPLACE DOOR CONTROL RECEIVER


NG

2 CHECK WIRE HARNESS (DOOR CONTROL RECEIVER ↔ INSTRUMENT PANEL JUNCTION BLOCK (BODY ECU)) (DOOR CONTROL RECEIVER OR INSTRUMENT PANEL JUNCTION BLOCK (BODY ECU) ↔ BODY GROUND)

Wire Harness Side


D7

Door Control Receiver

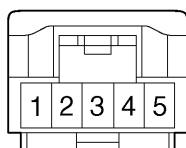

B4

Instrument Panel J/B Assy

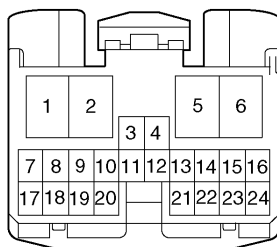

Y

B62225

- (a) Disconnect the D7 receiver connector.
 (b) Disconnect the B4 J/B connector.
 (c) Check the continuity between the wire harness side connectors.

Standard:

Symbols (Terminal No.)	Specified Condition
RDA (D7-2) ↔ RDA (B4-4)	Continuity
PRG (D7-3) ↔ PRG (B4-3)	Continuity

- (d) Check the continuity between the D7 receiver connector or B4 J/B connector and body ground.

Standard:

Symbols (Terminal No.)	Specified Condition
RDA (D7-2) or RDA (B4-4) ↔ Body ground	No continuity
PRG (D7-3) or PRG (B4-3) ↔ Body ground	No continuity

NG → REPAIR OR REPLACE HARNESS AND CONNECTOR

OK

REPLACE INSTRUMENT PANEL JUNCTION BLOCK ASSY