

# *Service Manual*

*Pioneer*  
**TOYOTA**



ORDER NO.  
**CRT2497**

# **LEXUS GS300,430** **AUDIO SYSTEM** **POWER AMPLIFIER**

VEHICLE	DESTINATION	PRODUCED AFTER	TOYOTA PART No.	ID No.	PIONEER MODEL No.
LEXUS GS300,430	USA,EUROPE	August 2000	86280-30372	—	GM-8506ZT/E
					GM-8506ZT-91/E
			86280-30362	—	GM-8606ZT/E
					GM-8606ZT-91/E

Manufactured for TOYOTA  
by PIONEER CORPORATION

PUB. NO. **CRT2497**

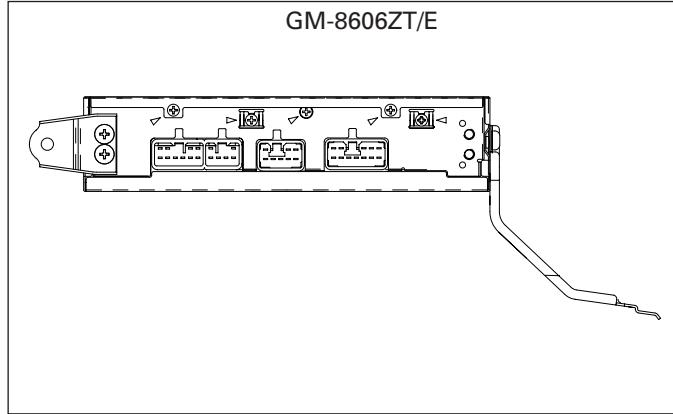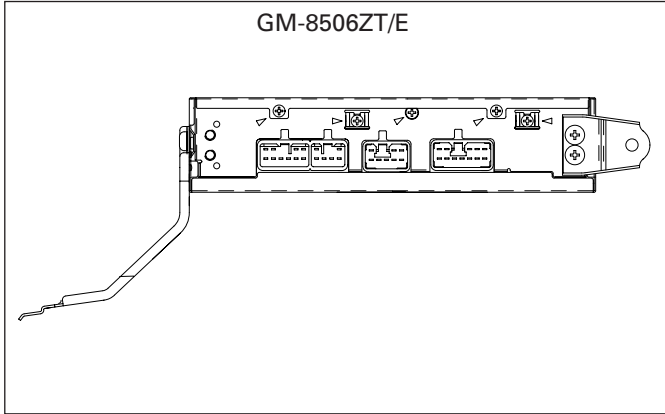

**NOTE:**

- The GM-8506ZT-91/E and GM-8606ZT-91/E are supplementally genuine part for a TOYOTA vehicle, and a Pioneer product for recycling stock.
- As for the structure and electrical system, there is no difference between the GM-8506ZT-91/E, GM-8606ZT-91/E and GM-8506ZT/E, GM-8606ZT/E.
- Supplementally model is identical to the original except for the addition of following items.

Description	Part No.	
	GM-8506ZT-91/E	GM-8606ZT-91/E
Cover	CEG1045	CEG1045
Air cushioned bag	CEG1081	CEG1081
Carton	CHG3331	CHG3331
Contain Box	CHL4148	CHL4149

**CONTENTS**


1. SAFETY INFORMATION.....2	7. GENERAL INFORMATION.....29
2. EXPLODED VIEWS AND PARTS LIST .....3	7.1 DIAGNOSIS .....29
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM ....5	7.1.1 DISASSEMBLY.....29
4. PCB CONNECTION DIAGRAM.....12	7.1.2 CONNECTOR FUNCTION DESCRIPTION .....30
5. ELECTRICAL PARTS LIST.....20	7.2 IC .....31
6. ADJUSTMENT .....25	7.3 EXPLANATION.....33
	7.3.1 OPERATIONAL FLOW CHART .....33
	7.3.2 SYSTEM BLOCK DIAGRAM .....35
	7.3.3 SERVICE MODE FOR DSP AMPLIFIER ....36
	8. SPECIFICATIONS .....39

**1. SAFETY INFORMATION**

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer. Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual. Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty. If you are not qualified to perform the repair of this product properly and safely; you should not risk trying to do so and refer the repair to a qualified service technician.

## 2. EXPLODED VIEWS AND PARTS LIST

### 2.1 EXTERIOR (GM-8506ZT/E)

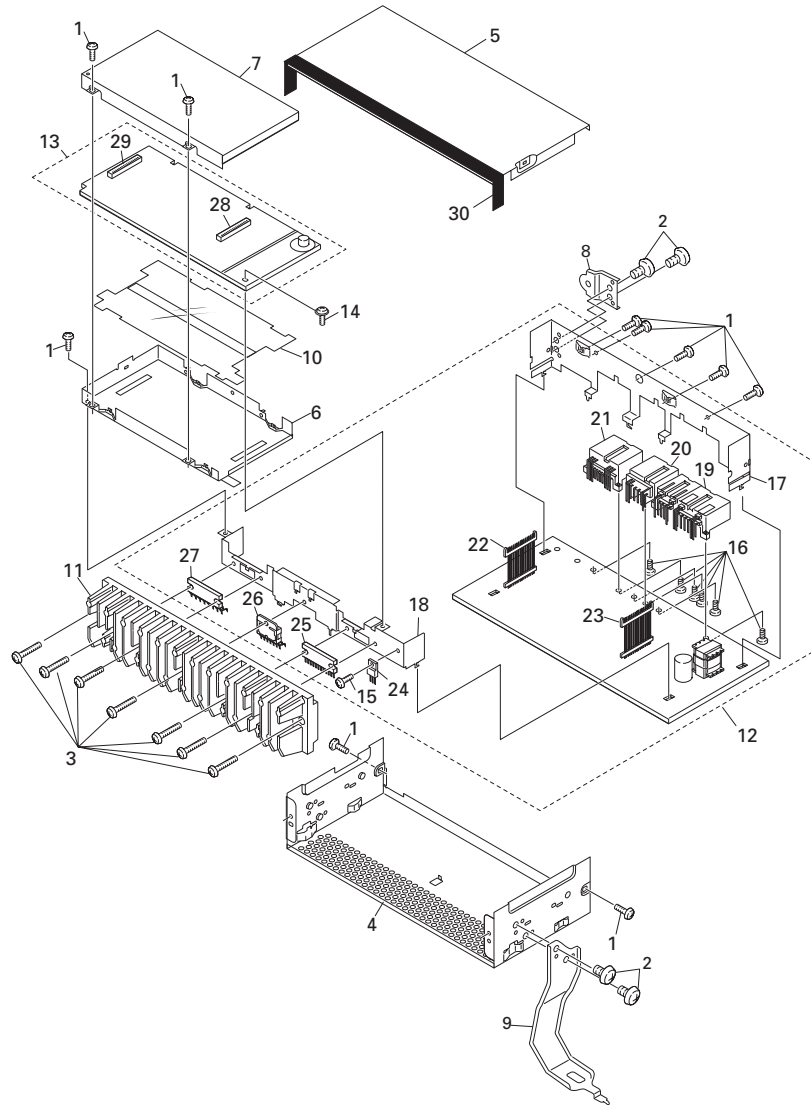


**NOTE:**

- Parts marked by "\*" are generally unavailable because they are not in our Master Spare Parts List.
- Screws adjacent to ∇ mark on the product are used for disassembly.

**● EXTERIOR SECTION PARTS LIST**

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ30P060FMC	16	Screw(M3x6)	CBA1393	
2	Screw	BMZ50P060FMC	17	Bracket	CNC6807	
3	Screw(M3x5)	CBA1327	18	Holder	CNC6808	
4	Chassis	CNA1852	19	Connector(CN901)	CKM1222	
5	Case	CNB2102	20	Connector(CN902)	CKM1244	
6	Shield	CNC6809	21	Connector(CN903)	CKM1245	
7	Shield	CNC6810	22	Plug(CN905)	CKS3631	
8	Bracket	CNC6813	23	Plug(CN906)	CKS3631	
9	Bracket	CNC6811	24	IC(IC901)	NJM7805FA	
10	Insulator	CNM5537	25	IC(IC801)	TA8221AH1	
11	Heat Sink	CNR1432	26	IC(IC821)	PAL001A	
12	Amp Unit	CWM6207	27	IC(IC851)	TA8225H-LF1	
13	DSP Unit	CWM7243	28	Socket(CN51)	CKS3632	
14	Screw	IMS30P060FMC	29	Socket(CN52)	CKS3632	
15	Screw	BMZ30P060FMC	*	30	Seal	CNM5381

## 2.2 EXTERIOR (GM-8606ZT/E)

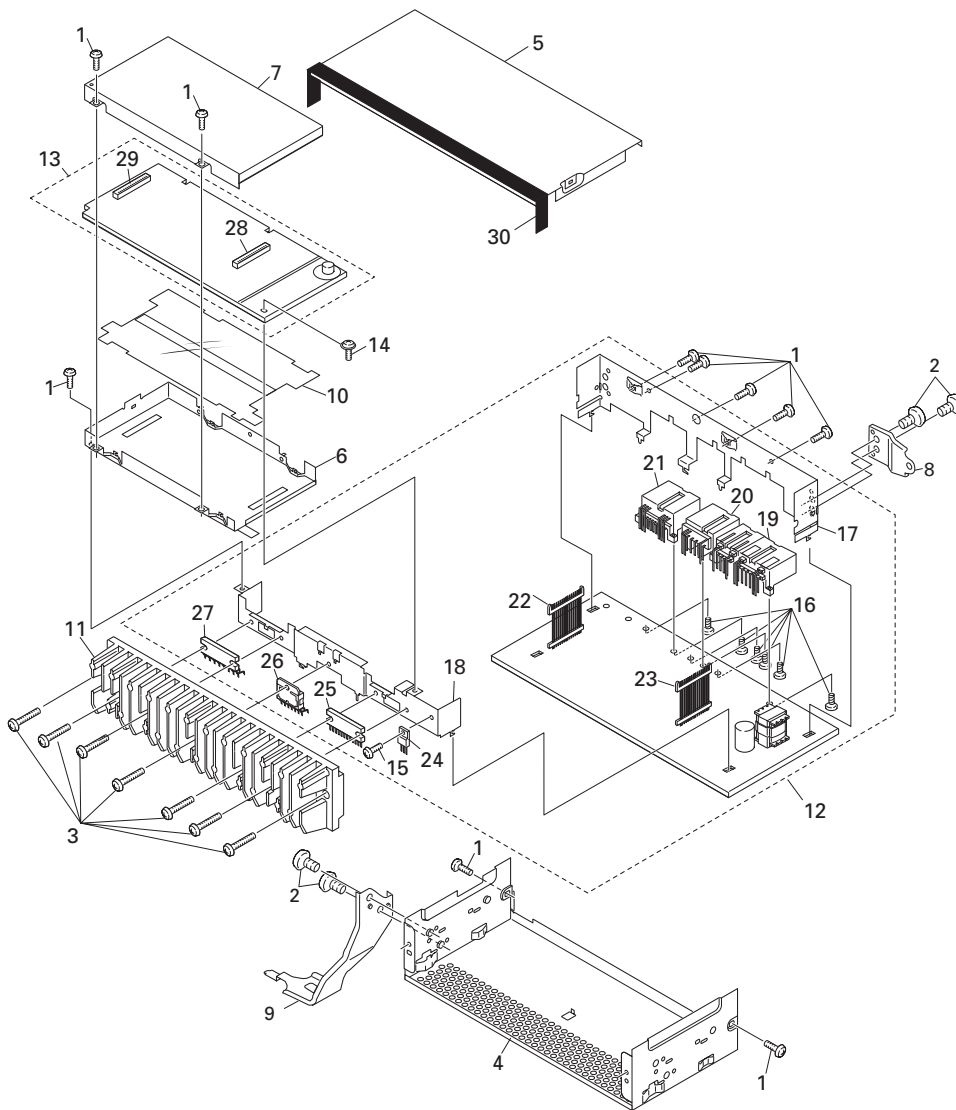


### ● EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ30P060FMC	16	Screw(M3x6)	CBA1393
2	Screw	BMZ50P060FMC	17	Bracket	CNC6807
3	Screw(M3x5)	CBA1327	18	Holder	CNC6808
4	Chassis	CNA1852	19	Connector(CN901)	CKM1222
5	Case	CNB2102	20	Connector(CN902)	CKM1244
6	Shield	CNC6809	21	Connector(CN903)	CKM1245
7	Shield	CNC6810	22	Plug(CN905)	CKS3631
8	Bracket	CNC6813	23	Plug(CN906)	CKS3631
9	Bracket	CNC6812	24	IC(IC901)	NJM7805FA
10	Insulator	CNM5537	25	IC(IC801)	TA8221AH1
11	Heat Sink	CNR1432	26	IC(IC821)	PAL001A
12	Amp Unit	CWM6208	27	IC(IC851)	TA8225H-LF1
13	DSP Unit	CWM7245	28	Socket(CN51)	CKS3632
14	Screw	IMS30P060FMC	29	Socket(CN52)	CKS3632
15	Screw	BMZ30P060FMC	30	Seal	CNM5381

\*

### 3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM



#### 3.1 BLOCK DIAGRAM

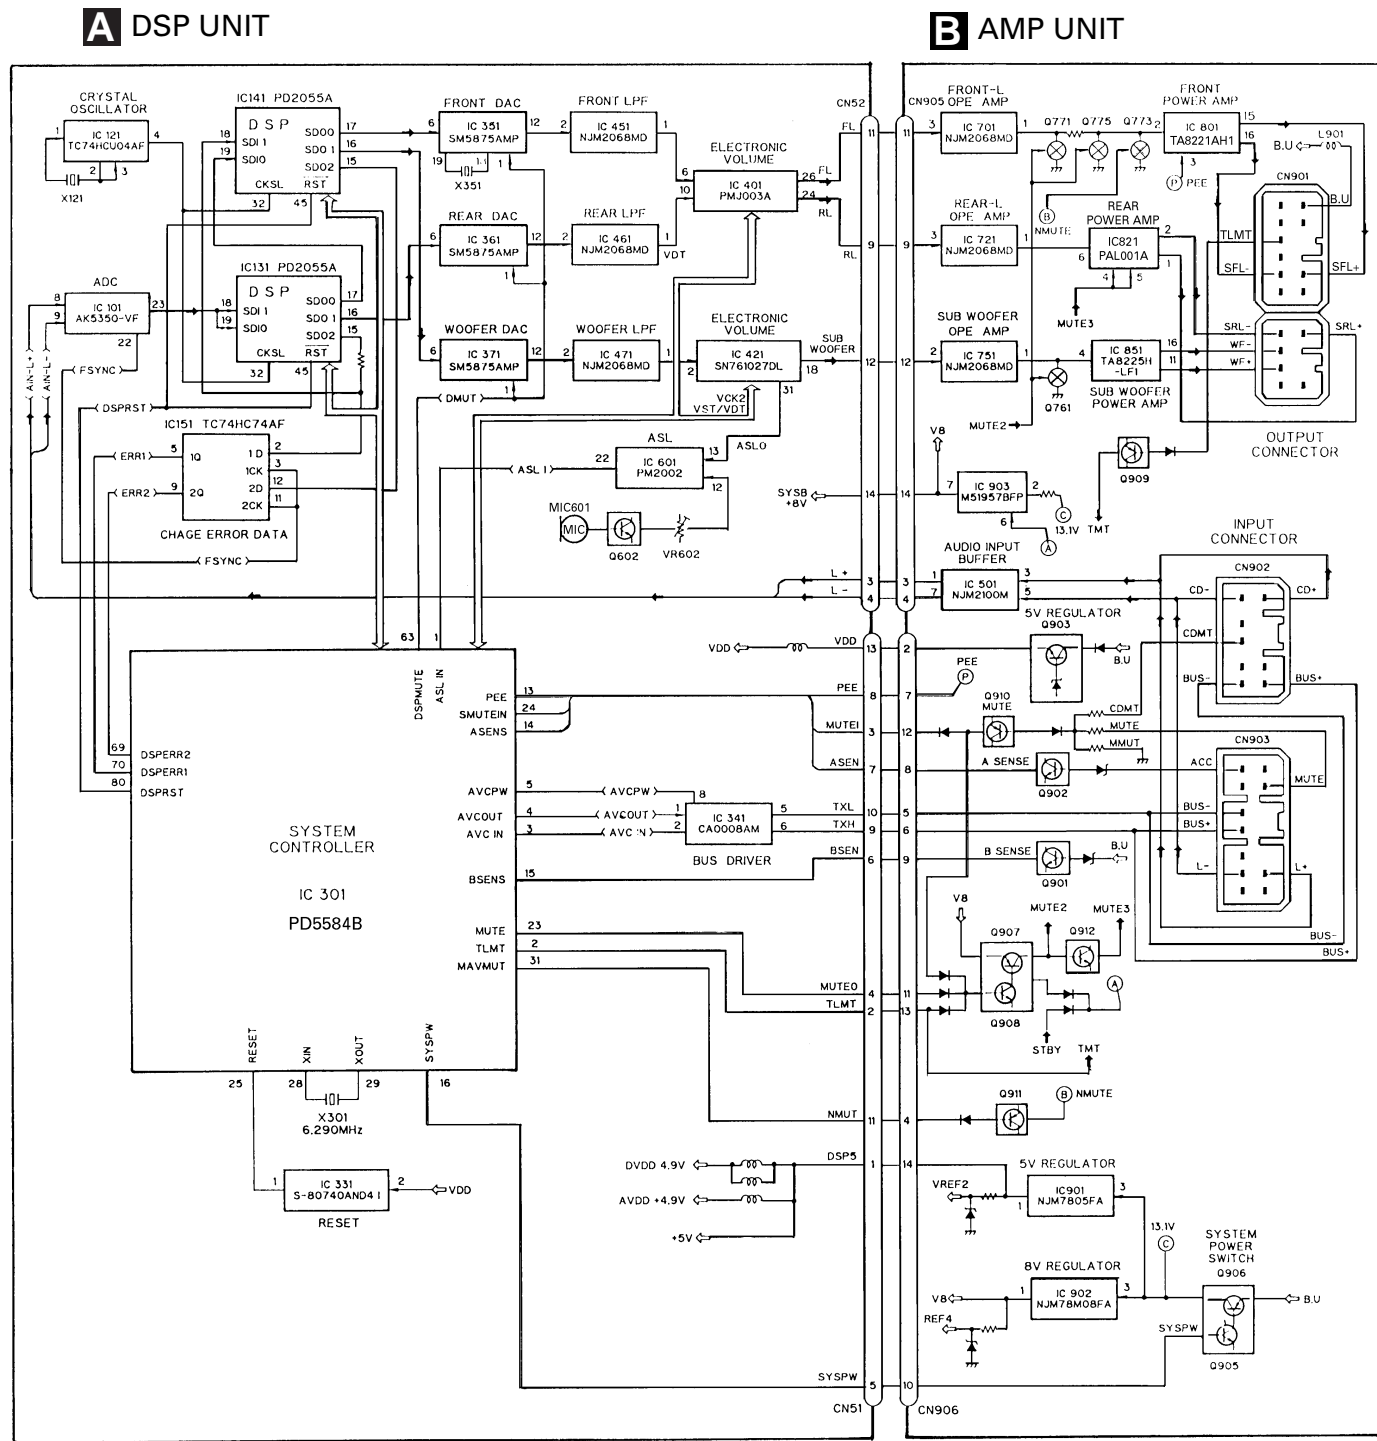

### 3.2 SCHEMATIC DIAGRAM



Note: When ordering service parts, be sure to refer to "EXPLODED VIEWS AND PARTS LIST" or "ELECTRICAL PARTS LIST".

**A-a**

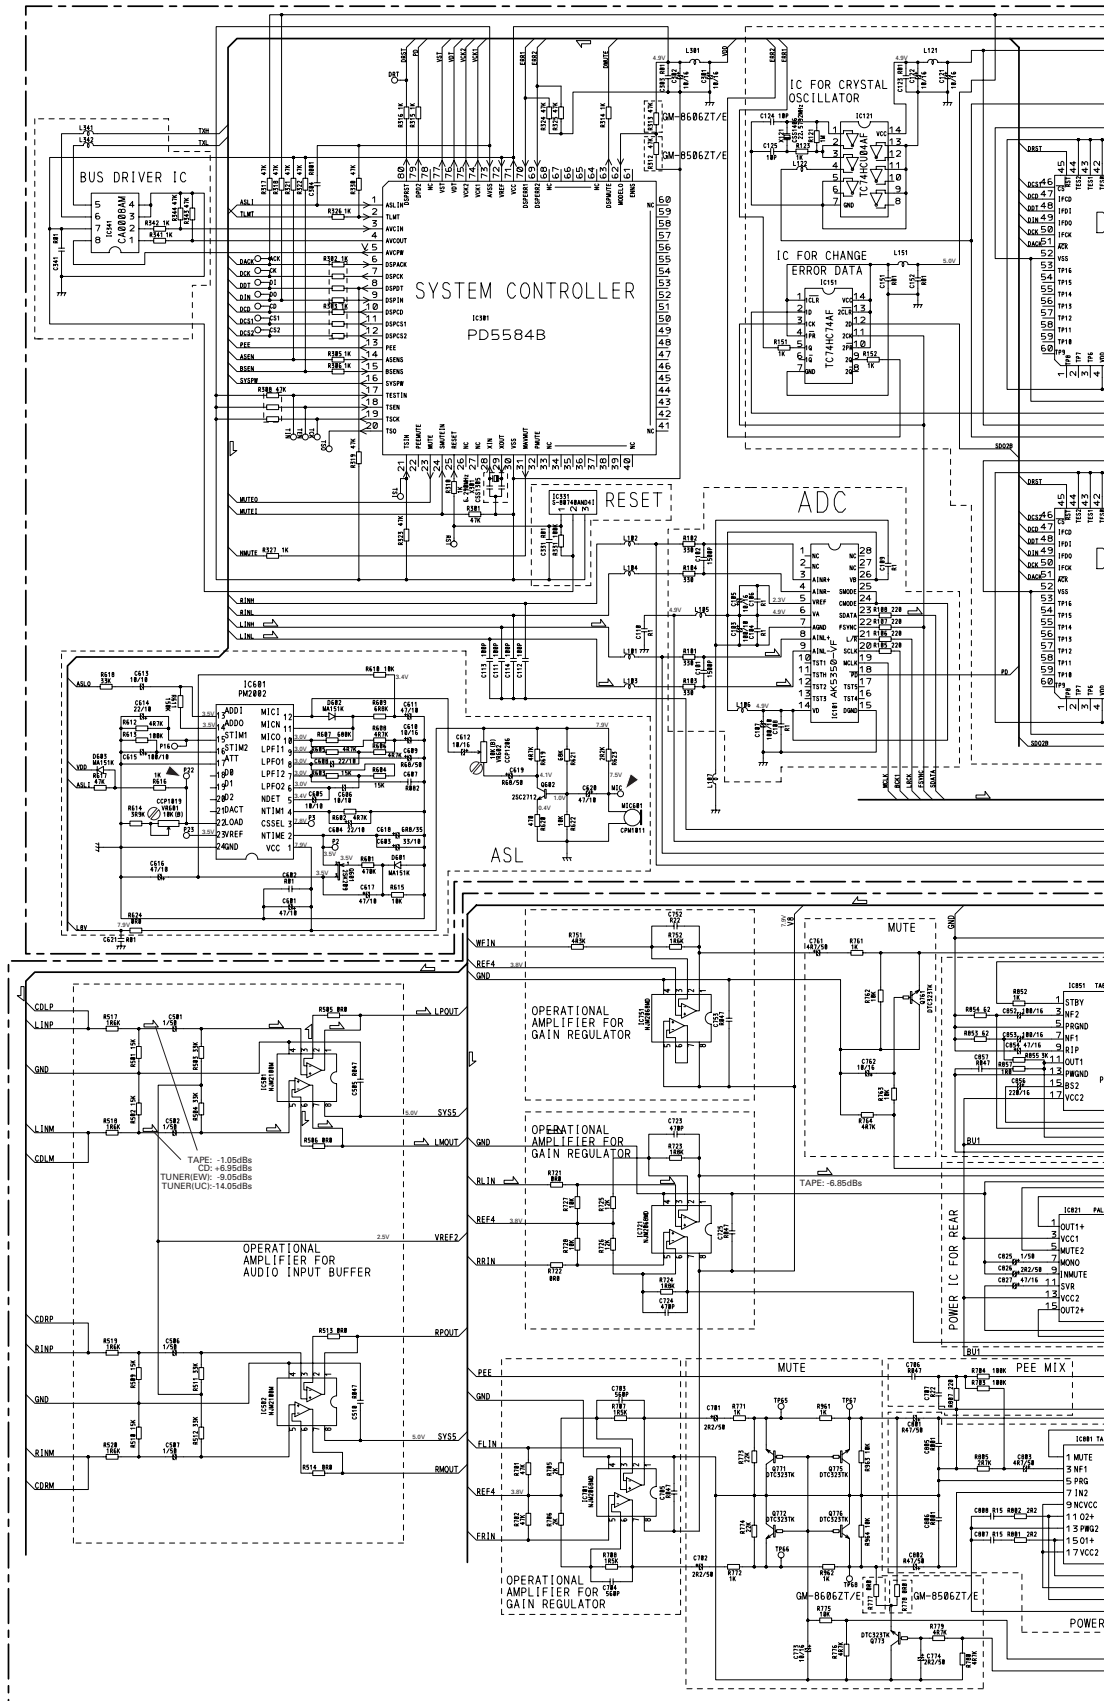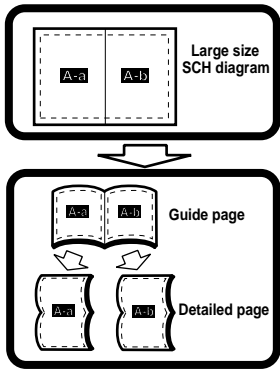

**A B**

# A-b

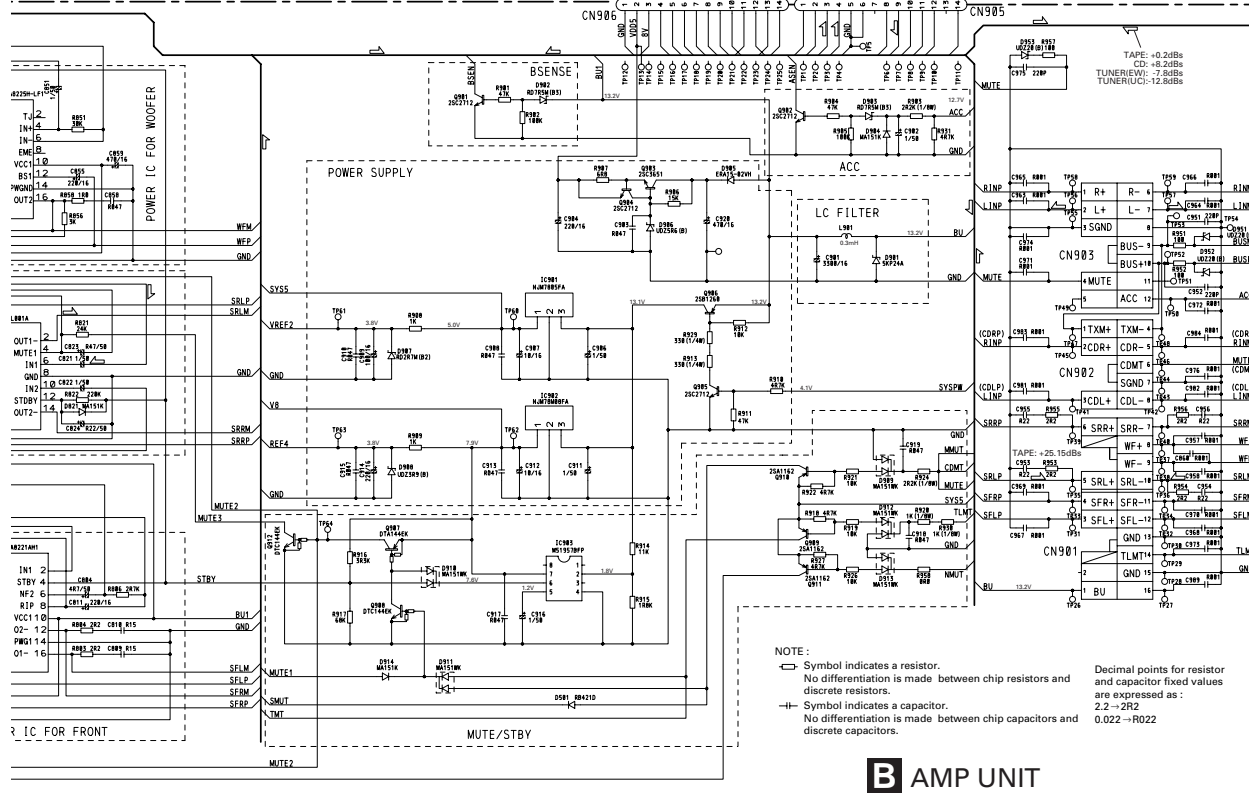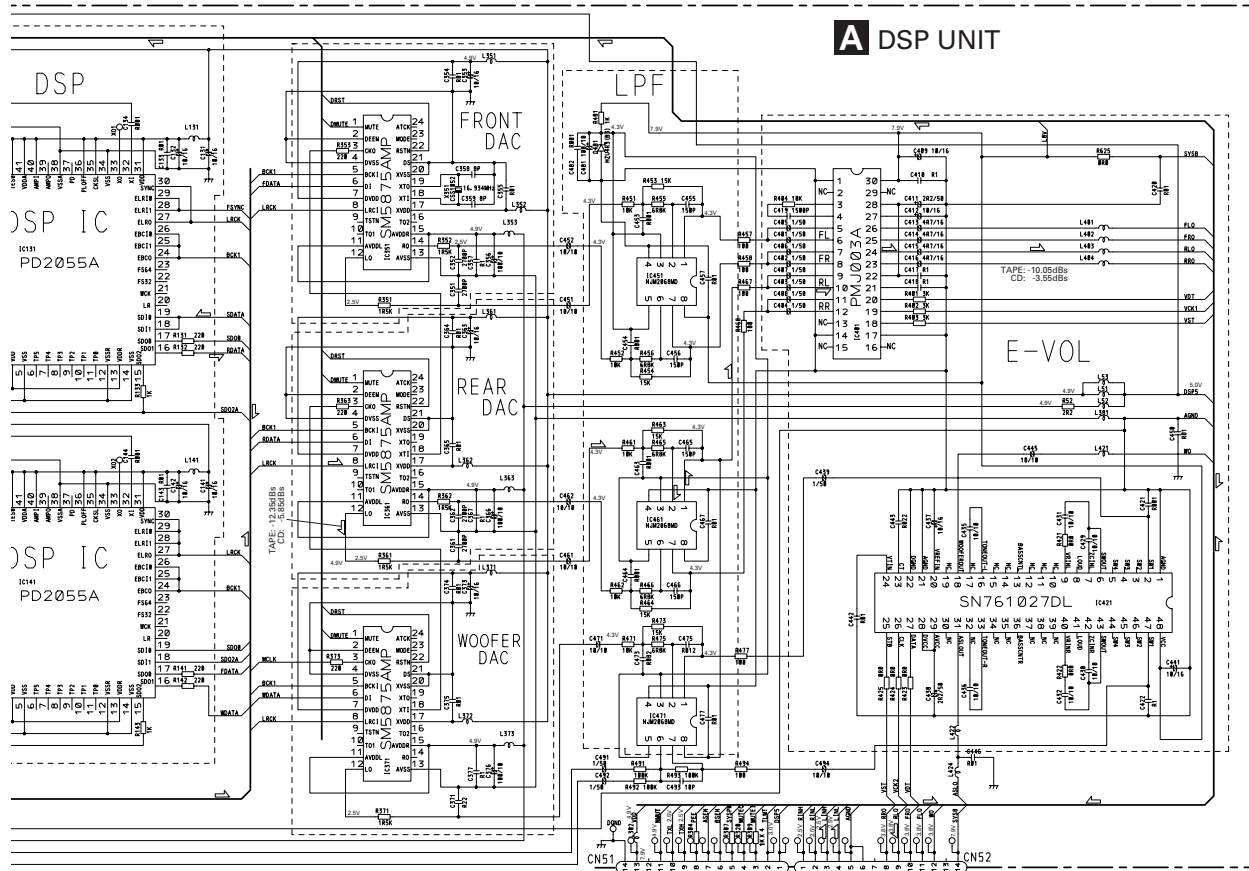

NOTE:

- Symbol indicates a resistor.
- No differentiation is made between chip resistors and discrete resistors.
- ⊖ Symbol indicates a capacitor.
- No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as:  
2.2 → 2R2  
0.022 → R022

# A B

A

B

C

D


A

A-a A-b

B


C

D

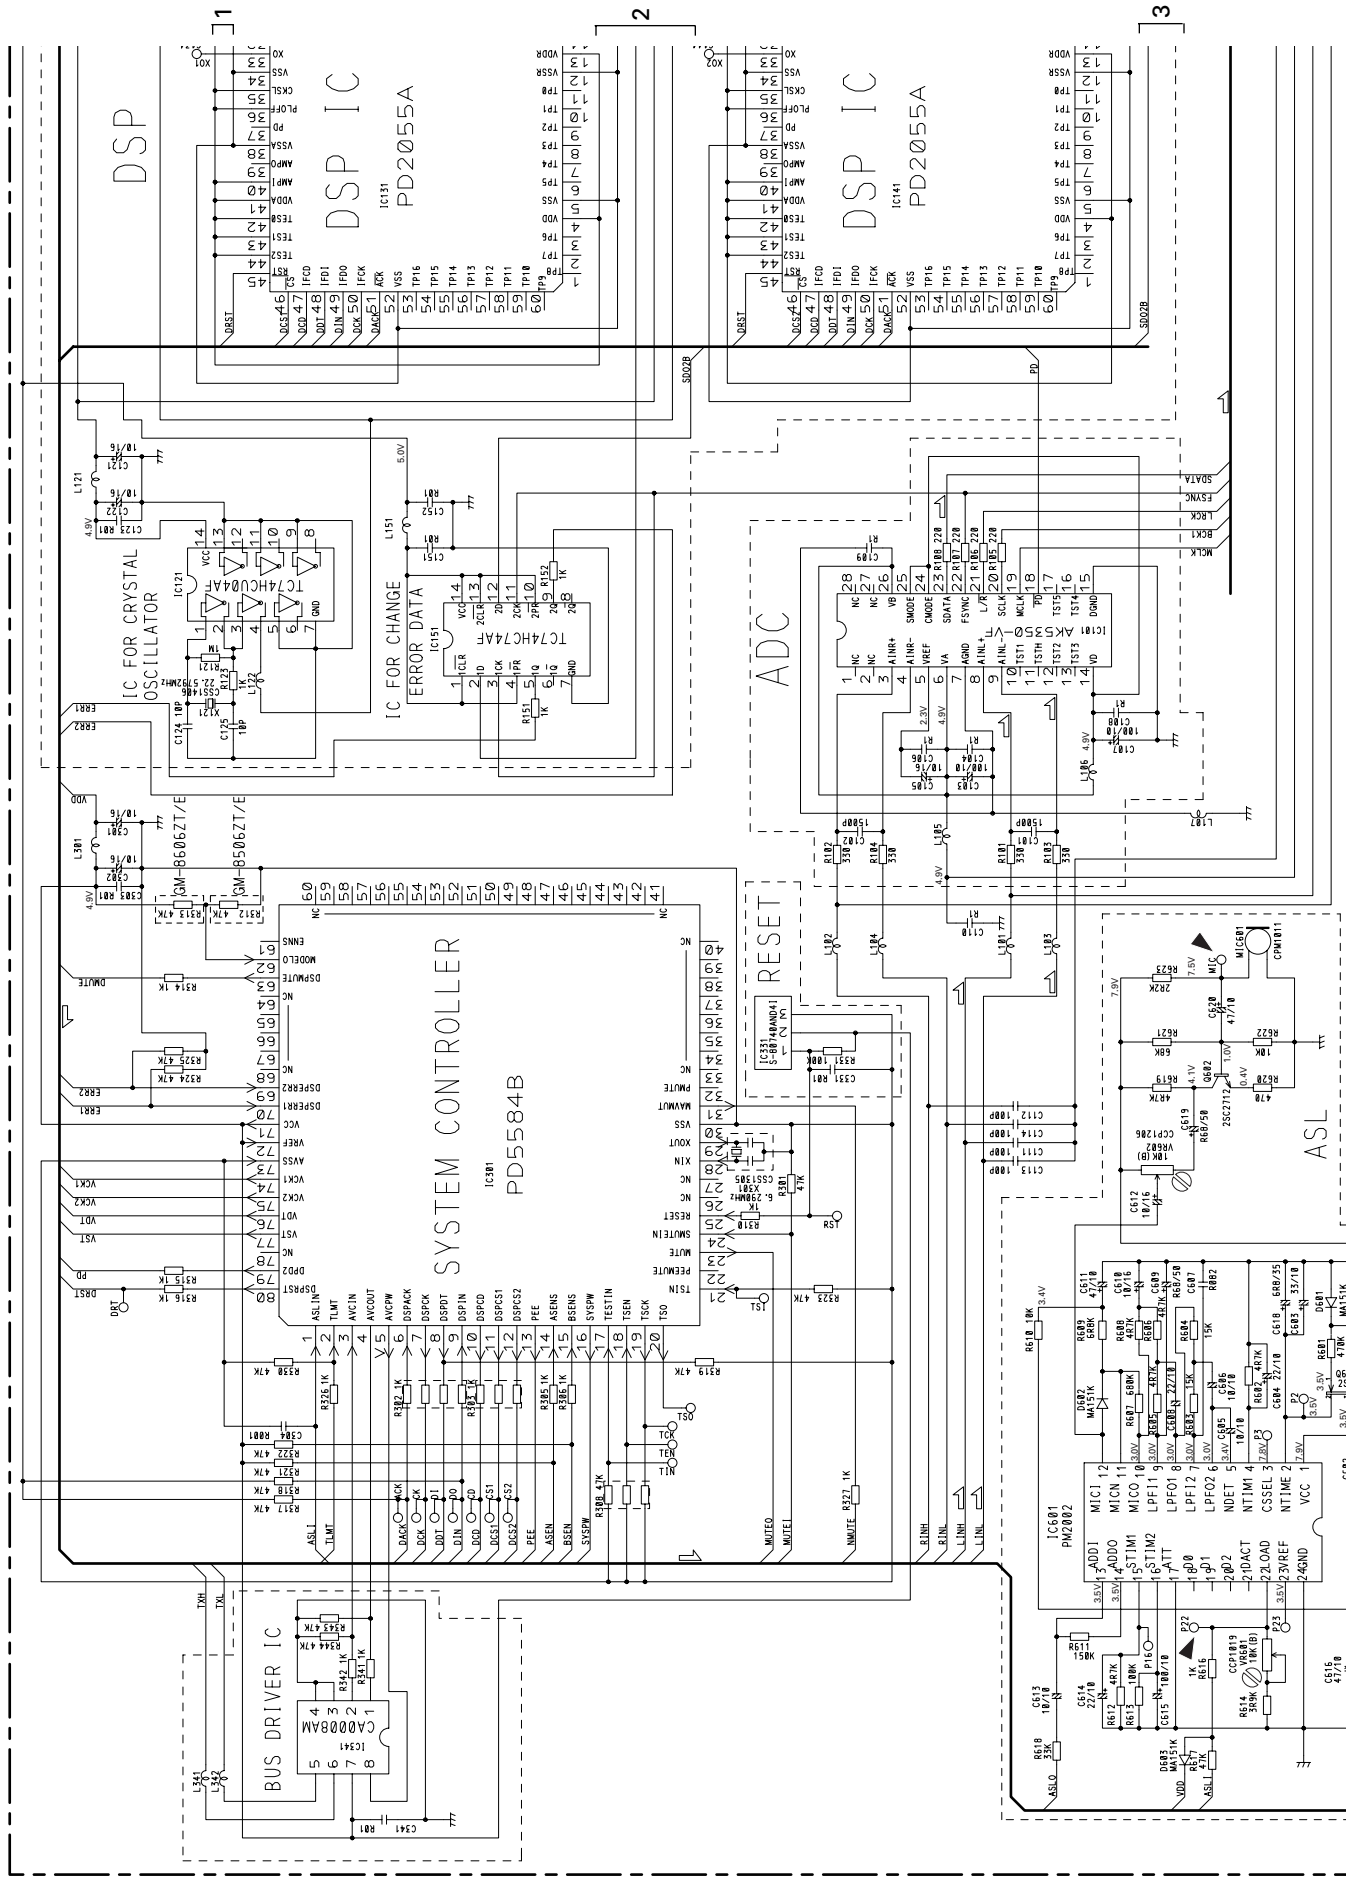

A-a



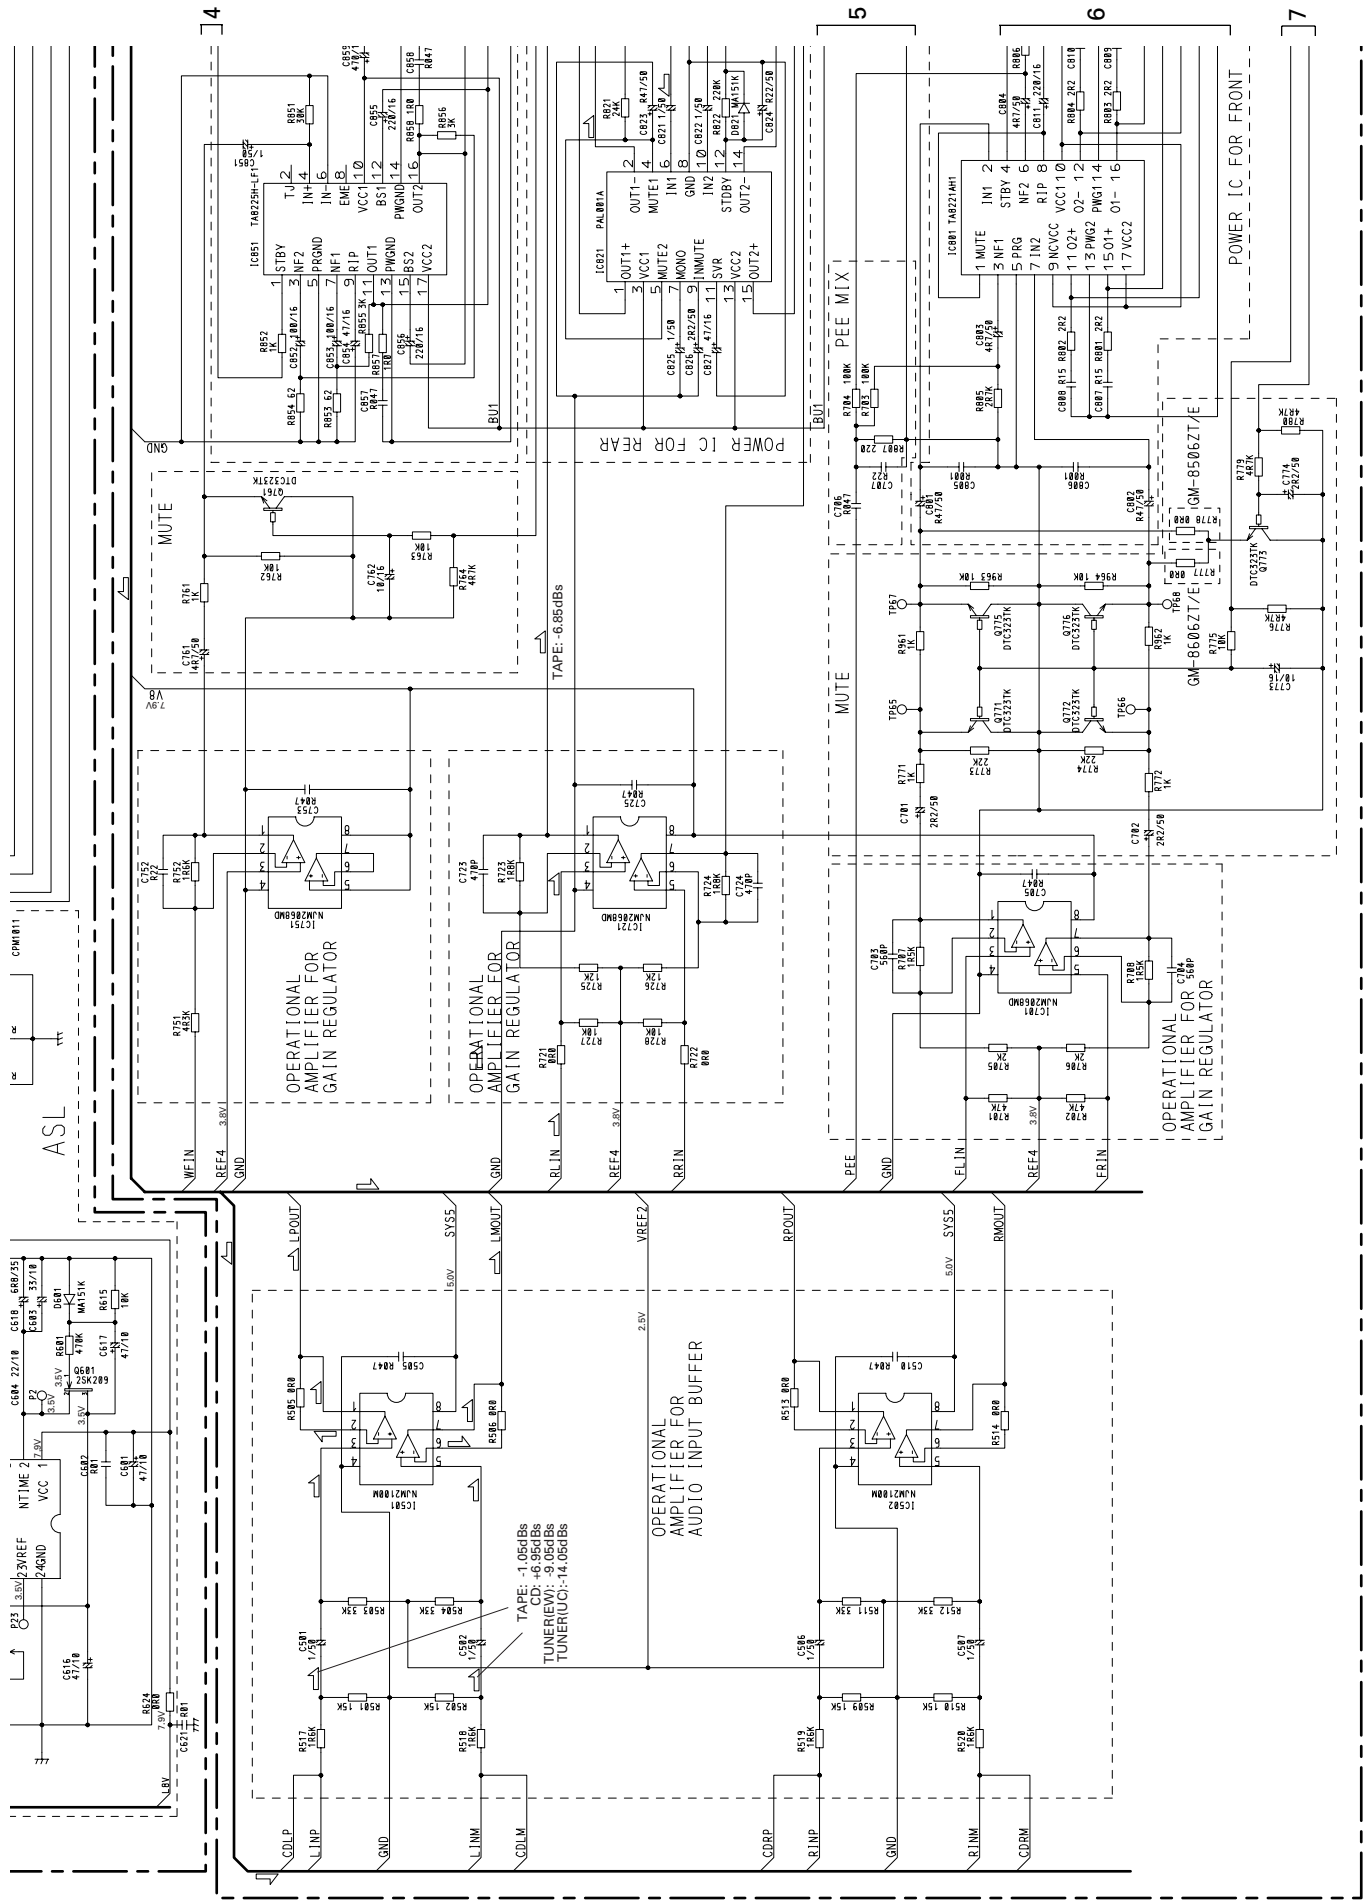


A-a A-b

A B C D


A-a B

# A DSP UNIT

A-a A-b

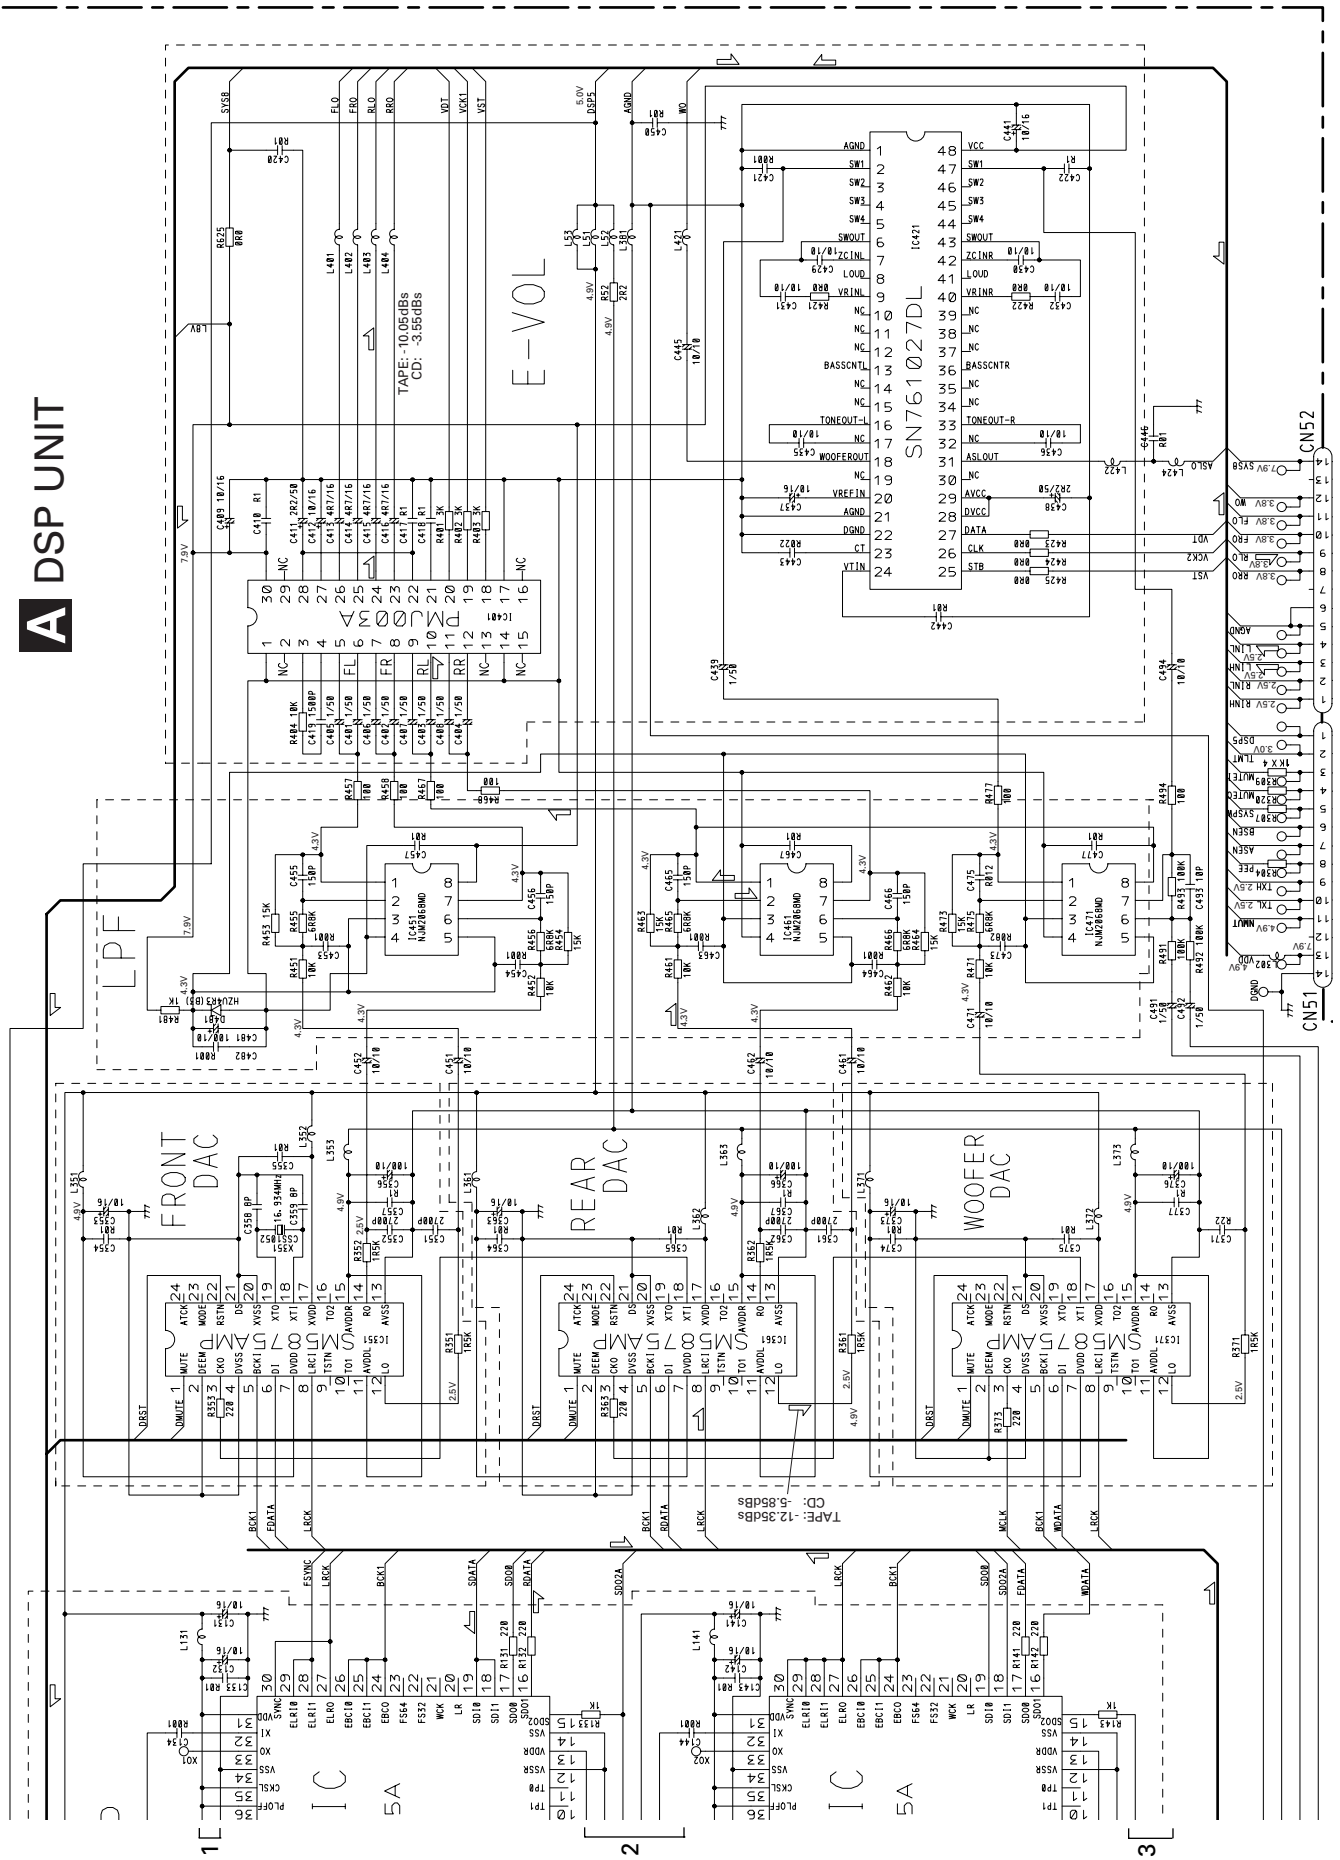

# A-b

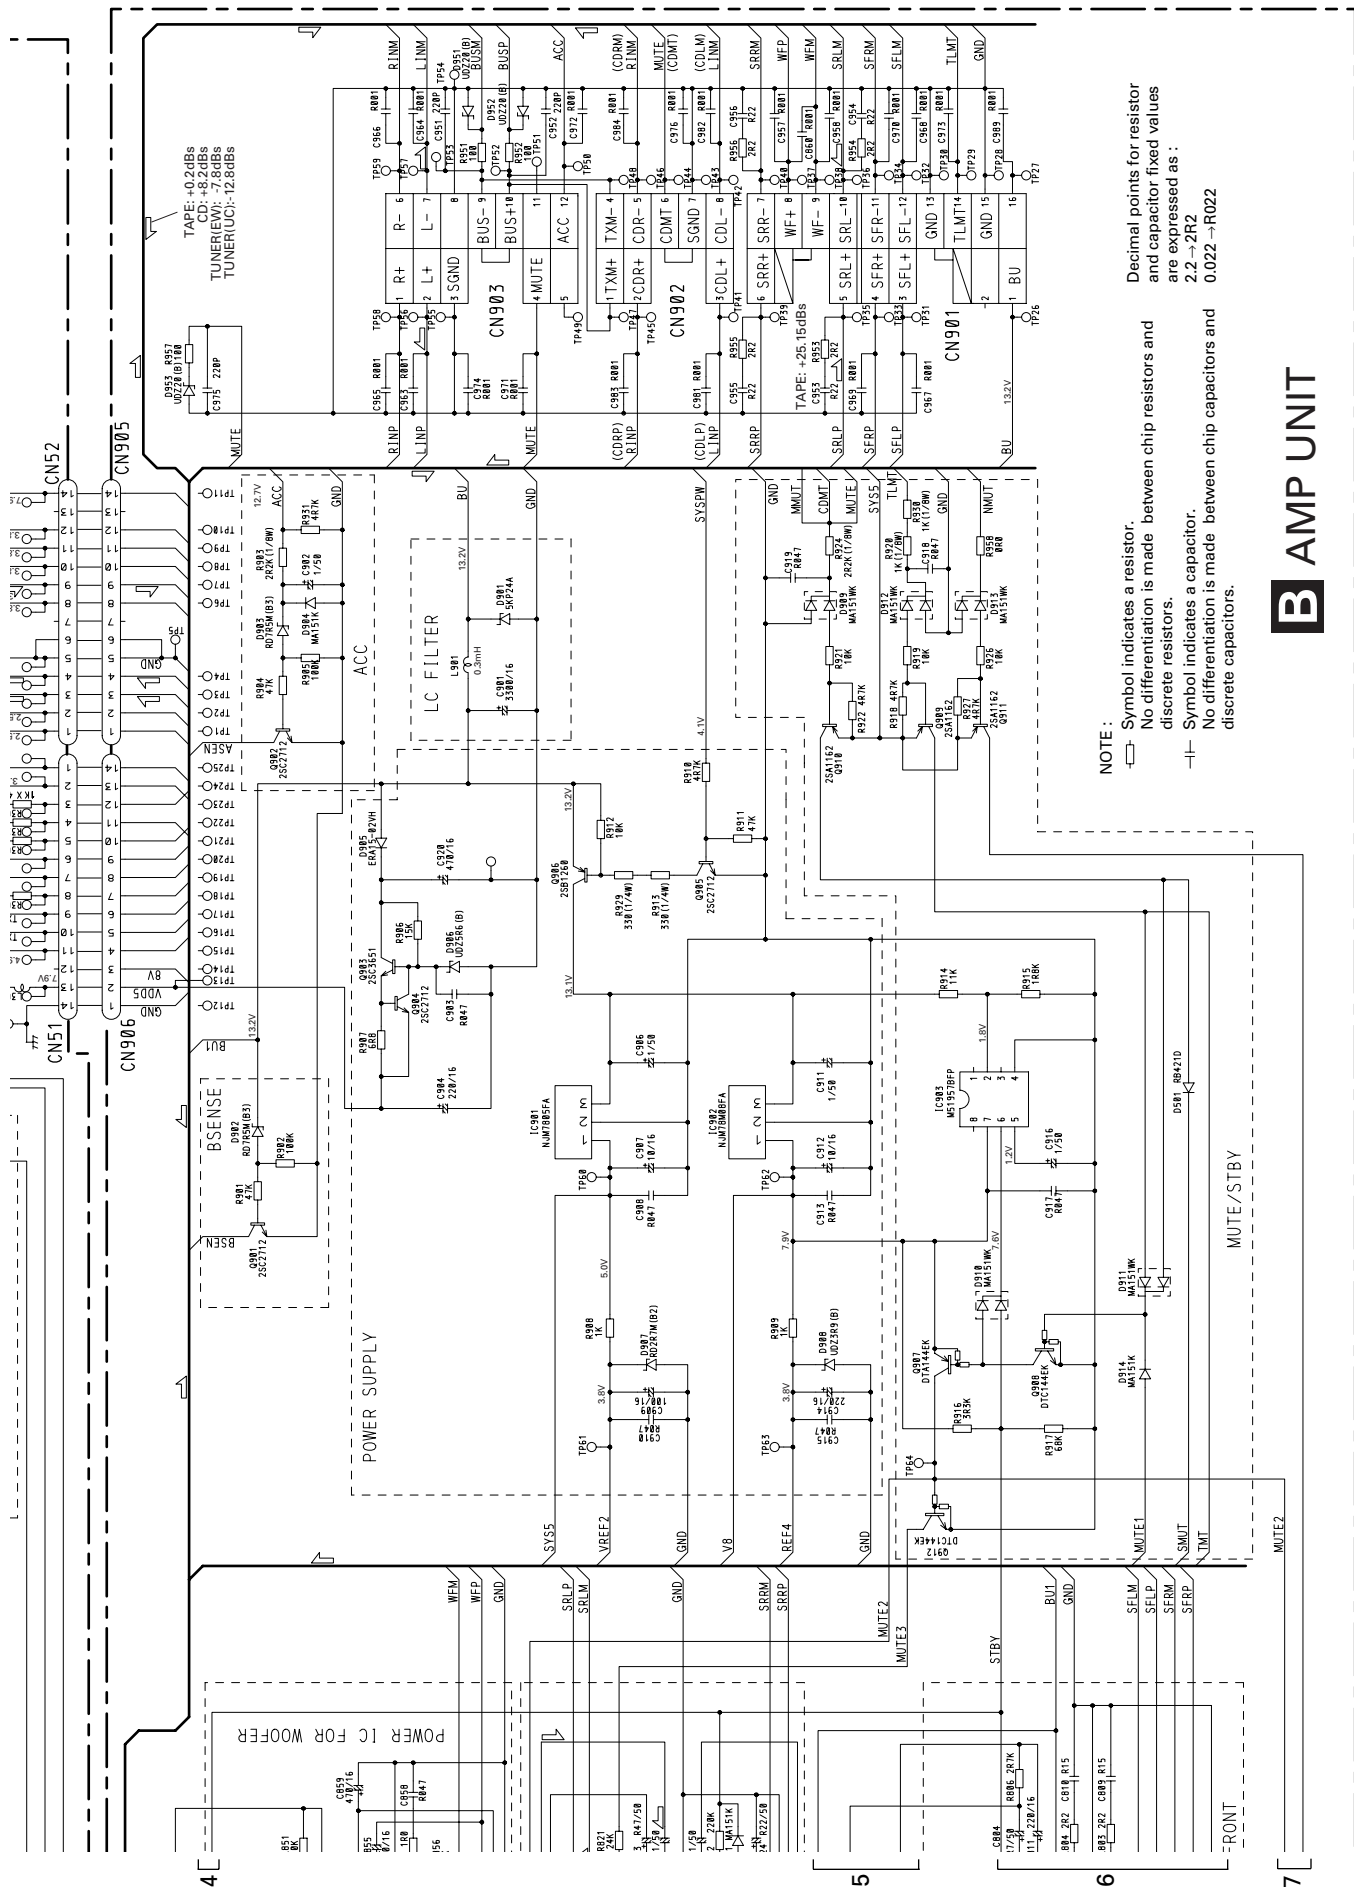

NOTE:  
 □ Symbol indicates a resistor.  
 □ No differentiation is made between chip resistors and discrete resistors.  
 ⊖ Symbol indicates a capacitor.  
 □ No differentiation is made between chip capacitors and discrete capacitors.

Decimal points for resistor and capacitor fixed values are expressed as :  
 2.2 → 2R2  
 0.022 → R022

# B AMP UNIT

A-a A-b

A  
B  
C  
D

A-b B


## 4. PCB CONNECTION DIAGRAM

### 4.1 DSP UNIT


#### NOTE FOR PCB DIAGRAMS

1. The parts mounted on this PCB include all necessary parts for several destination.  
 For further information for respective destinations, be sure to check with the schematic diagram.

2. Viewpoint of PCB diagrams

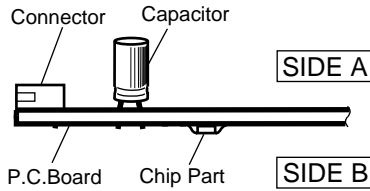


### **A** DSP UNIT

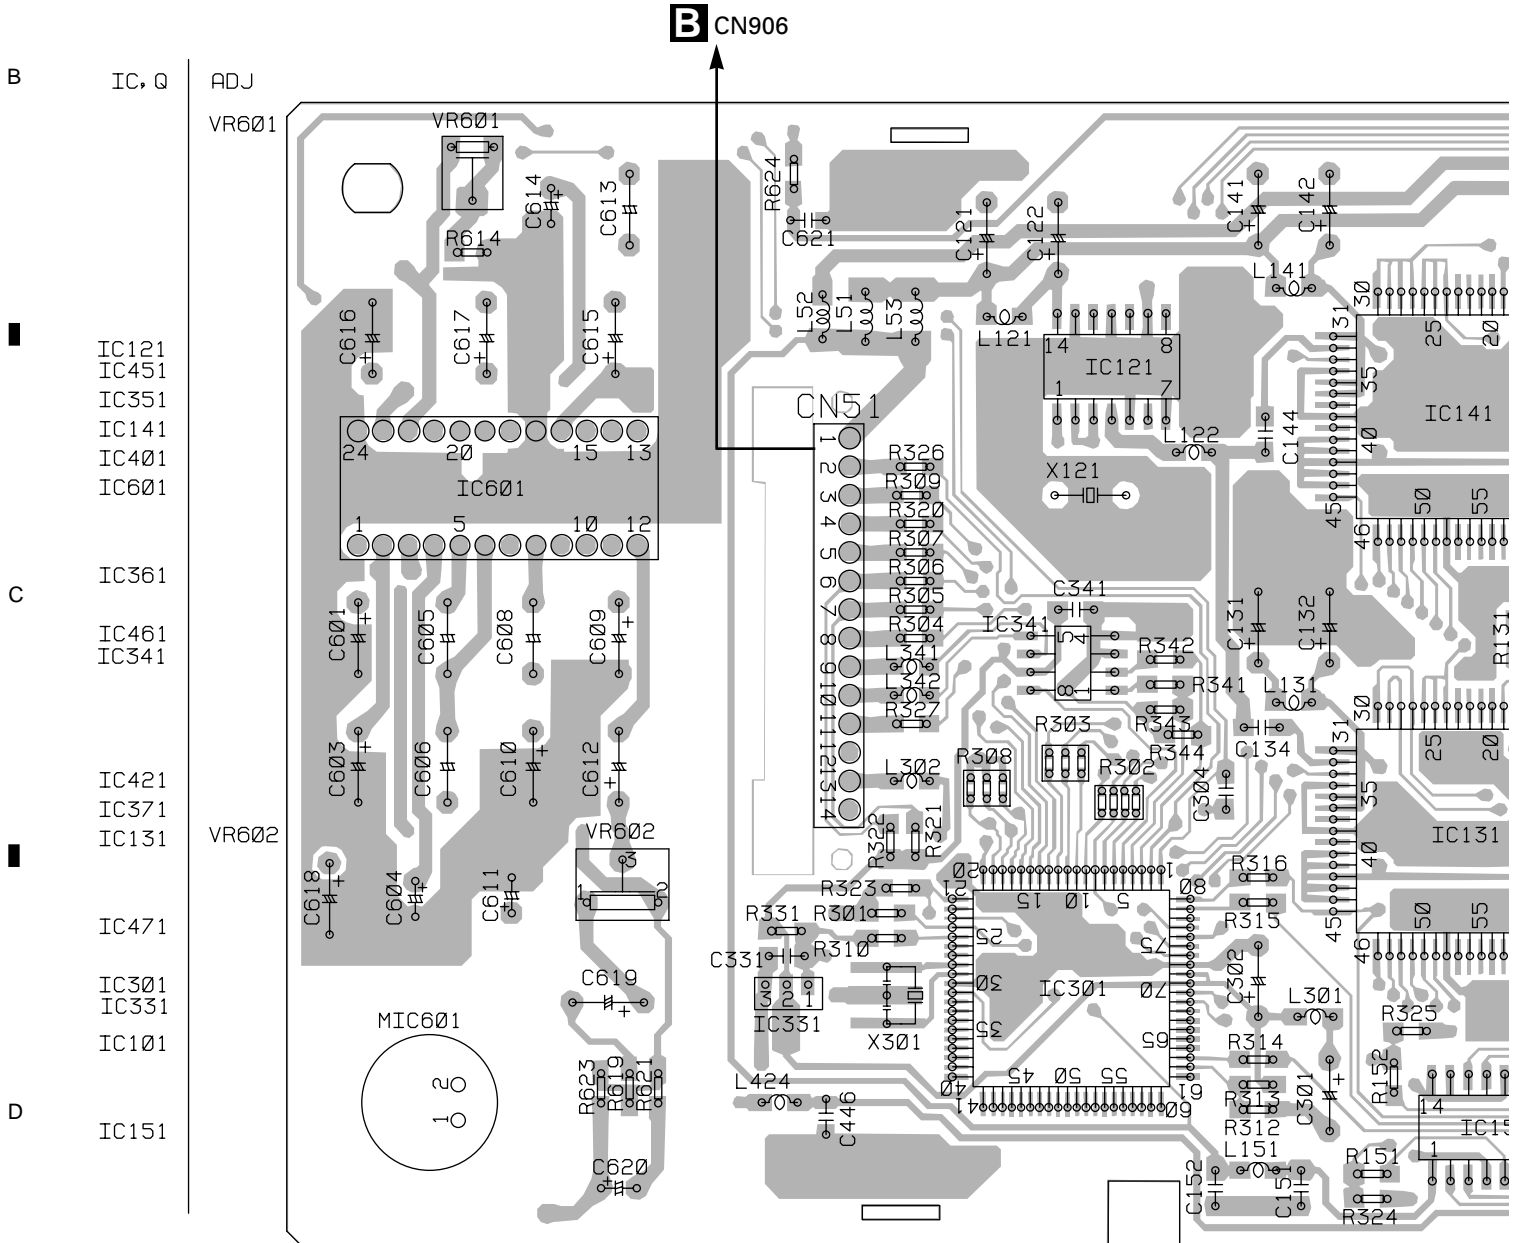


SIDE A

B CN905

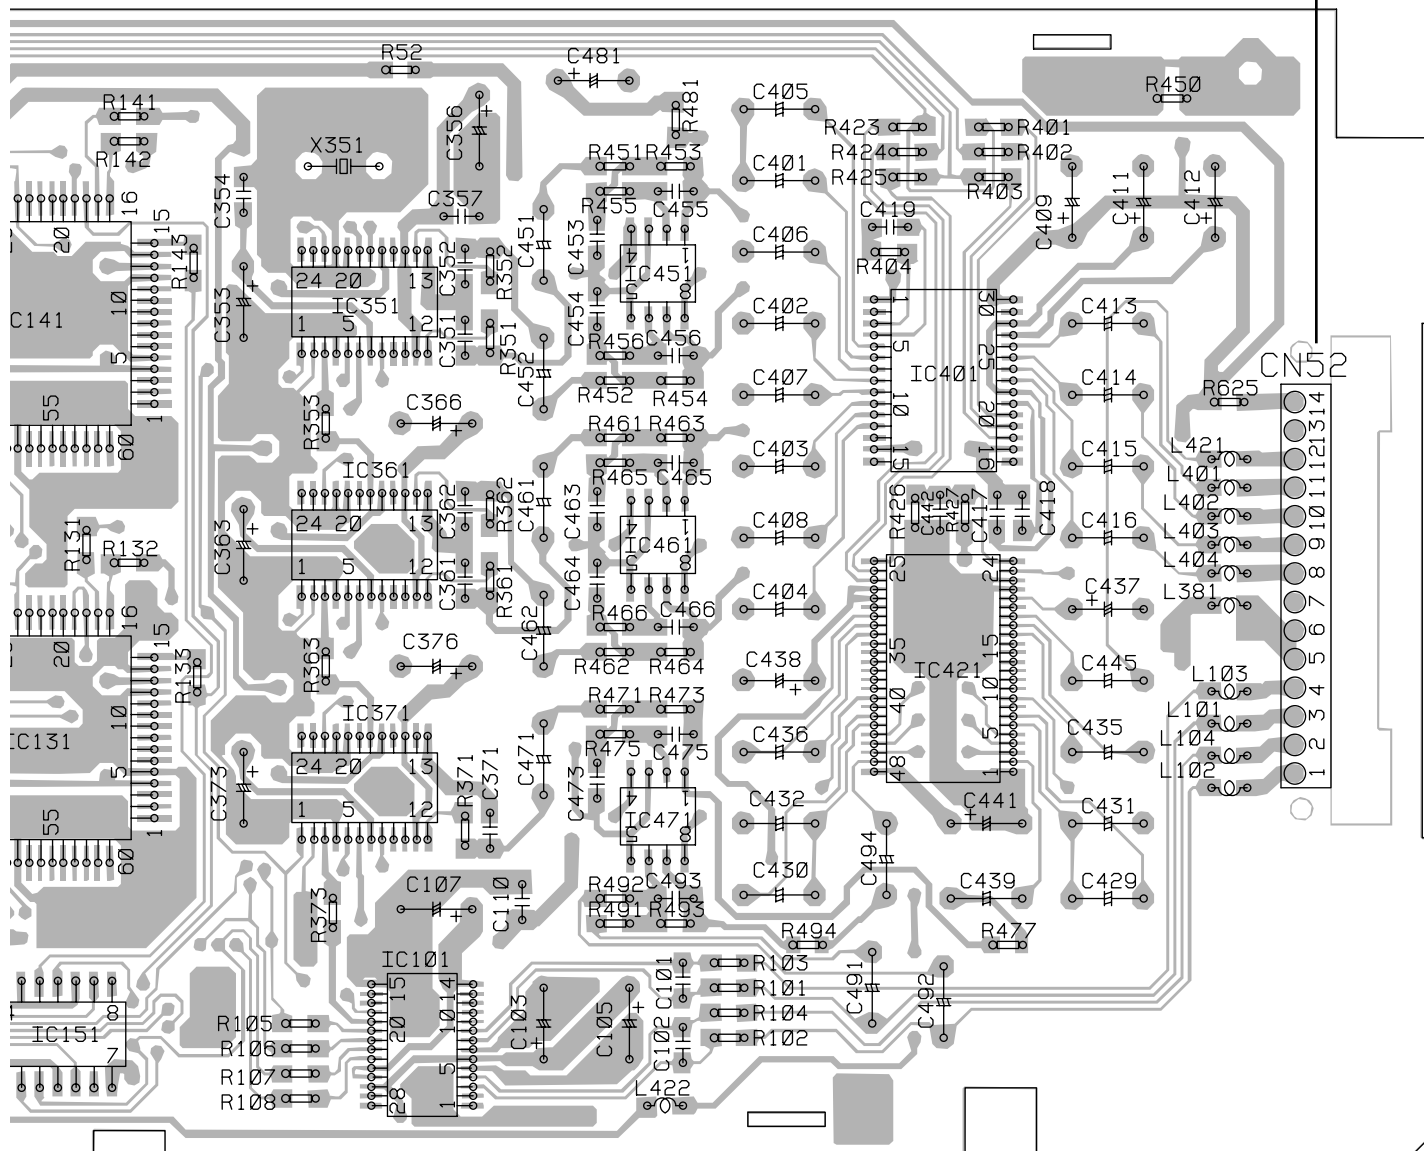


A

**A** DSP UNIT

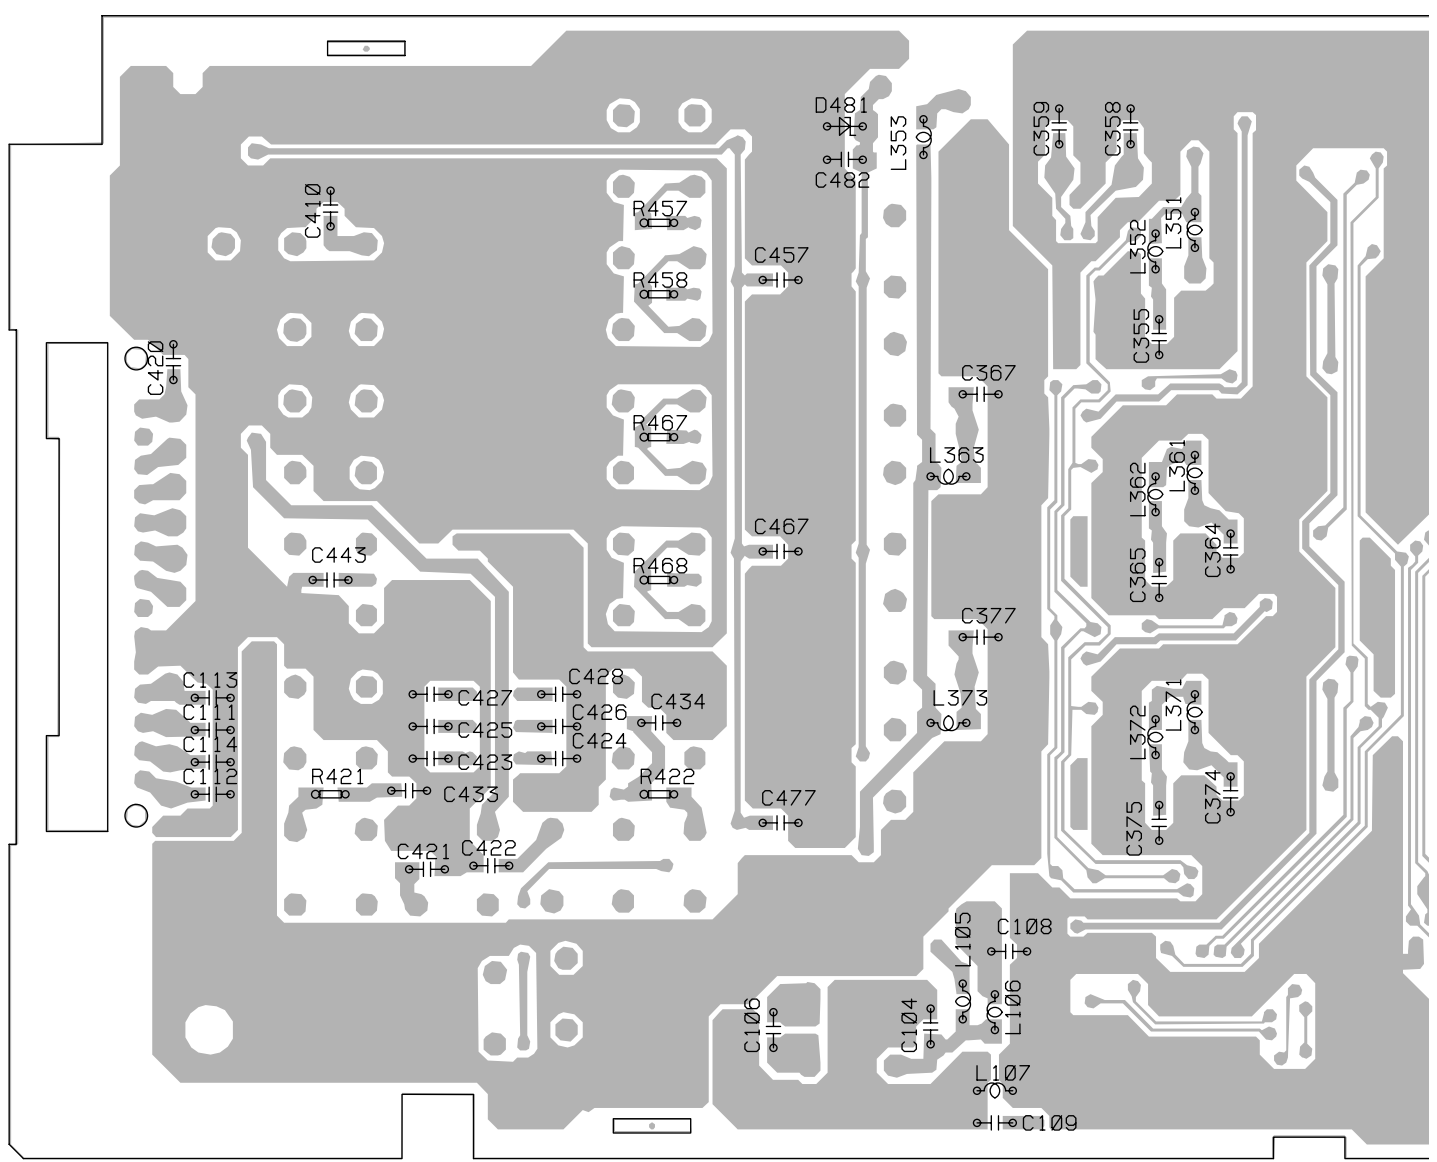

SIDE B

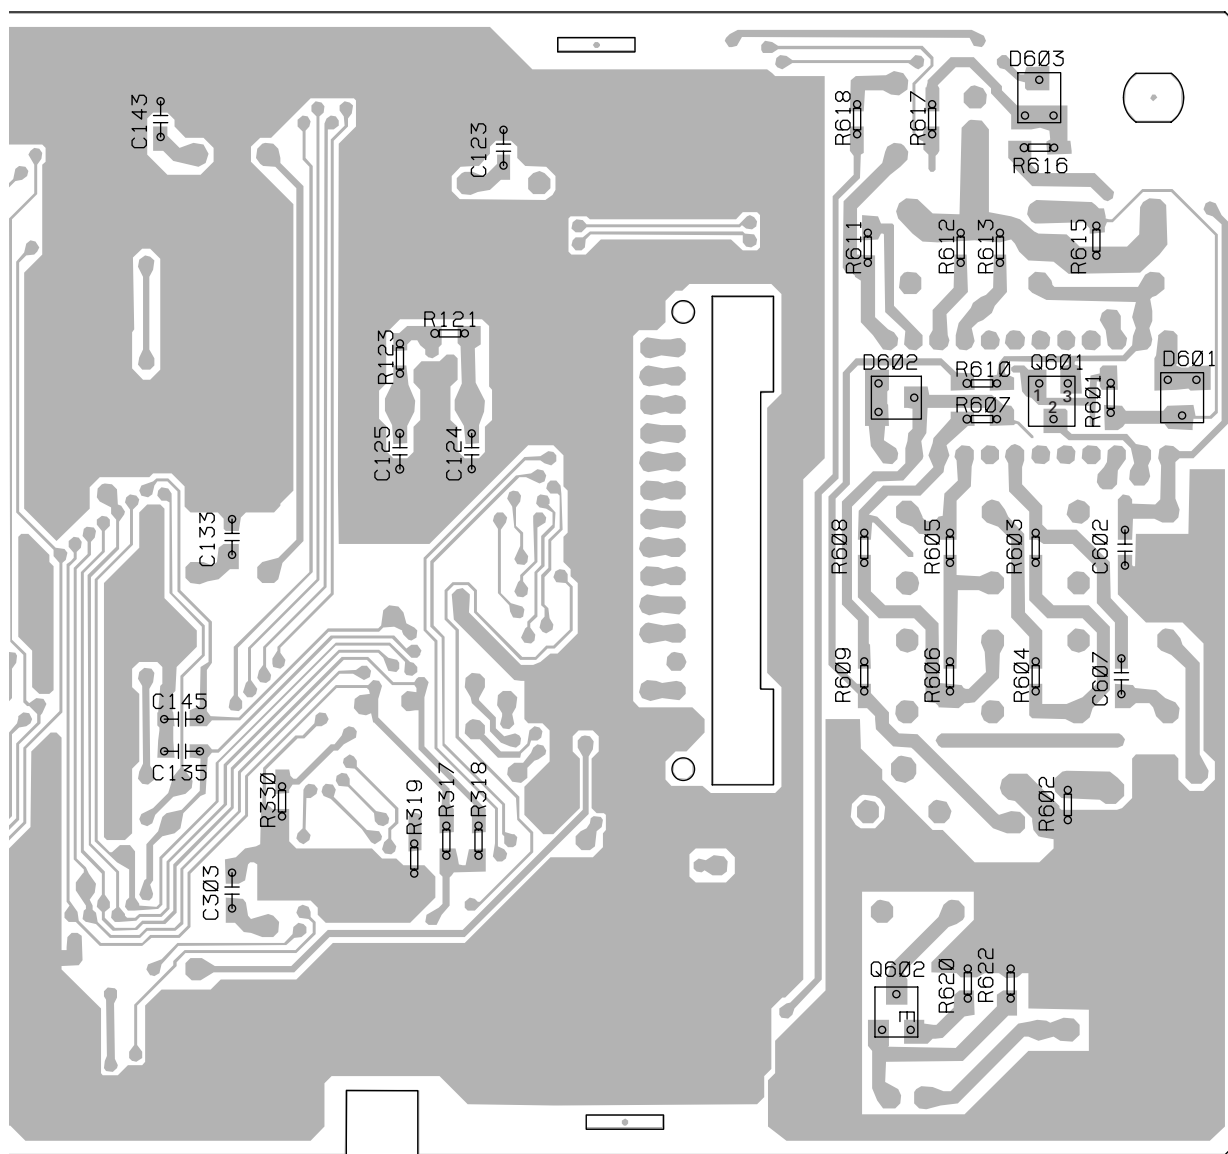

IC, Q

Q601

Q602

A

### 4.2 AMP UNIT

## B AMP UNIT

A


B

C

D

A CN51


- IC, Q
- IC801 IC901
- IC851 IC821
- Q912
- Q776
- Q772
- Q775
- Q761
- Q901 IC701
- IC721 IC751
- IC902 Q771
- Q906
- Q909 Q902
- Q773
- IC903 Q907
- Q905 Q910
- Q908
- Q911
- IC501 IC502
- Q903
- Q904

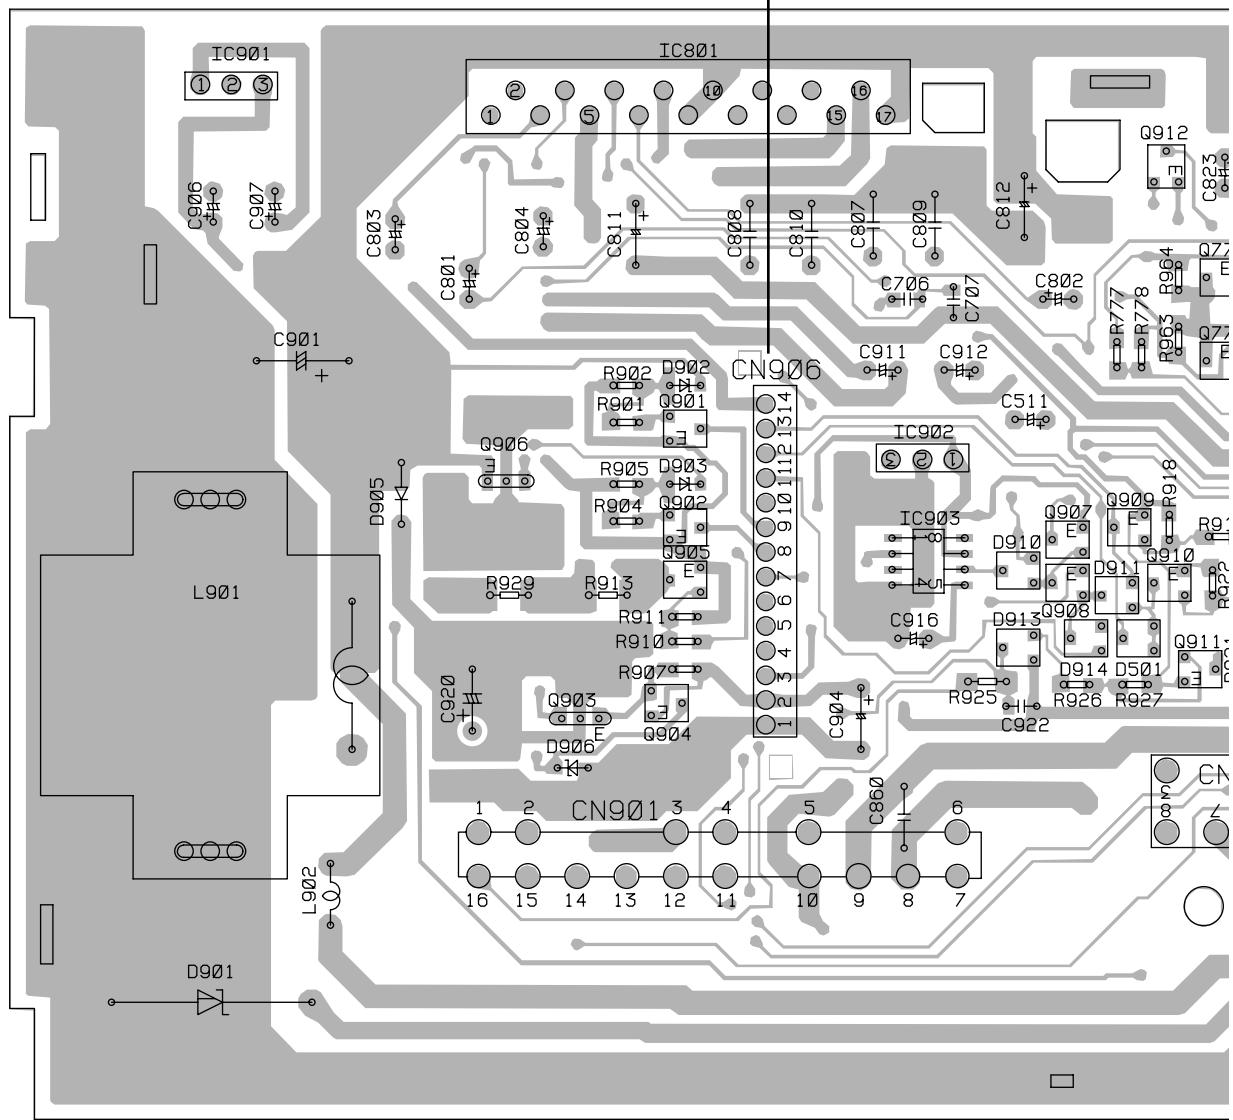




SIDE A

A CN52

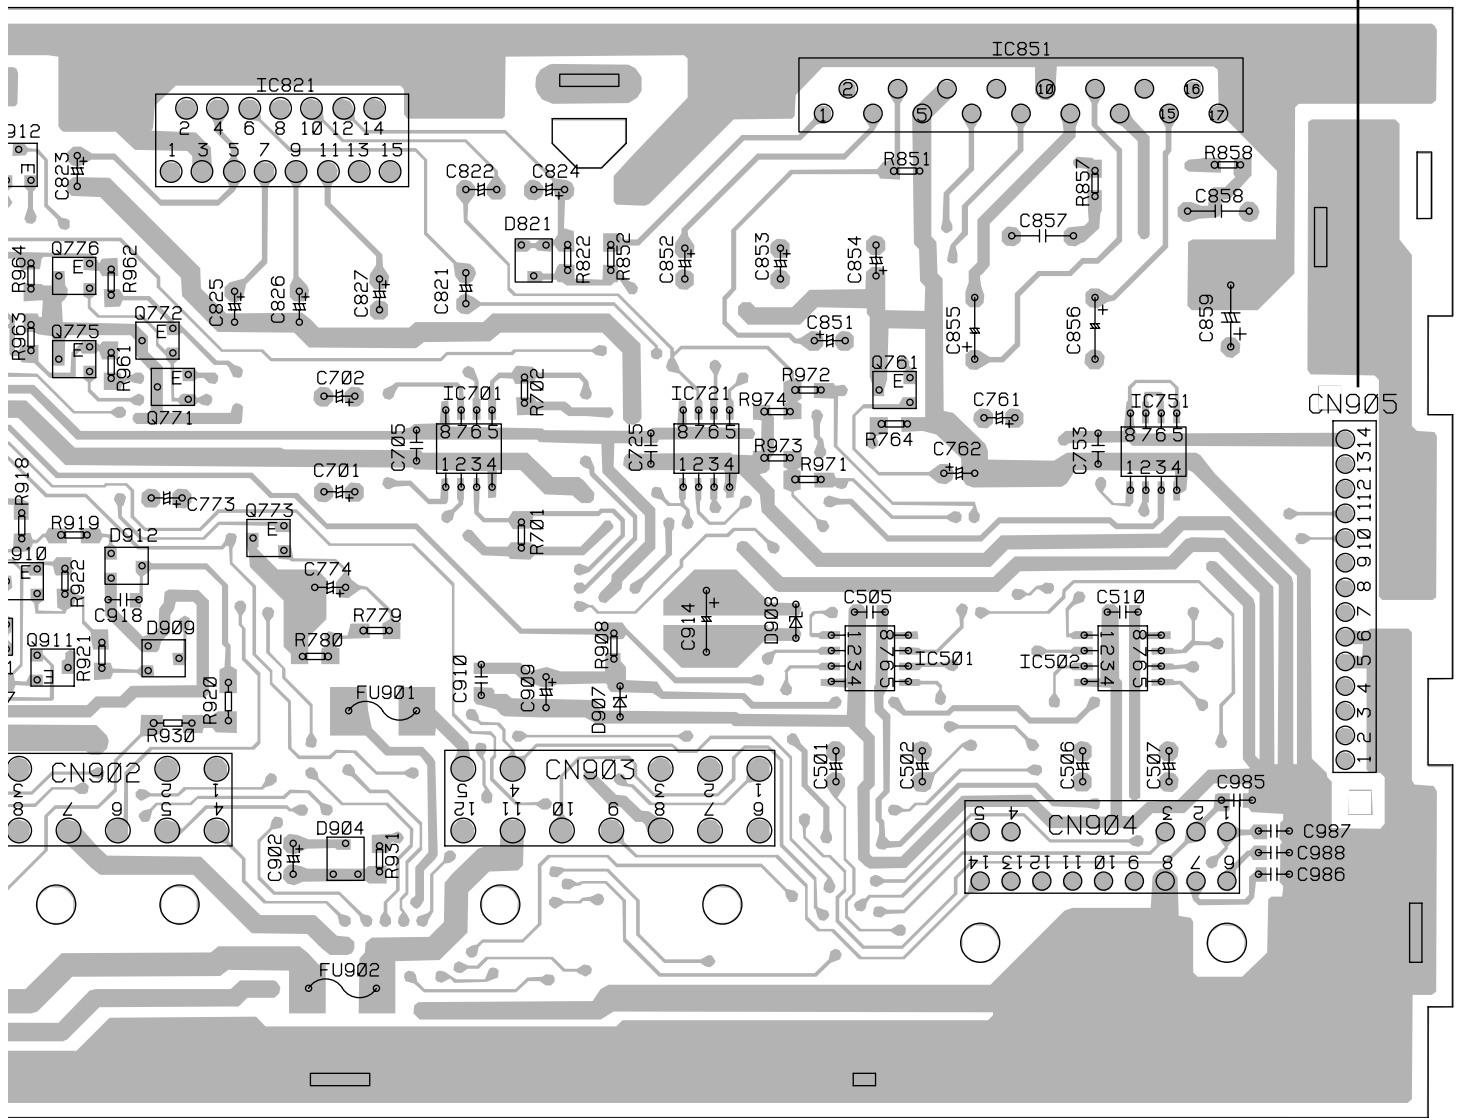


B

**B** AMP UNIT

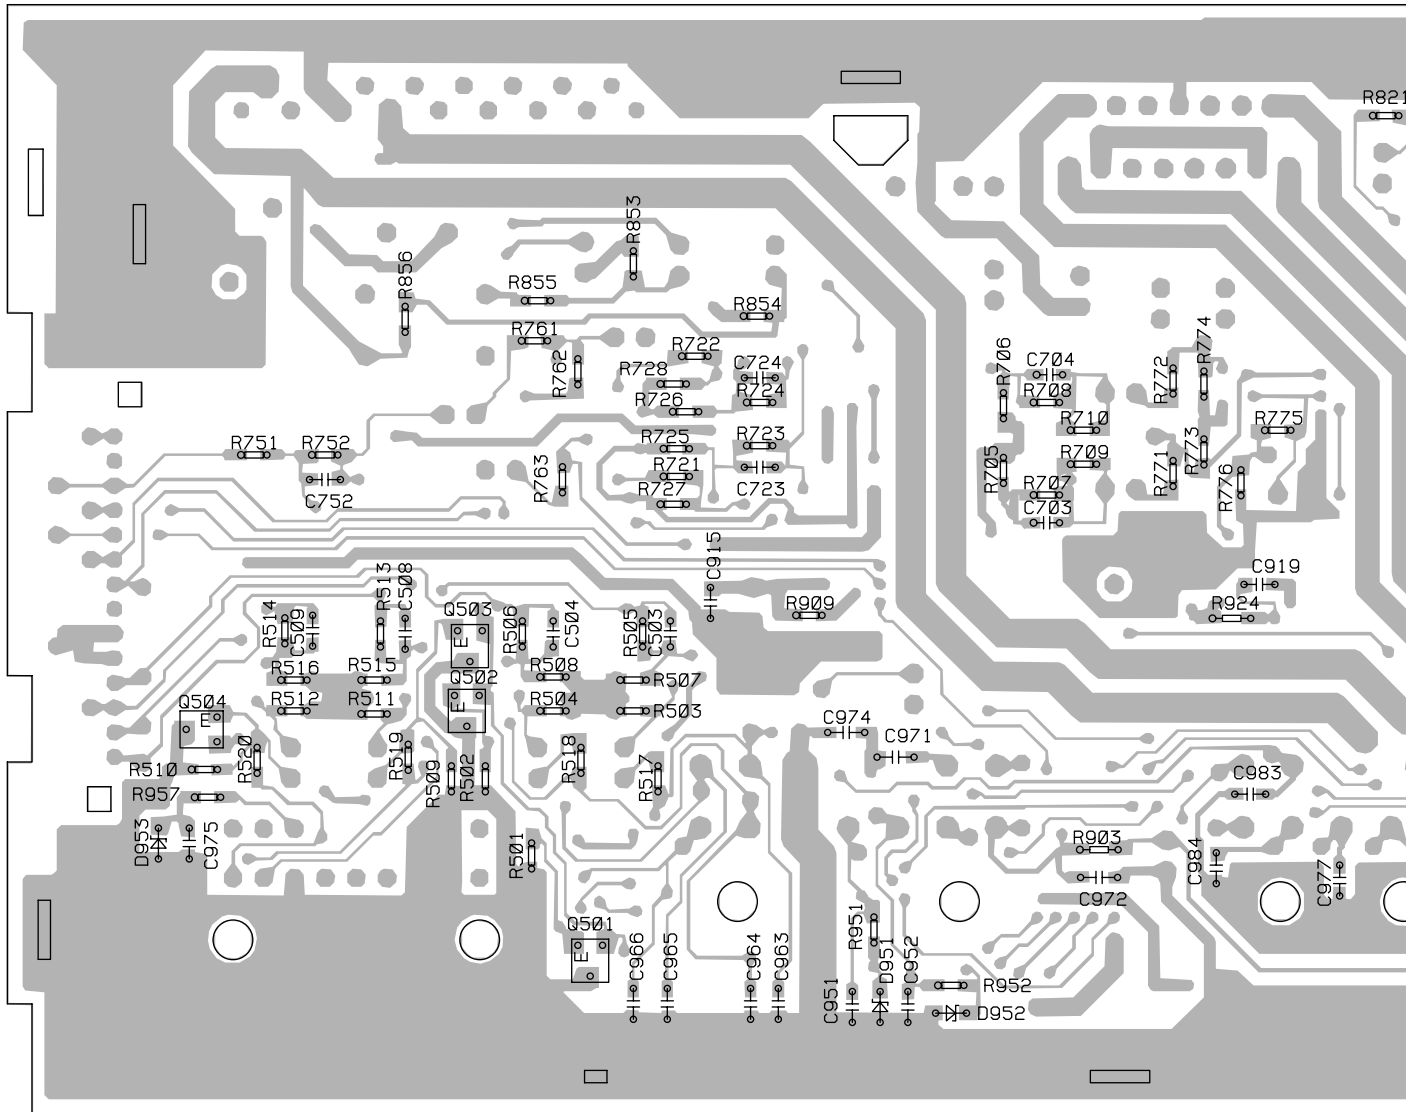

SIDE B

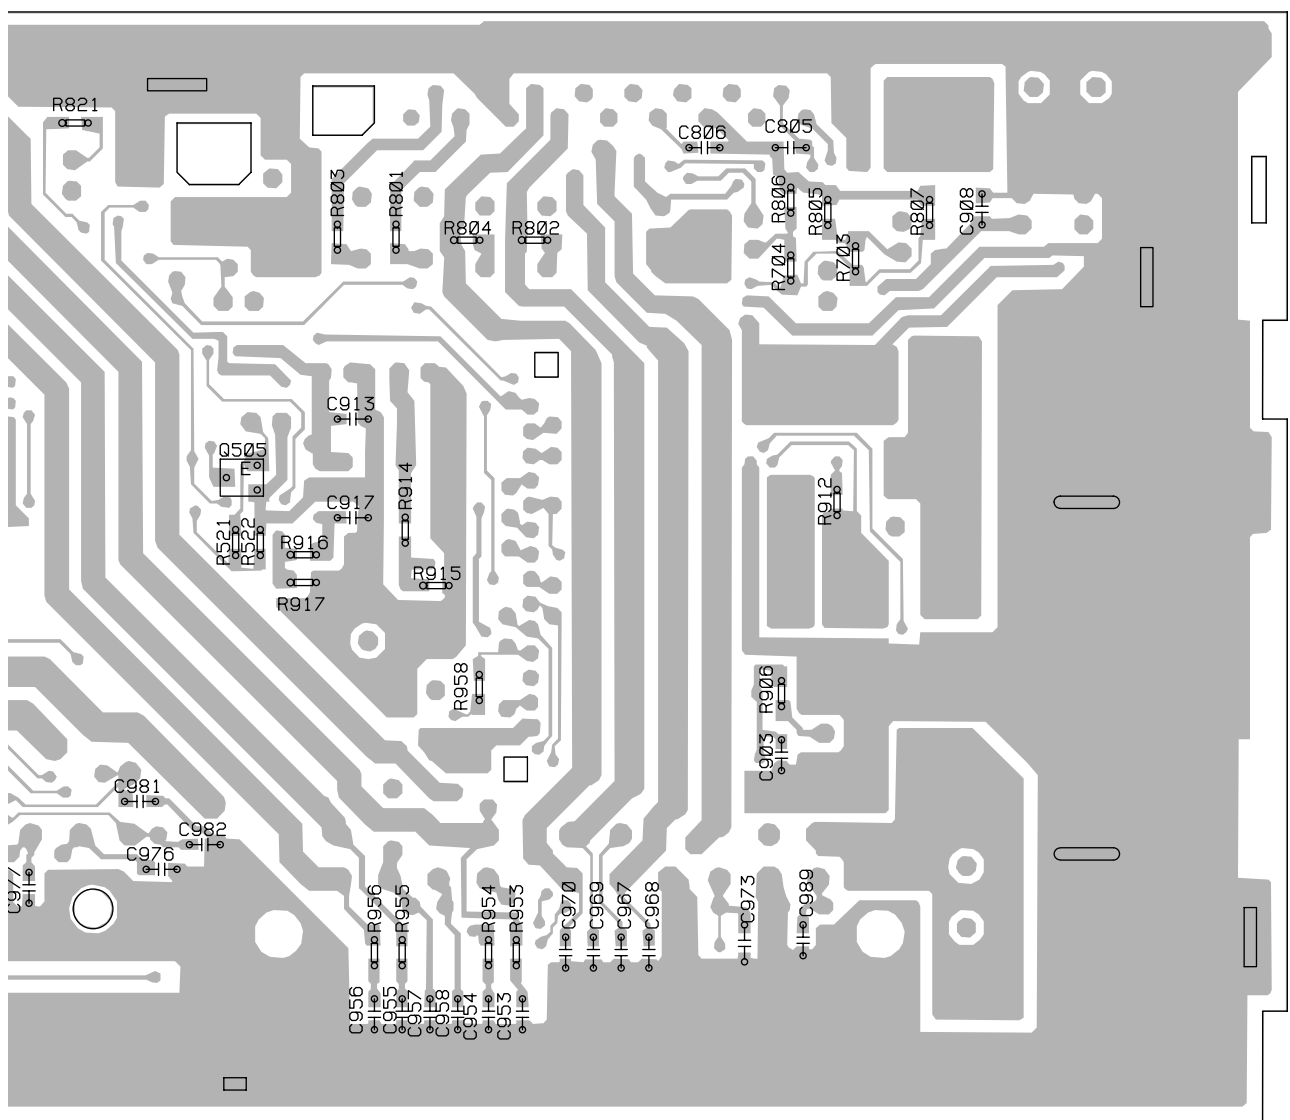

IC, Q  
 Q505  
 Q503  
 Q502  
 Q504  
 Q501

B

## 5. ELECTRICAL PARTS LIST

**NOTE:**

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
<b>A</b> Unit Number : CWM7243(GM-8506ZT/E)		L 361 Inductor	LCTB1R0K2125
Unit Number : CWM7245(GM-8606ZT/E)		L 362 Inductor	LCTB1R0K2125
Unit Name : DSP Unit		L 363 Inductor	LCTB120K2125
		L 371 Inductor	LCTB1R0K2125
		L 372 Inductor	LCTB1R0K2125
		L 373 Inductor	LCTB120K2125
		L 381 Inductor	LCTB1R0K2125
		L 401 Inductor	LCTB1R0K2125
		L 402 Inductor	LCTB1R0K2125
		L 403 Inductor	LCTB1R0K2125
		L 404 Inductor	LCTB1R0K2125
		L 421 Inductor	LCTB1R0K2125
		L 422 Inductor	LCTB1R0K2125
		L 424 Inductor	LCTB1R0K2125
		X 121 Radiator 22.5792MHz	CSS1406
		X 301 Ceramic Resonator 6.290MHz	CSS1305
		X 351 Crystal Resonator 16.9344MHz	CSS1052
		VR 601 Semi-fixed 10kΩ(B)	CCP1019
		VR 602 Semi-fixed 10kΩ(B)	CCP1206
		MIK 601 Microphone	CPM1011
<b>MISCELLANEOUS</b>		<b>RESISTORS</b>	
IC 101 IC	AK5350-VF	R 52	RS1/10S2R2J
IC 121 IC	TC74HCU04AF	R 101	RS1/10S331J
IC 131 IC	PD2055A	R 102	RS1/10S331J
IC 141 IC	PD2055A	R 103	RS1/10S331J
IC 151 IC	TC74HC74AF	R 104	RS1/10S331J
IC 301 IC	PD5584B	R 105	RS1/10S221J
IC 331 IC	S-80740AND4I	R 106	RS1/10S221J
IC 341 IC	CA0008AM	R 107	RS1/10S221J
IC 351 IC	SM5875AMP	R 108	RS1/10S221J
IC 361 IC	SM5875AMP	R 121	RS1/10S105J
IC 371 IC	SM5875AMP	R 123	RS1/10S102J
IC 401 IC	PMJ003A	R 131	RS1/10S221J
IC 421 IC	SN761027DL	R 132	RS1/10S221J
IC 451 IC	NJM2068MD	R 133	RS1/10S102J
IC 461 IC	NJM2068MD	R 141	RS1/10S221J
IC 471 IC	NJM2068MD	R 142	RS1/10S221J
IC 601 IC	PM2002	R 143	RS1/10S102J
Q 601 Transistor	2SK209	R 151	RS1/10S102J
Q 602 Chip Transistor	2SC2712	R 152	RS1/10S102J
D 481 Diode	HZU4R3(B3)	R 301	RS1/10S473J
D 601 Chip Diode	MA151K	R 302 1kΩ	CCN1120
D 602 Chip Diode	MA151K	R 303	RA3C102J
D 603 Chip Diode	MA151K	R 304	RS1/10S102J
L 51 Chip-Inductor	LCTA2R2J3225	R 305	RS1/10S102J
L 52 Inductor	LCTB1R0K3216	R 306	RS1/10S102J
L 53 Chip-Inductor	LCTA2R2J3225	R 307	RS1/10S102J
L 101 Inductor	LCTB1R0K2125	R 308	RA3C473J
L 102 Inductor	LCTB1R0K2125	R 309	RS1/10S102J
L 103 Inductor	LCTB1R0K2125	R 310	RS1/10S102J
L 104 Inductor	LCTB1R0K2125	R 312 (GM-8506ZT/E)	RS1/10S473J
L 105 Inductor	LCTB4R7K2125		
L 106 Inductor	LCTB120K2125		
L 107 Inductor	LCTB1R0K2125		
L 121 Inductor	LCTBR82K2125		
L 122 Inductor	CTF1305		
L 131 Inductor	LCTBR82K2125		
L 141 Inductor	LCTBR82K2125		
L 151 Inductor	LCTB1R0K2125		
L 301 Inductor	LCTB1R0K2125		
L 302 Inductor	LCTB1R0K2125		
L 341 Inductor	CTF1305		
L 342 Inductor	CTF1305		
L 351 Inductor	LCTB1R0K2125		
L 352 Inductor	LCTB1R0K2125		
L 353 Inductor	LCTB120K2125		

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.
R 313 (GM-8606ZT/E)	RS1/10S473J	R 608	RS1/10S472J
R 314	RS1/10S102J	R 609	RS1/10S682J
R 315	RS1/10S102J	R 610	RS1/10S103J
R 316	RS1/10S102J	R 611	RS1/10S154J
R 317	RS1/10S473J	R 612	RS1/10S472J
		R 613	RS1/10S104J
R 318	RS1/10S473J		
R 319	RS1/10S473J	R 614	RS1/10S392J
R 320	RS1/10S102J	R 615	RS1/10S103J
R 321	RS1/10S473J	R 616	RS1/10S102J
R 322	RS1/10S473J	R 617	RS1/10S473J
		R 618	RS1/10S393J
R 323	RS1/10S473J		
R 324	RS1/10S473J	R 619	RS1/10S472J
R 325	RS1/10S473J	R 620	RS1/10S471J
R 326	RS1/10S102J	R 621	RS1/10S683J
R 327	RS1/10S102J	R 622	RS1/10S103J
		R 623	RS1/10S222J
R 330	RS1/10S473J		
R 331	RS1/10S104J	R 624	RS1/10S0R0J
R 341	RS1/10S102J	R 625	RS1/10S0R0J
R 342	RS1/10S102J		
R 343	RS1/10S473J		
		CAPACITORS	
R 344	RS1/10S473J	C 101	CKSQYB152K50
R 351	RS1/10S152J	C 102	CKSQYB152K50
R 352	RS1/10S152J	C 103	CEAL101M10
R 353	RS1/10S221J	C 104	CKSQYB104K50
R 361	RS1/10S152J	C 105	CEAL100M16
R 362	RS1/10S152J	C 106	CKSQYB104K50
R 363	RS1/10S221J	C 107	CEAL101M10
R 371	RS1/10S152J	C 108	CKSQYB104K50
R 373	RS1/10S221J	C 109	CKSQYB104K50
R 401	RS1/10S302J	C 110	CKSQYB104K50
R 402	RS1/10S302J	C 111	CCSQCH101J50
R 403	RS1/10S302J	C 112	CCSQCH101J50
R 404	RS1/10S103J	C 113	CCSQCH101J50
R 421	RS1/10S0R0J	C 114	CCSQCH101J50
R 422	RS1/10S0R0J	C 121	CEAL100M16
R 423	RS1/10S0R0J	C 122	CEAL100M16
R 424	RS1/10S0R0J	C 123	CKSQYB103K50
R 425	RS1/10S0R0J	C 124	CCSQCH100J50
R 451	RS1/10S103J	C 125	CCSQCH100J50
R 452	RS1/10S103J	C 131	CEAL100M16
R 453	RS1/10S153J	C 132	CEAL100M16
R 454	RS1/10S153J	C 133	CKSQYB103K50
R 455	RS1/10S682J	C 134	CKSQYB102K50
R 456	RS1/10S682J	C 141	CEAL100M16
R 457	RS1/10S101J	C 142	CEAL100M16
R 458	RS1/10S101J	C 143	CKSQYB103K50
R 461	RS1/10S103J	C 144	CKSQYB102K50
R 462	RS1/10S103J	C 151	CKSQYB103K50
R 463	RS1/10S153J	C 152	CKSQYB103K50
R 464	RS1/10S153J	C 301	CEAL100M16
R 465	RS1/10S682J	C 302	CEAL100M16
R 466	RS1/10S682J	C 303	CKSQYB103K50
R 467	RS1/10S101J	C 304	CKSQYB102K50
R 468	RS1/10S101J	C 331	CKSQYB103K50
R 471	RS1/10S103J	C 341	CKSQYB103K50
R 473	RS1/10S153J	C 351	CKSQYB272K50
R 475	RS1/10S682J	C 352	CKSQYB272K50
R 477	RS1/10S101J	C 353	CEAL100M16
R 481	RS1/10S102J	C 354	CKSQYB103K50
R 491	RS1/10S104J	C 355	CKSQYB103K50
R 492	RS1/10S104J	C 356	CEAL101M10
R 493	RS1/10S104J	C 357	CKSQYB104K50
R 494	RS1/10S101J	C 358	CCSQCH8R0D50
R 601	RS1/10S474J	C 359	CCSQCH8R0D50
R 602	RS1/10S472J	C 361	CKSQYB272K50
R 603	RS1/10S153J	C 362	CKSQYB272K50
R 604	RS1/10S153J	C 363	CEAL100M16
R 605	RS1/10S472J	C 364	CKSQYB103K50
R 606	RS1/10S472J	C 365	CKSQYB103K50
R 607	RS1/10S684J	C 366	CEAL101M10

# GM-8506ZT,8506ZT-91,8606ZT,8606ZT-91

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
C 367	CKSQYB104K50	C 603	CEJA330M10
C 371	CKSQYB224K16	C 604	CEAL220M10
C 373	CEAL100M16	C 605	CEALNP100M10
C 374	CKSQYB103K50	C 606	CEALNP100M10
C 375	CKSQYB103K50	C 607	CKSQYB823K25
C 376	CEAL101M10	C 608	CEALNP220M16
C 377	CKSQYB104K50	C 609	CEALR68M50
C 401	CEALNP1R0M50	C 610	CEAL100M16
C 402	CEALNP1R0M50	C 611	CEJA470M10
C 403	CEALNP1R0M50	C 612	CEAL100M16
C 404	CEALNP1R0M50	C 613	CEALNP100M10
C 405	CEALNP1R0M50	C 614	CEAL220M10
C 406	CEALNP1R0M50	C 615	CEJA101M10
C 407	CEALNP1R0M50	C 616	CEJA470M10
C 408	CEALNP1R0M50	C 617	CEJA470M10
C 409	CEAL100M16	C 618	CEAL6R8M35
C 410	CKSQYB104K50	C 619	CEALR68M50
C 411	CEAL2R2M50	C 620	CEJA470M10
C 412	CEAL100M16	C 621	CKSQYB103K50
C 413	CEALNP4R7M16		
C 414	CEALNP4R7M16	<b>B</b> Unit Number : CWM6207(GM-8506ZT/E)	
C 415	CEALNP4R7M16	Unit Number : CWM6208(GM-8606ZT/E)	
C 416	CEALNP4R7M16	Unit Name : Amp Unit	
C 417	CKSQYB104K50		
C 418	CKSQYB104K50		
C 419	CKSQYB152K50	IC 501 IC	NJM2100M
C 420	CKSQYB103K50	IC 502 IC	NJM2100M
C 421	CKSQYB102K50	IC 701 IC	NJM2068MD
C 422	CKSQYB104K50	IC 721 IC	NJM2068MD
C 429	CEALNP100M10	IC 751 IC	NJM2068MD
C 430	CEALNP100M10	IC 801 IC	TA8221AH1
C 431	CEALNP100M10	IC 821 IC	PAL001A
C 432	CEALNP100M10	IC 851 IC	TA8225H-LF1
C 435	CEALNP100M10	IC 901 IC	NJM7805FA
C 436	CEALNP100M10	IC 902 IC	NJM78M08FA
C 437	CEAL100M16	IC 903 IC	M51957BFP
C 438	CEAL2R2M50	Q 761 Transistor	DTC323TK
C 439	CEALNP1R0M50	Q 771 Transistor	DTC323TK
C 441	CEAL100M16	Q 772 Transistor	DTC323TK
C 442	CKSQYB103K50	Q 773 Transistor	DTC323TK
C 443	CKSQYB223K50	Q 775 Transistor	DTC323TK
C 445	CEALNP100M10	Q 776 Transistor	DTC323TK
C 446	CKSQYB103K50	Q 901 Transistor	2SC2712
C 450	CKSQYB103K50	Q 902 Transistor	2SC2712
C 451	CEALNP100M10	Q 903 Transistor	2SC3651
C 452	CEALNP100M10	Q 904 Transistor	2SC2712
C 453	CKSQYB102K50	Q 905 Transistor	2SC2712
C 454	CKSQYB102K50	Q 906 Transistor	2SB1260
C 455	CCSQCH151J50	Q 907 Transistor	DTA144EK
C 456	CCSQCH151J50	Q 908 Transistor	DTC144EK
C 457	CKSQYB103K50	Q 909 Transistor	2SA1162
C 461	CEALNP100M10	Q 910 Transistor	2SA1162
C 462	CEALNP100M10	Q 911 Transistor	2SA1162
C 463	CKSQYB102K50	Q 912 Transistor	DTC144EK
C 464	CKSQYB102K50	D 501 Diode	RB421D
C 465	CCSQCH151J50	D 821 Chip Diode	MA151K
C 466	CCSQCH151J50	D 901 Diode	5KP24A
C 467	CKSQYB103K50	D 902 Diode	RD7R5M(B3)
C 471	CEALNP100M10	D 903 Diode	RD7R5M(B3)
C 473	CKSQYB823K25	D 904 Chip Diode	MA151K
C 475	CKSQYB123K25	D 905 Diode	ERA15-02VH
C 477	CKSQYB103K50	D 906 Diode	UDZ5R6(B)
C 481	CEAL101M10	D 907 Diode	RD2R7M(B2)
C 482	CKSQYB102K50	D 908 Diode	UDZ3R9(B)
C 491	CEALNP1R0M50	D 909 Chip Diode	MA151WK
C 492	CEALNP1R0M50	D 910 Chip Diode	MA151WK
C 493	CCSQCH100J50	D 911 Chip Diode	MA151WK
C 494	CEALNP100M10	D 912 Chip Diode	MA151WK
C 601	CEJA470M10	D 913 Chip Diode	MA151WK
C 602	CKSQYB103K50	D 914 Chip Diode	MA151K

**B** Unit Number : CWM6207(GM-8506ZT/E)  
Unit Number : CWM6208(GM-8606ZT/E)  
Unit Name : Amp Unit

## MISCELLANEOUS

====Circuit Symbol and No.===Part Name	Part No.	====Circuit Symbol and No.===Part Name	Part No.
D 951 Diode	UDZ20(B)	R 854	RS1/10S620J
D 952 Diode	UDZ20(B)	R 855	RS1/10S302J
D 953 Diode	UDZ20(B)	R 856	RS1/10S302J
L 901 Choke Coil 0.3mA	CTH1079	R 857	RS1/10S1R0J
		R 858	RS1/10S1R0J
<b>RESISTORS</b>			
R 501	RS1/10S153J	R 901	RS1/10S473J
R 502	RS1/10S153J	R 902	RS1/10S104J
R 503	RS1/10S333J	R 903	RS1/8S222J
R 504	RS1/10S333J	R 904	RS1/10S473J
R 505	RS1/10S0R0J	R 905	RS1/10S104J
R 506	RS1/10S0R0J	R 906	RS1/10S153J
R 509	RS1/10S153J	R 907	RS1/10S6R8J
R 510	RS1/10S153J	R 908	RS1/10S102J
R 511	RS1/10S333J	R 909	RS1/10S102J
R 512	RS1/10S333J	R 910	RS1/10S472J
R 513	RS1/10S0R0J	R 911	RS1/10S473J
R 514	RS1/10S0R0J	R 912	RS1/10S103J
R 517	RS1/10S162J	R 913	RS1/4S331J
R 518	RS1/10S162J	R 914	RS1/10S113J
R 519	RS1/10S162J	R 915	RS1/10S182J
R 520	RS1/10S162J	R 916	RS1/10S332J
R 701	RS1/10S473J	R 917	RS1/10S683J
R 702	RS1/10S473J	R 918	RS1/10S472J
R 703	RS1/10S104J	R 919	RS1/10S103J
R 704	RS1/10S104J	R 920	RS1/8S102J
R 705	RS1/10S202J	R 921	RS1/10S103J
R 706	RS1/10S202J	R 922	RS1/10S472J
R 707	RS1/10S152J	R 924	RS1/8S222J
R 708	RS1/10S152J	R 926	RS1/10S103J
R 721	RS1/10S0R0J	R 927	RS1/10S472J
R 722	RS1/10S0R0J	R 929	RS1/4S331J
R 723	RS1/10S182J	R 930	RS1/8S102J
R 724	RS1/10S182J	R 931	RS1/10S472J
R 725	RS1/10S123J	R 951	RS1/10S101J
R 726	RS1/10S123J	R 952	RS1/10S101J
R 727	RS1/10S103J	R 953	RS1/10S2R2J
R 728	RS1/10S103J	R 954	RS1/10S2R2J
R 751	RS1/10S432J	R 955	RS1/10S2R2J
R 752	RS1/10S162J	R 956	RS1/10S2R2J
R 761	RS1/10S102J	R 957	RS1/10S101J
R 762	RS1/10S103J	R 958	RS1/10S0R0J
R 763	RS1/10S103J	R 961	RS1/10S102J
R 764	RS1/10S472J	R 962	RS1/10S102J
R 771	RS1/10S102J	R 963	RS1/10S103J
R 772	RS1/10S102J	R 964	RS1/10S103J
R 773	RS1/10S223J	<b>CAPACITORS</b>	
R 774	RS1/10S223J	C 501	CEJANP1R0M50
R 775	RS1/10S103J	C 502	CEJANP1R0M50
R 776	RS1/10S472J	C 505	CKSQYB473K50
R 777 (GM-8606ZT/E)	RS1/10S0R0J	C 506	CEJANP1R0M50
		C 507	CEJANP1R0M50
R 778 (GM-8506ZT/E)	RS1/10S0R0J	C 510	CKSQYB473K50
R 779	RS1/10S472J	C 701	CEANL2R2M50
R 780	RS1/10S472J	C 702	CEANL2R2M50
R 801	RS1/10S2R2J	C 703	CCSQCH561J50
R 802	RS1/10S2R2J	C 704	CCSQCH561J50
R 803	RS1/10S2R2J	C 705	CKSQYB473K50
R 804	RS1/10S2R2J	C 706	CKSQYB473K50
R 805	RS1/10S272J	C 707	CKSQYB224K16
R 806	RS1/10S272J	C 723	CCSQCH471J50
R 807	RS1/10S221J	C 724	CCSQCH471J50
R 821	RS1/10S243J	C 725	CKSQYB473K50
R 822	RS1/10S224J	C 752	CKSQYB224K16
R 851	RS1/10S303J	C 753	CKSQYB473K50
R 852	RS1/10S102J	C 761	CEANL4R7M50
R 853	RS1/10S620J	C 762	CEJA100M16


**GM-8506ZT,8506ZT-91,8606ZT,8606ZT-91**

====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
C 773	CEJA100M16	C 976	CKSQYB102K50
C 774	CEJA2R2M50	C 981	CKSQYB102K50
C 801	CEANLR47M50	C 982	CKSQYB102K50
C 802	CEANLR47M50	C 983	CKSQYB102K50
C 803	CEANL4R7M50	C 984	CKSQYB102K50
C 804	CEANL4R7M50	C 989	CKSQYB102K50
C 805	CKSQYB102K50		
C 806	CKSQYB102K50		
C 807	CFTNA154J50		
C 808	CFTNA154J50		
C 809	CFTNA154J50		
C 810	CFTNA154J50		
C 811	CEAS221M16		
C 821 1µF/50V	CCH1296		
C 822 1µF/50V	CCH1296		
C 823	CEJAR47M50		
C 824	CEJAR22M50		
C 825	CEJA1R0M50		
C 826	CEJA2R2M50		
C 827	CEJA470M16		
C 851	CEANL1R0M50		
C 852	CEANL101M16		
C 853	CEANL101M16		
C 854	CEJA470M16		
C 855	CEAS221M16		
C 856	CEAS221M16		
C 857	CFTNA473J50		
C 858	CFTNA473J50		
C 859	CEAS471M16		
C 860	CQMA102J50		
C 901 3300µF/16V	CCH1163		
C 902	CEJA1R0M50		
C 903	CKSQYB473K50		
C 904	CEAS221M16		
C 906	CEHAR010M50		
C 907	CEHAR100M16		
C 908	CKSQYB473K50		
C 909	CEAS101M16		
C 910	CKSQYB473K50		
C 911	CEJA1R0M50		
C 912	CEJA100M16		
C 913	CKSQYB473K50		
C 914	CEAS221M16		
C 915	CKSQYB473K50		
C 916	CEJA1R0M50		
C 917	CKSQYB473K50		
C 918	CKSQYB473K50		
C 919	CKSQYB473K50		
C 920	CEAS471M16		
C 951	CKSQYB221K50		
C 952	CKSQYB221K50		
C 953	CKSQYB224K16		
C 954	CKSQYB224K16		
C 955	CKSQYB224K16		
C 956	CKSQYB224K16		
C 957	CKSQYB102K50		
C 958	CKSQYB102K50		
C 963	CKSQYB102K50		
C 964	CKSQYB102K50		
C 965	CKSQYB102K50		
C 966	CKSQYB102K50		
C 967	CKSQYB102K50		
C 968	CKSQYB102K50		
C 969	CKSQYB102K50		
C 970	CKSQYB102K50		
C 971	CKSYB102K50		
C 972	CKSYB102K50		
C 973	CKSYB102K50		
C 974	CKSYB102K50		
C 975	CKSQYB221K50		




## 6. ADJUSTMENT


### ● Connection Diagram

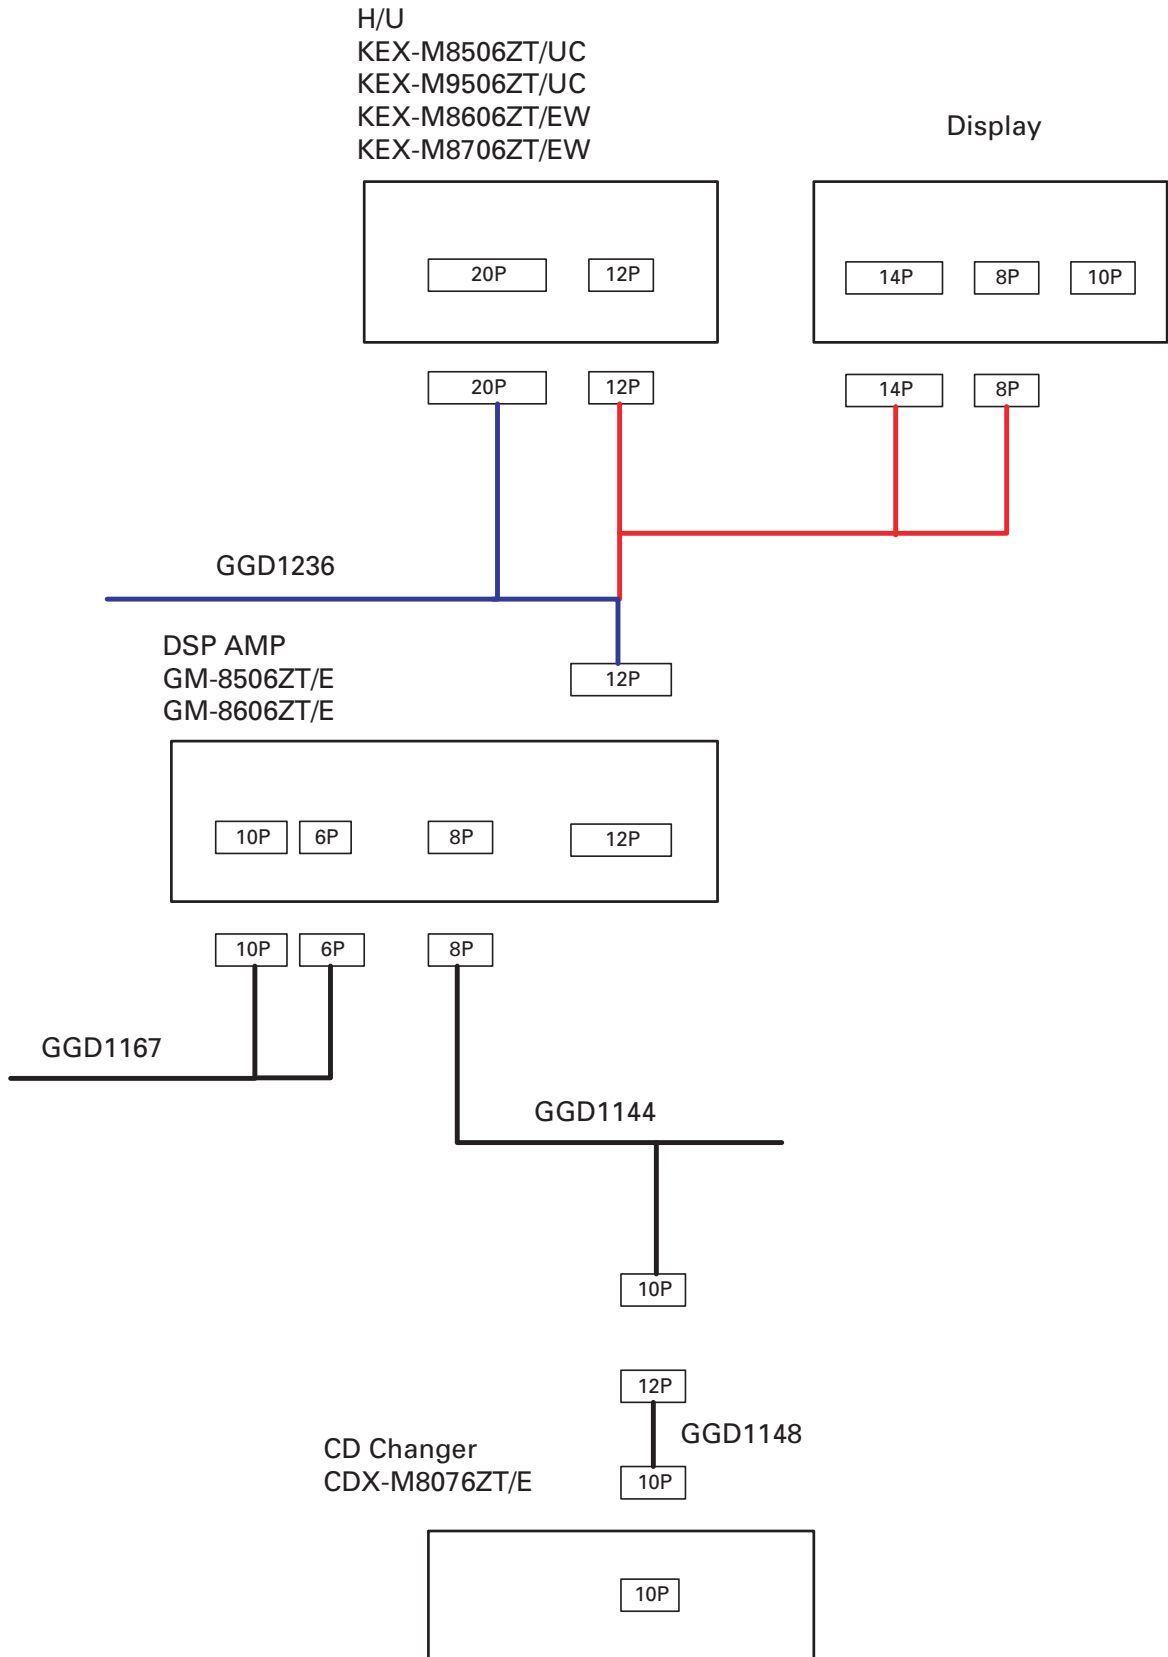

H/U  
KEX-M8406ZT/UC  
KEX-M9406ZT/UC  
KEX-M9006ZT/EW  
KEX-M9106ZT/EW

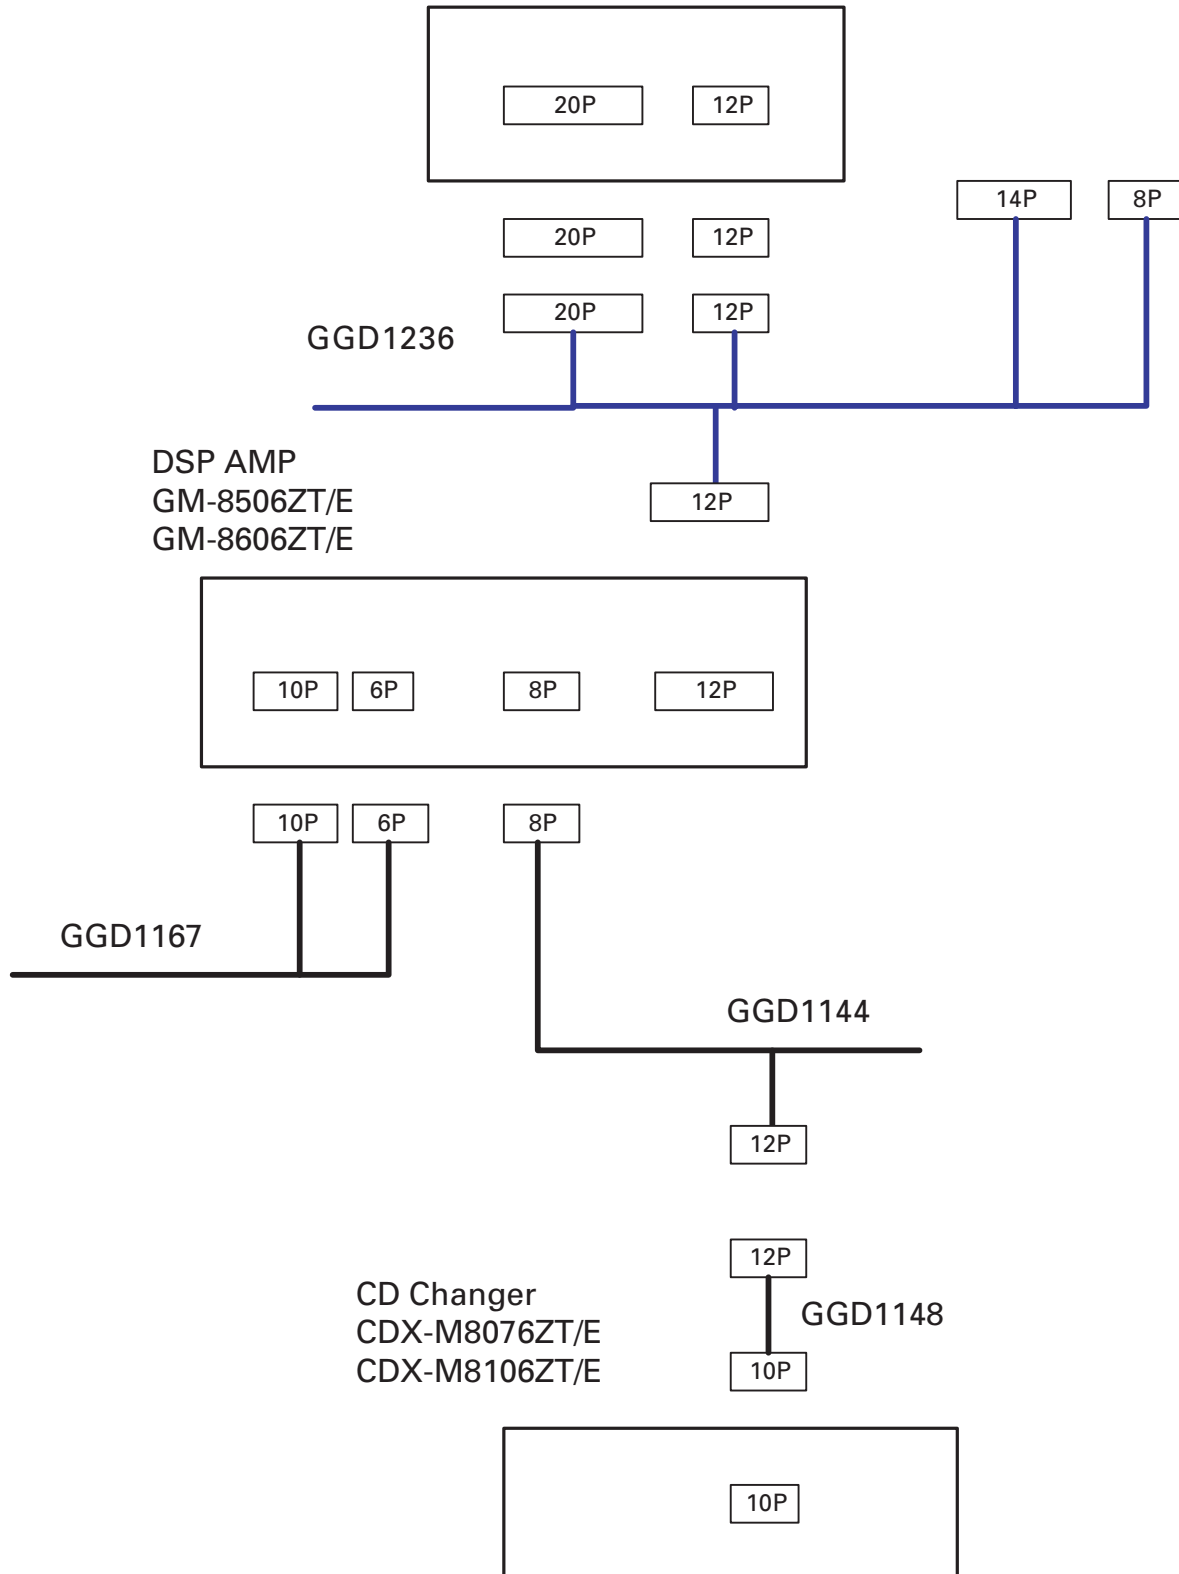

● Jig

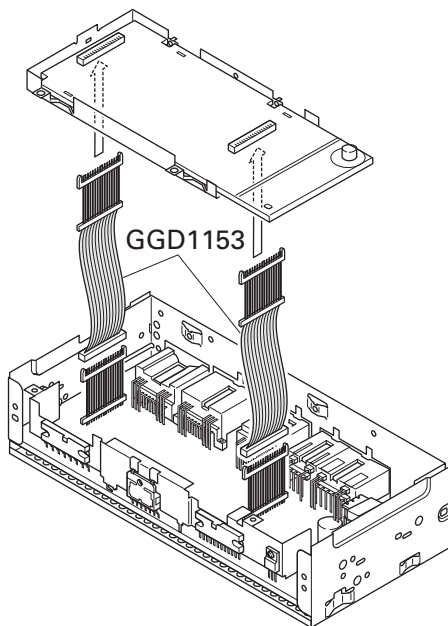



**ASL SECTION**

Preset conditions

1. Set VR601 and VR602 around the center of the adjustable range.
2. Ground pins 3 and 16 of IC601.

Step No.	Input (MIC)	Output (Pin 22)	Adjustment		
			Adj.point	Spec.	Conditions
1	By using an oscillator, apply a sine wave of 7Hz/2.5mV to the MIC terminal (+) via a 600-ohm resistor.	Observe the output at Pin 22 on a DC voltmeter (pointer-type).	VR602	1.2±0.3V	Pin 16:Ground Pin 3:Open Wait for 20 seconds.
2	By using an oscillator, apply a sine wave of 7Hz/79mV to the MIC terminal (+) via a 600-ohm resistor.	Observe the output at Pin 22 on a digital multimeter.	VR601	4.6±0.1V	Pin 16:Ground Pin 3:Ground
3	Repeat Steps 1 and 2 until both adjustments satisfy the specifications.				
4	By using the jig(CAN-906,CAN-912), apply a sine wave of 100dB-SPL voltage directly to the MIC terminal.	Observe the output at Pin 22 on a digital multimeter.	VR602	3.3±0.1V	Pin 16:Ground Pin 3:Open
5	End				

To connect the Amp unit and the DSP unit, use Jig GGD1153.

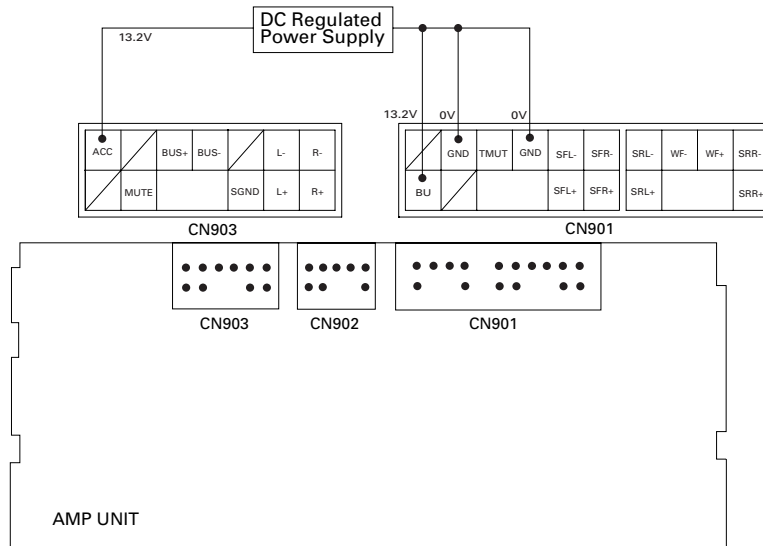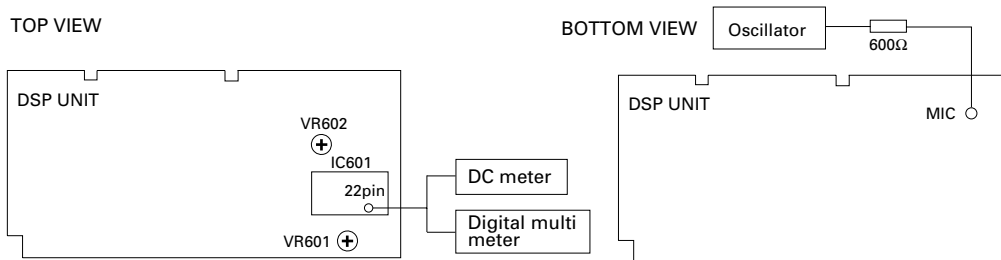

## 7. GENERAL INFORMATION

### 7.1 DIAGNOSIS

#### 7.1.1 DISASSEMBLY

##### ● Removing the Case(Fig.1)

- 1.Remove the Seal marked with arrows.
- 2.Remove the seven screws A, seven screws B, and then remove the Case and Heat Sink.

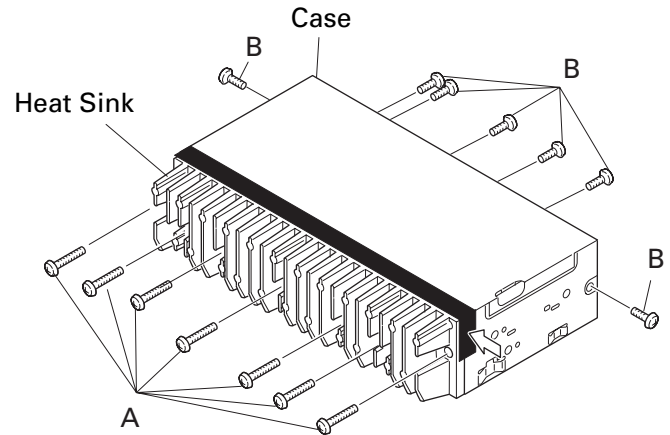


Fig. 1

##### ● Removing the DSP Unit(Fig.2)

- 1.Remove the three screws C, and remove the upper Shield.
- 2.Remove the screw D.
- 3.Disconnect connectors CN51 and CN52 from CN905 and CN906 respectively by pulling them upwards.
- 4.Release the DSP Unit from four stoppers marked with arrows and remove the DSP Unit.


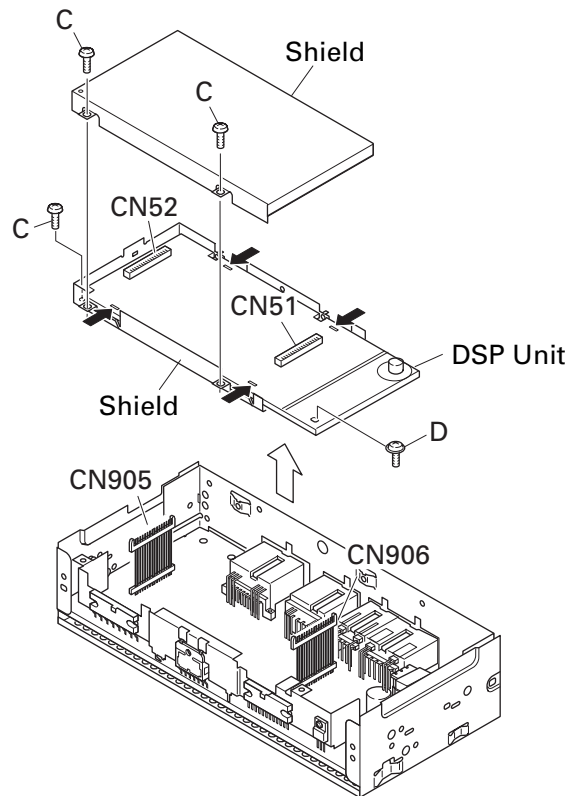


Fig.2

### 7.1.2 CONNECTOR FUNCTION DESCRIPTION

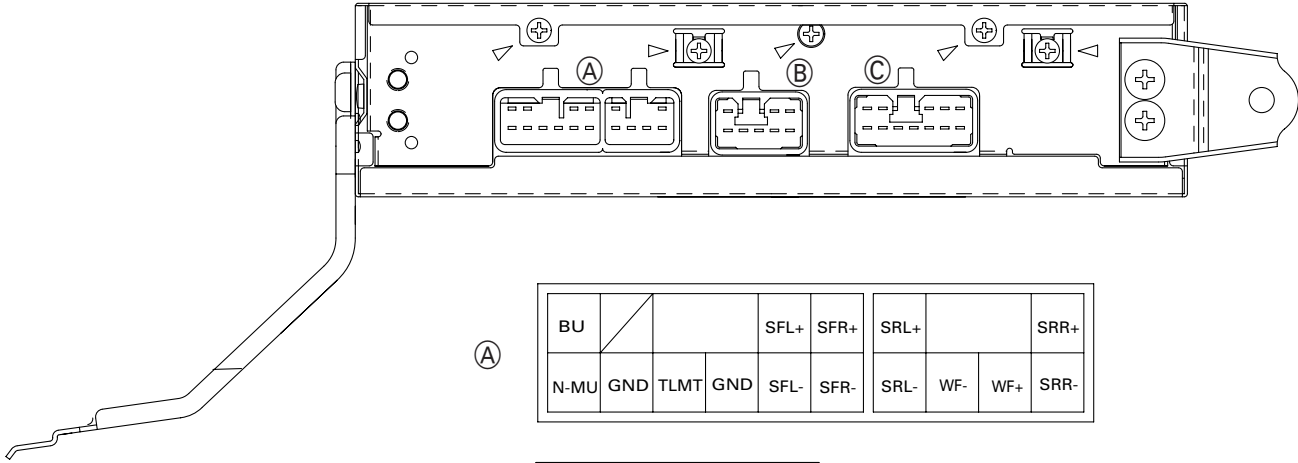

(A)

BU				SFL+	SFR+	SRL+			SRR+
N-MU	GND	TLMT	GND	SFL-	SFR-	SRL-	WF-	WF+	SRR-

(B)


CDL+			CDR+	TXM+
CDL-	SGND	CDMT	CDR-	TXM-

(C)

	MUTE			SGND	L+	R+
ACC		BUS+	BUS-		L-	R-

7.2 IC


PD2055A

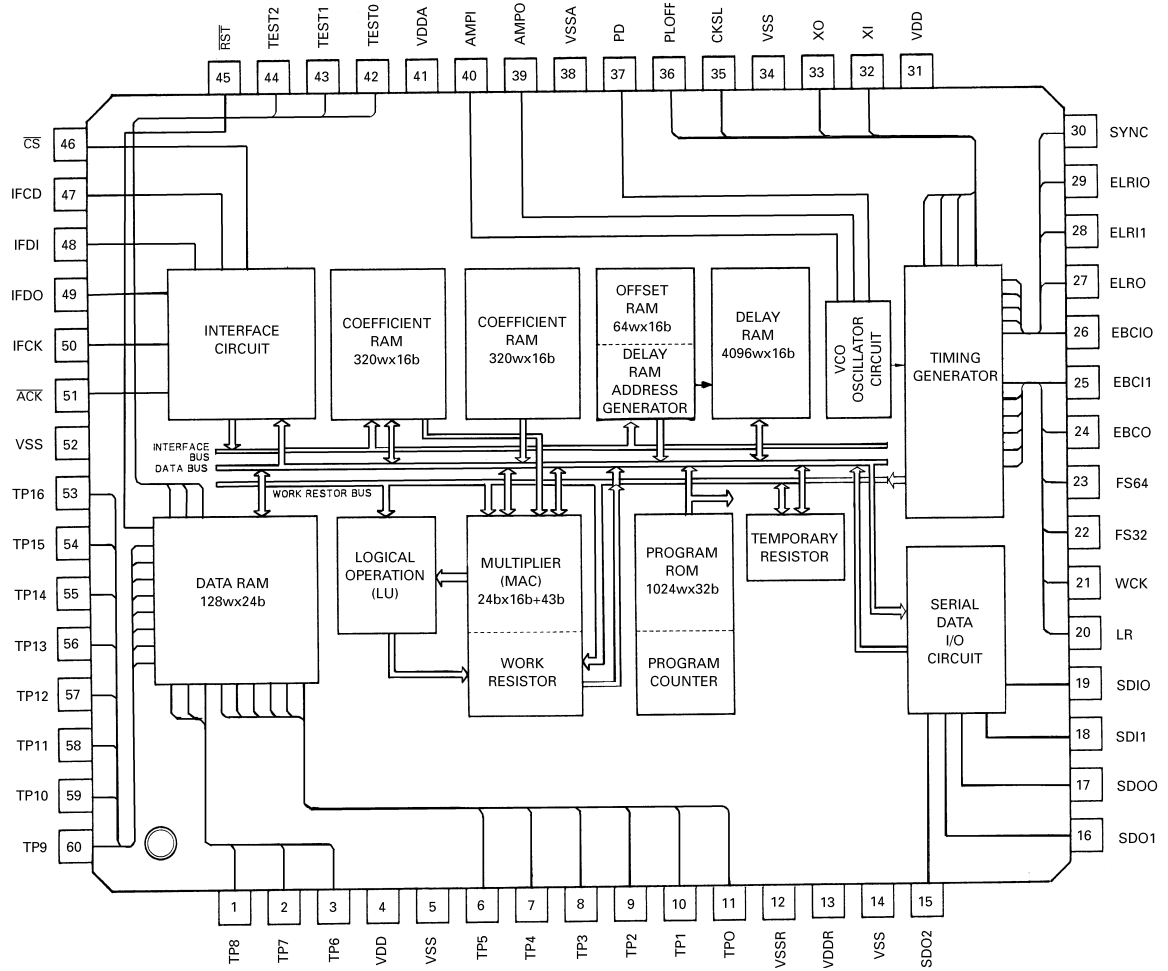

● Pin Functions (PD5584B)

Pin No.	Pin Name	I/O	Format	Function and Operation
1	ASLIN	I		Difference of noise and signal input
2	TLMT	I		TEL mute input
3	AVCIN	I		AVC-LAN data input
4	AVCOUT	O	C	AVC-LAN data output
5	AVCPW	O	C	AVC-LAN driver power supply output
6	DSPACK	I		DSP-IC ACK input
7	DSPCK	O	C	DSP serial clock output
8	DSPDT	O	C	DSP data output
9	DSPIN	I		DSP serial data input
10	DSPCD	O		DSP command/data output
11	DSPCS1	O	C	TC9332F chip select 1
12	DSPCS2	O	C	TC9332F chip select 2
13	PEE	O	C	Beep tone output
14	ASENS	I		ACC power sense input
15	BSEN	I		Back up power sense input
16	SYSPW	O	C	System power supply control output
17	TESTIN	I		Test program start input
18	TSEN	I		Test enable input
19	TSCK	O	C	Test program clock output
20	TSO	O	C	Test program serial output
21	TSIN	I		Test data input
22	NC			Not used
23	MUTE	O	C	Mute output
24	SMUTEIN	I		System mute input
25	RESET	I		Reset input
26,27	NC			Not used
28	XIN	I		Crystal oscillating element connection pin
29	XOUT	O		Crystal oscillating element connection pin
30	VSS			GND
31	NAVMUT	O	C	Navigation mute output
32-61	NC			Not used
62	MODEL0	I		Model select input
63	DSPMUTE	O	C	DSP mute output
64-68	NC			Not used
69	DSPERR2	I		DSP error detect input 2
70	DSPERR1	I		DSP error detect input 1
71	VCC			5V
72	VREF	I		A/D converter reference voltage input
73	AVSS	I		A/D GND
74	VCK1	O	C	Clock output for electronic volume
75	VCK2	O	C	Clock output electronic volume 2
76	VDT	O	C	Data output for electronic volume
77	VST	O	C	Strobe pulse output for electronic volume
78	NC			Not used
79	DPD2	O	C	A/D converter offset calibration output
80	DSPRST	O	C	DSP reset control

\*PD5584B

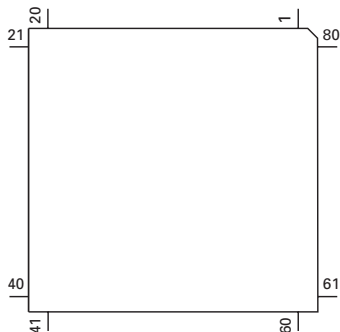


Format	Meaning
C	C MOS

IC's marked by\* are MOS type.  
Be careful in handling them because they are very liable to be damaged by electrostatic induction.




### 7.3 EXPLANATION


#### 7.3.1 OPERATIONAL FLOW CHART

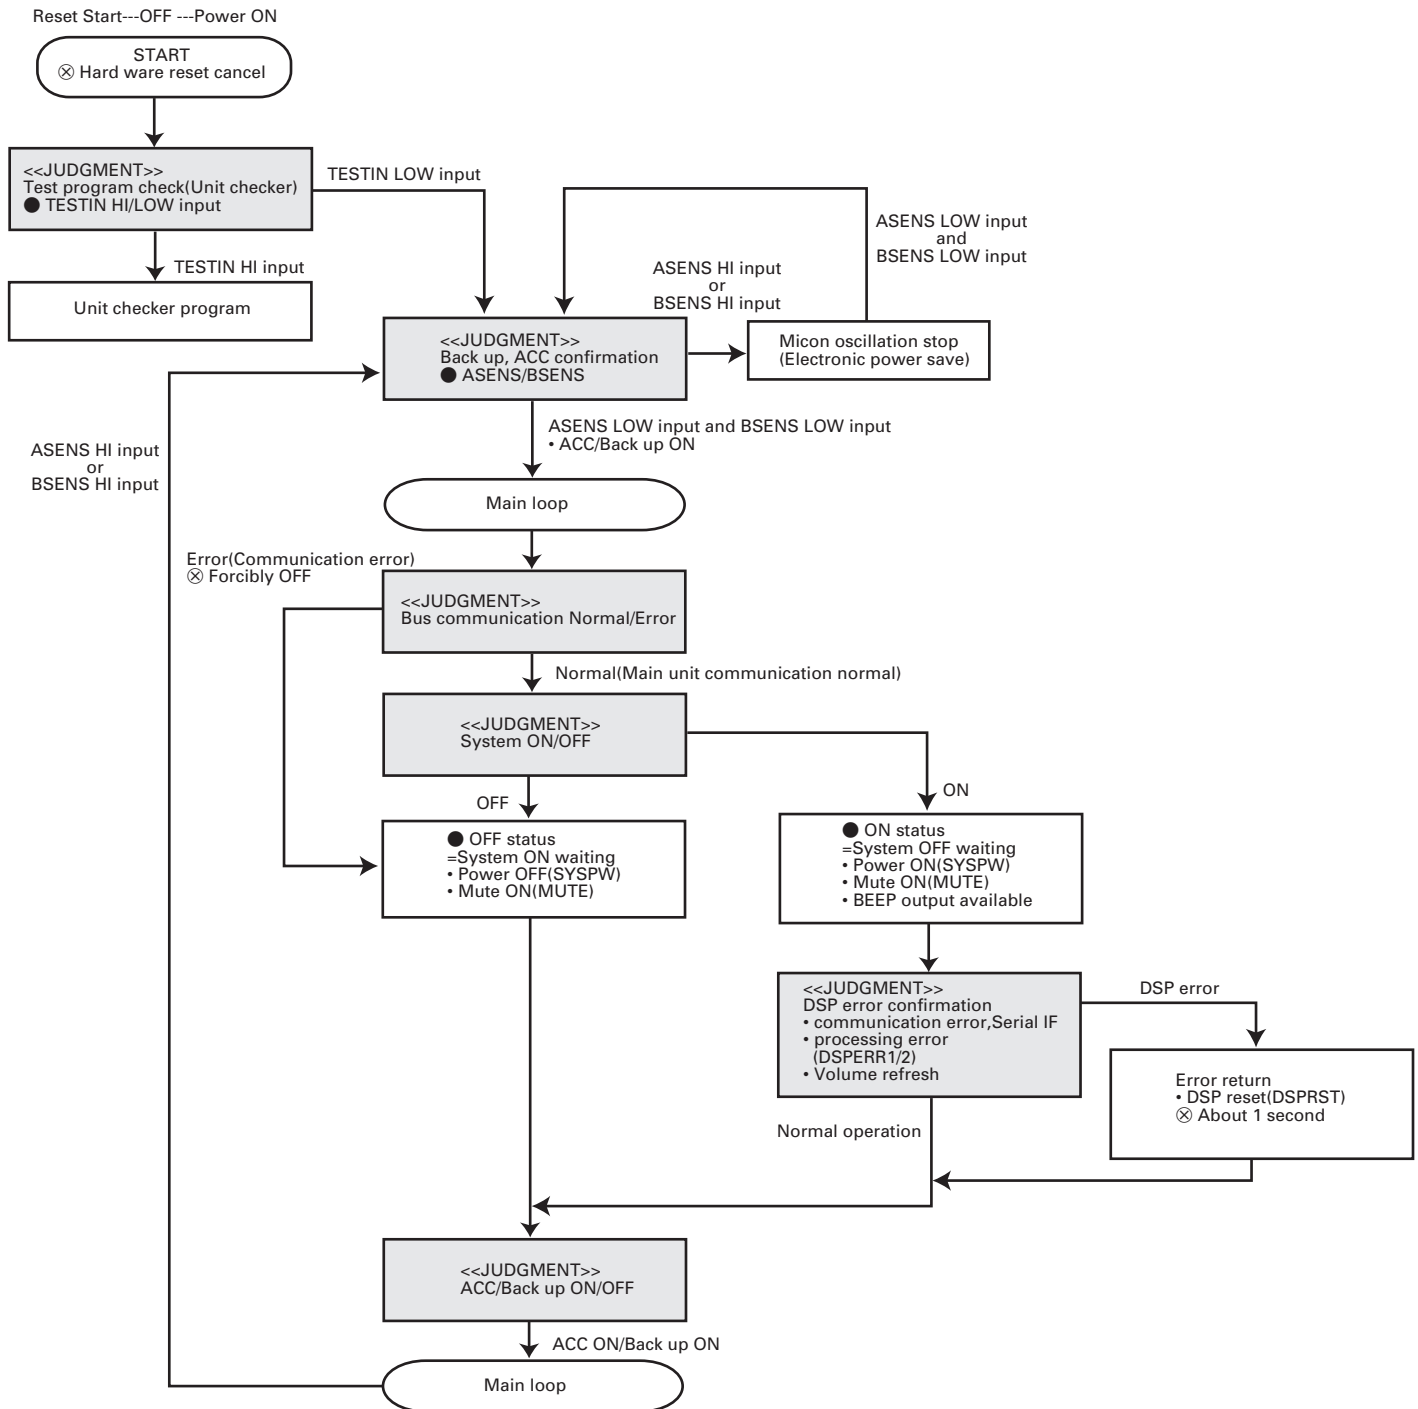


● DSP error check (Normal)

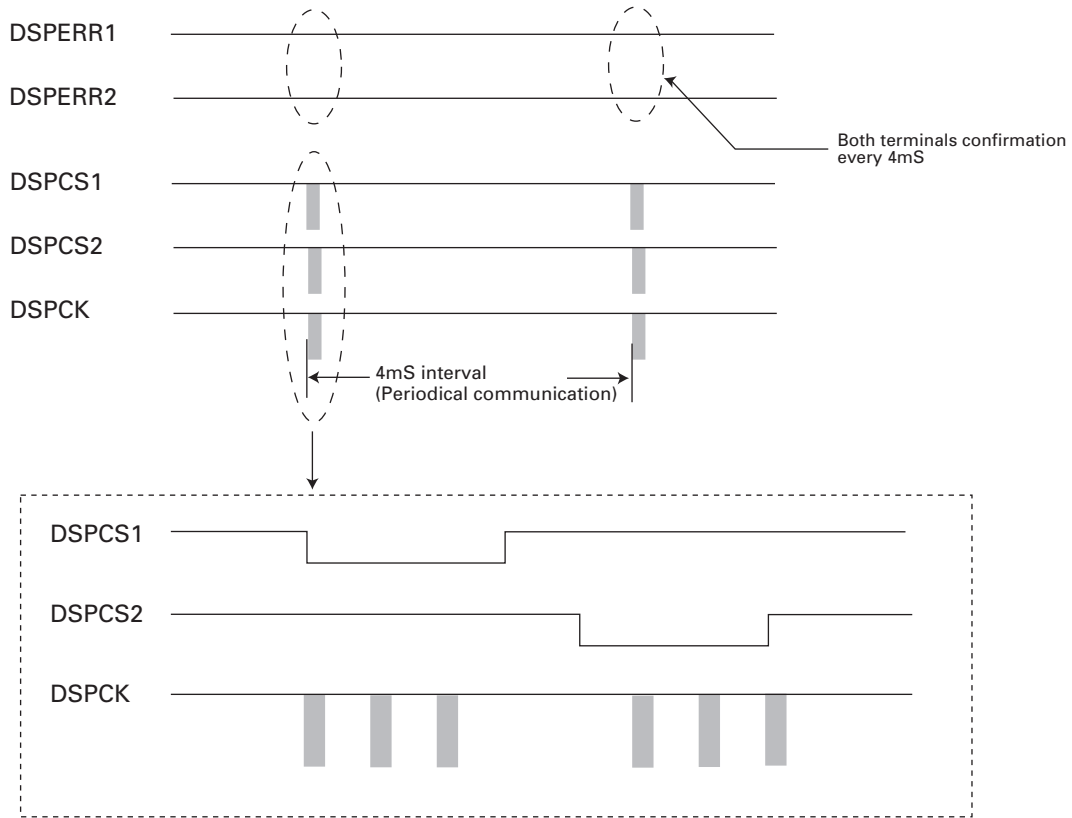

● Electronic volume refresh (Normal)

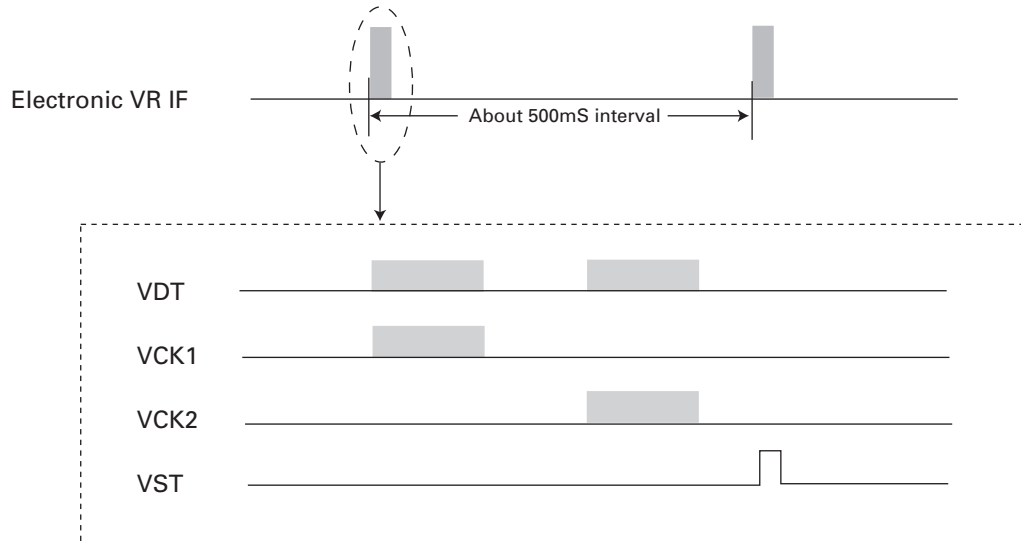

● DSP error check ---Error continuation





### 7.3.3 Service Mode For DSP Amplifier

#### 1. Outline

This specifications details operation according to our suggestion for answering complaint about sound quality in audio systems. It is based on an assumption that a dealer or service person operate the product to solve the problem.

#### 2. Sound Quality Service Mode Function

Sound Quality Service mode has the following functions:

- ① Frequency characteristics adjustment : Specifies two points (frequency/dB value) of equalizer (EQ) to adjust frequency characteristics. Also adjusts attenuation.
- ② Level adjustment : Adjusts sound levels of the front and rear speakers and woofer.

#### 3. Activating Sound Quality Service Mode


Use the following steps to activate Sound Quality Service mode.

- ① Confirm that ACC is ON, then activate Dialogue mode.  
(Operate according to the method of activation of diagnosis mode specified for the system.)
- ② Press the [AM] button of H/U in the MENU screen in Diagnosis mode .


The system enters Sound Quality mode. Then, the system beeps one time and displays "AUDIO." You cannot return to Dialogue mode by pressing a button from Sound Quality Service mode.

#### 4. Canceling Sound Quality Service mode

Setting ACC to OFF cancels Sound Quality Service mode. After that, the system will maintain sound quality set in Sound Quality Service mode.

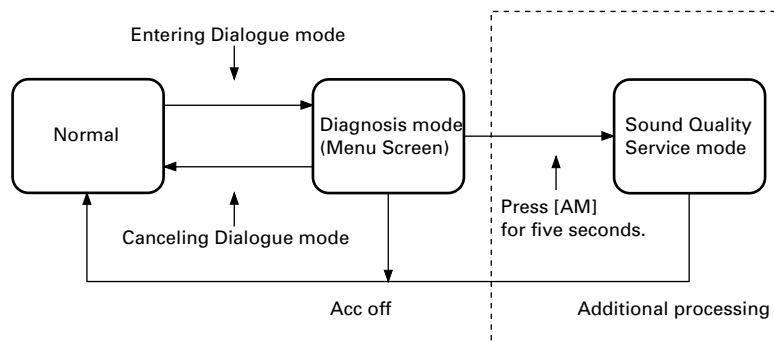

Flowchart of activation/cancellation of Sound Quality Service mode

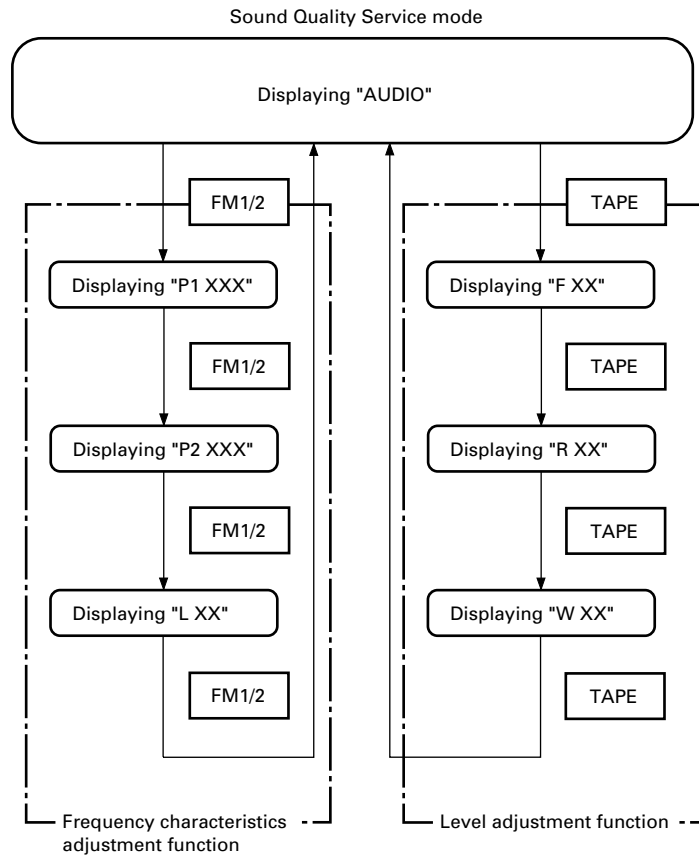

Flowchart of displays in Sound Quality Adjustment mode

## 5. Details

### ① Frequency characteristics adjustment function

- The system changes submodes cyclically every time the [FM1/2] button is pressed when "AUDIO" is displayed.

Set EQ Point 1 → Set EQ Point 2 → Set attenuation → "AUDIO"

#### • Set EQ Point 1

The system displays "P1" and EQ management number. The EQ management number ascends/descends every time the UP/DOWN button is pressed. The EQ management number consists of three digits (000 to 286). Initial value is 000 (no setting).

#### • Set EQ Point 2

The system displays "P2" and EQ management number. The EQ management number ascends/descends every time the UP/DOWN button is pressed. The EQ management number consists of three digits (000 to 176). Initial value is 000 (no setting).

#### • Set attenuation

The system displays "L" and attenuation value. Use the UP/DOWN button to change attenuation within a range from 0 to -20 dB at increments of 1 dB. Attenuation value is shown in two digits from 00 to 20 (20 = -20 dB). Initial value is 00 (no setting).

### ② level adjustment function

- The system changes submodes cyclically every time the [TAPE] button is pressed when "AUDIO" is displayed.

Set front → Set rear → Set woofer → "AUDIO"

#### • Set front

The system displays "F" and level value. Use the UP/DOWN button to change level value within a range from 0 to -80 dB at increments of 1 dB. Level value is shown in two digits from 00 to 80 (80 = -80 dB). Initial value is 00 (no setting).

#### • Set rear

The system displays "R" and level value. Use the UP/DOWN button to change level value within a range from 0 to -80 dB at increments of 1 dB. Level value is shown in two digits from 00 to 80 (80 = -80 dB). Initial value is 00 (no setting).

#### • Set woofer

The system displays "W" and level value. Use the UP/DOWN button to change level value within a range from 0 to -80 dB at increments of 1 dB. Level value is shown in two digits from 00 to 80 (80 = -80 dB). Initial value is 00 (no setting).

#### Notes:

- 1) Pressing the TAPE button during adjustment of frequency characteristics is invalid. Pressing the [FM1/2] button during level adjustment is invalid.
- 2) The UP/DOWN button mentioned above means the [SEEK] key.



---

**PIONEER CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan  
**PIONEER ELECTRONICS SERVICE INC.** P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.  
**PIONEER EUROPE NV** Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium  
**PIONEER ELECTRONICS ASIACENTRE PTE.LTD.** 253 Alexandra Road, #04-01, Singapore 159936

© **PIONEER CORPORATION 2000**